

Tillett and Hague Technology Guidance and Control System

Reference manual for implement manufacturers Spot Spray



Copyright notice:

The computer vision guidance and control software and associated configuration tools are copyright Tillett and Hague Technology Ltd.

This product also makes use of public domain operating system code. Under the terms of the GNU general public licence and/or the University of California, Berkeley (UCB) license copies of the public domain software are available on request.

Disclaimer:

Considerable effort has gone into making Tillett and Hague guidance and control systems reliable under normal commercial conditions. However, it is possible that under some adverse circumstances the guidance system will be unable to operate reliably. We recommend that it is made clear to operator's that it is their responsibility to ensure that the machine is operating in a satisfactory manner. Should a fault develop, or excessive crop damage occur, operation should cease, and users should be encouraged to contact their dealer or implement manufacturer for advice.

Contents:

- 1. Introduction to this manual**
- 2. Product description**
- 3. System overview**
- 4. Safety**
- 5. Assembly**
 - 5.1 General assembly**
 - Step 1 – Mounting the implement module**
 - Step 2 – Mounting a side shift or steering position sensor**
 - Step 3 – Odometry**
 - Step 4 – Mounting the lift proximity sensor**
 - Step 5 – Mounting the camera(s)**
 - Step 6 – Connecting hydraulic valve solenoids and sensors**
 - Step 7 – Mounting the console**
 - Step 8 – Hitching to the tractor**
 - Step 9 – Reducing lateral movement**
 - Step 10 – Levelling the implement**
 - Step 11 – Connecting the implement cable to the console**
 - Step 12 – Connecting the power supply cable**
 - Step 13 – Connecting the ISOBUS 12V power and data cable**
 - Step 14 – Connect the hydraulic supply hoses**
 - Step 15 - Activating night lights or the ON while moving output**
 - 5.2 – CANbus and accessories**
 - 5.2.1 Nozzles**
 - Step 1 – Mounting nozzles**
 - Step 2 – Connecting nozzle spray system**
 - Step 3 – Mounting nozzle board**
 - Step 4 – Wiring nozzle outputs**
 - Step 5 – Connecting nozzle board to implement module**
 - 5.2.2 Condition Monitoring**
 - Spray Pressure Sensors**
 - 5.2.3 Opto-isolated input/output board**
 - Step 1 – Mounting input/output board**
 - Step 2 – Wiring multiple inputs to board**
 - Step 3 – Wiring supply voltage and output device**
- 6. User screens**
 - 6.1 – Working Screen**
 - 6.2 – Setup Screen**
 - 6.3 – Advanced settings & diagnostics screen**
- 7. Initial testing in the factory/yard**
 - Step 1 – Starting the tractor and console**
 - Step 2 – Checking hydraulic steer operation**
 - Step 3 – Checking hydraulic levelling operation**

- Step 4 – Nozzle start-up check**
- Step 5 – Night light operation check**
- Step 6 – Camera setup by measurement**

8. Getting to work in the field

- Step 1 – Selecting configuration and crop size**
- Step 2 – Checking camera height and inclination in the field**
- Step 3 – Initial running and adjusting camera lateral position**
- Step 4 – Running with nozzles**
- Step 5 – Neutralising forward and backward fine offsets**
- Step 6 – What to do if none of the available configurations are appropriate**

9. Notes on operation with a correctly set up machine

10. Configuration Editor

11. Service menu tools (including USB Update and backup procedure)

12. Maintenance and storage

13. Troubleshooting

- LED blink codes**
- Console fault codes**
- Flow charts**

Annex

- **Hydraulic Systems**
- **Spot Sprayer Schematics**
- **Microcontroller board connections and dip switch settings**

1. Introduction to this manual

This manual has been written to provide implement manufacturers incorporating Tillet and Hague guidance and control systems into their products with the technical information they need.

This manual is not intended for use by implement operators. However, Tillet and Hague Technology Ltd do give permission for extracts from this manual to be used by their customers in the production of implement operator manuals. Tillet and Hague also produce a simplified spot spraying operators guide.

It is the responsibility of the implement manufacturer to ensure that all implements are sold with the information necessary for safe and effective operation. Tillet and Hague Technology Ltd will on request provide reasonable assistance in the development of English language operator manuals and other training material.


2. Product Description

This vision guidance system analyses data from digital cameras to identify crop rows. Rows are tracked over successive images and their position used to steer an implement laterally relative to those crop rows. When running in spot spray mode individual weed plants are also identified and spray nozzles can be synchronised with those weeds as they pass under the implement. It is also possible to spot spray weeds when no rows are visible.

Tillett and Hague's software has been refined over 20 years of commercial use and development and has to date been used to guide over 3000 vision guided implements around the world. The very latest version of this software has been loaded onto a new hardware system incorporating touch screen technology with a bright high contrast display. This provides operators with highly visible user-friendly information including live images with graphical overlay. Highly efficient processors and CMOS imagers produce world leading row tracking performance from a robust purpose designed package that is simple and cost effective to install.

There are 4 main components to the system.

- A video camera **(2)** or cameras **(2/3/4)** looking ahead at the area of crop to be treated.
- An implement module **(5)** to control steering and levelling hydraulic valves **(6)**
- A cab mounted console **(1)** to display user information including a live video image or images.
- Spot spray nozzles **(7)** that can be individually activated.

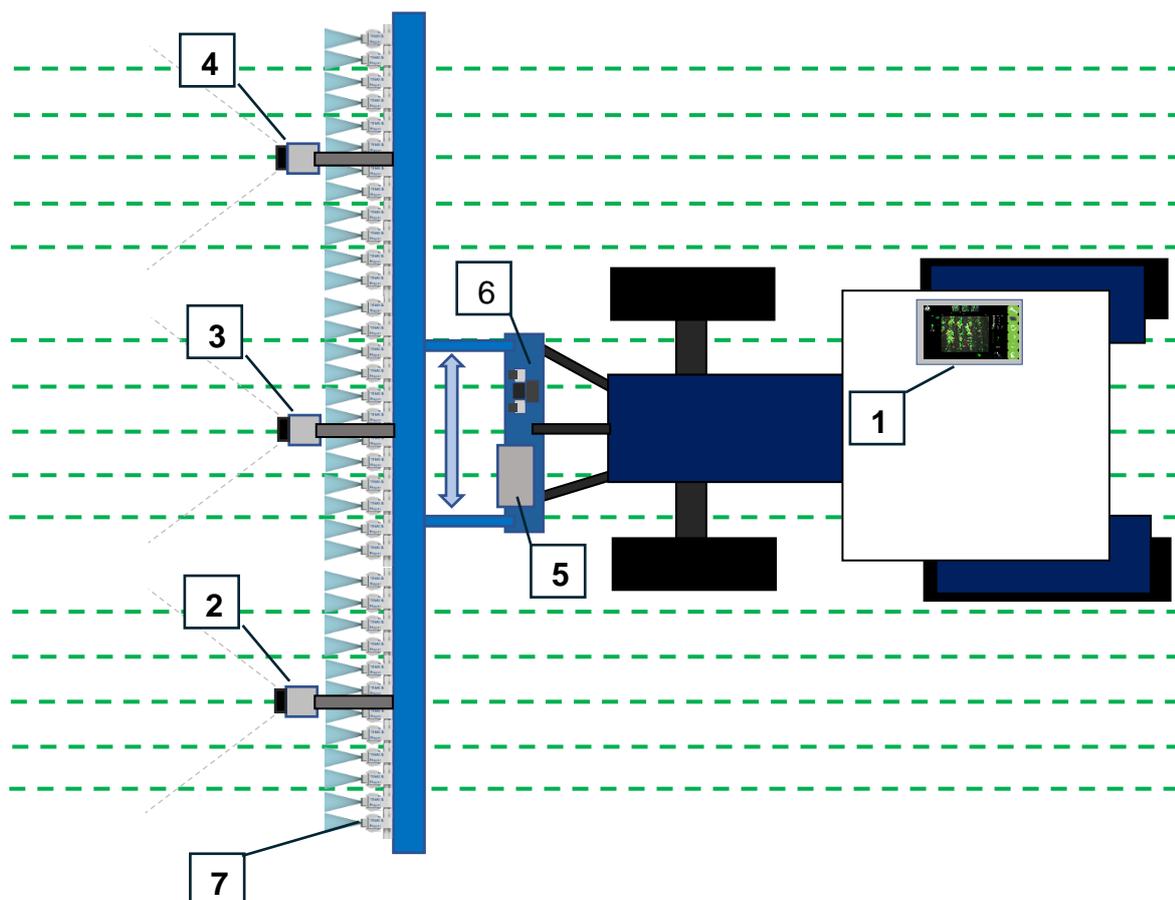


Schematic of a front mounted spot sprayer machine

With appropriate hardware, it is also possible to configure machines to conducted inter-row treatments.

The system uses colour cameras to pick out green crop and weed from backgrounds containing soil, stones and trash. (Systems to work in crops of other colours are also available.) Crop plants are located within a scene by matching a template corresponding to the known planting pattern with crop plants as they appear in the camera image. That image is displayed live on the console with crop rows overlaid with green lines.

Matching a template to a broad area of crop improves row tracking reliability especially when parts of rows are not present or partially obscured by weeds. Computer algorithms decide which plants are weeds and which are crop based on a combination of factors including position relative to crop rows, size, shape and colour. Estimates of weed position are then used to synchronise the switching of individual spot spray nozzles as they pass over weeds.

The working screen displayed on the console provides a graphic display of machine status. Graphical icons around the outside of the screen indicate important machine parameters and warnings. At the centre is a live video image allowing the operator to check for a good match between template and actual crop geometry, which is important for accurate row following, and to monitor the quality of weed tracking.

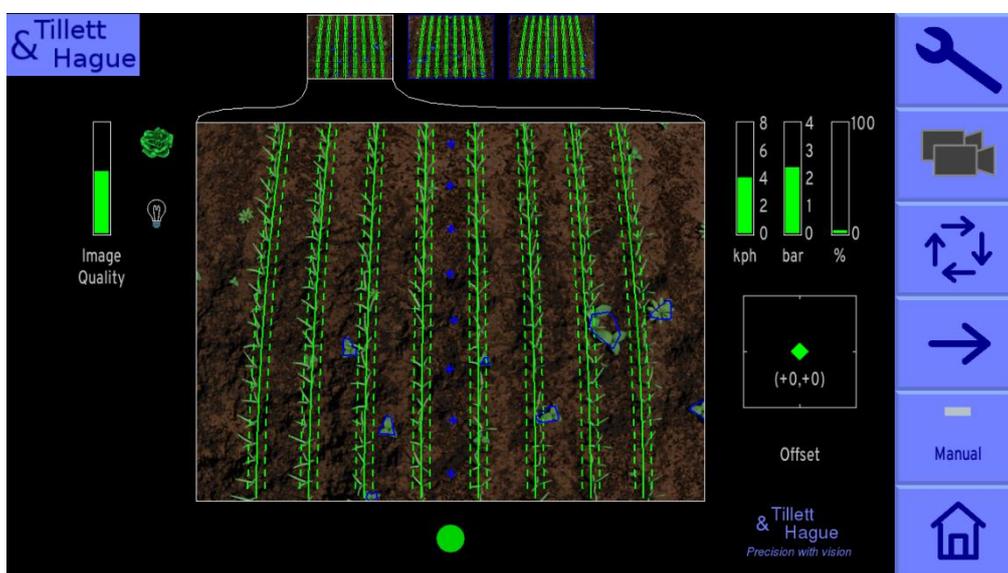

Typical working screen for a three-camera system

Machines with multiple cameras have live thumbnail video images across the top of the display. Users can toggle between each of these to select which is displayed full size.

12 V Electrical system

The system is designed to operate from a tractor nominal 12V supply fused at no more than 20A for short circuit protection. The power consumption for electronic parts including the console is only 25W, but solenoid valves driven by the system will increase that substantially when they are activated. The system is tolerant to voltage surges up to 27 V and will continue to operate for short periods down to 6V providing continuity during tractor starts.


Hydraulic system

The hydraulic requirements of a spot sprayer are similar to that of an inter-row machine and the reader is referred to the inter-row reference manual for system requirements, although extra hydraulic functionality such as levelling may need to be considered.


Spray system

Appropriate spray tank, pump and filter system must be provided.

3. System overview - with optional additional equipment (broken lines)

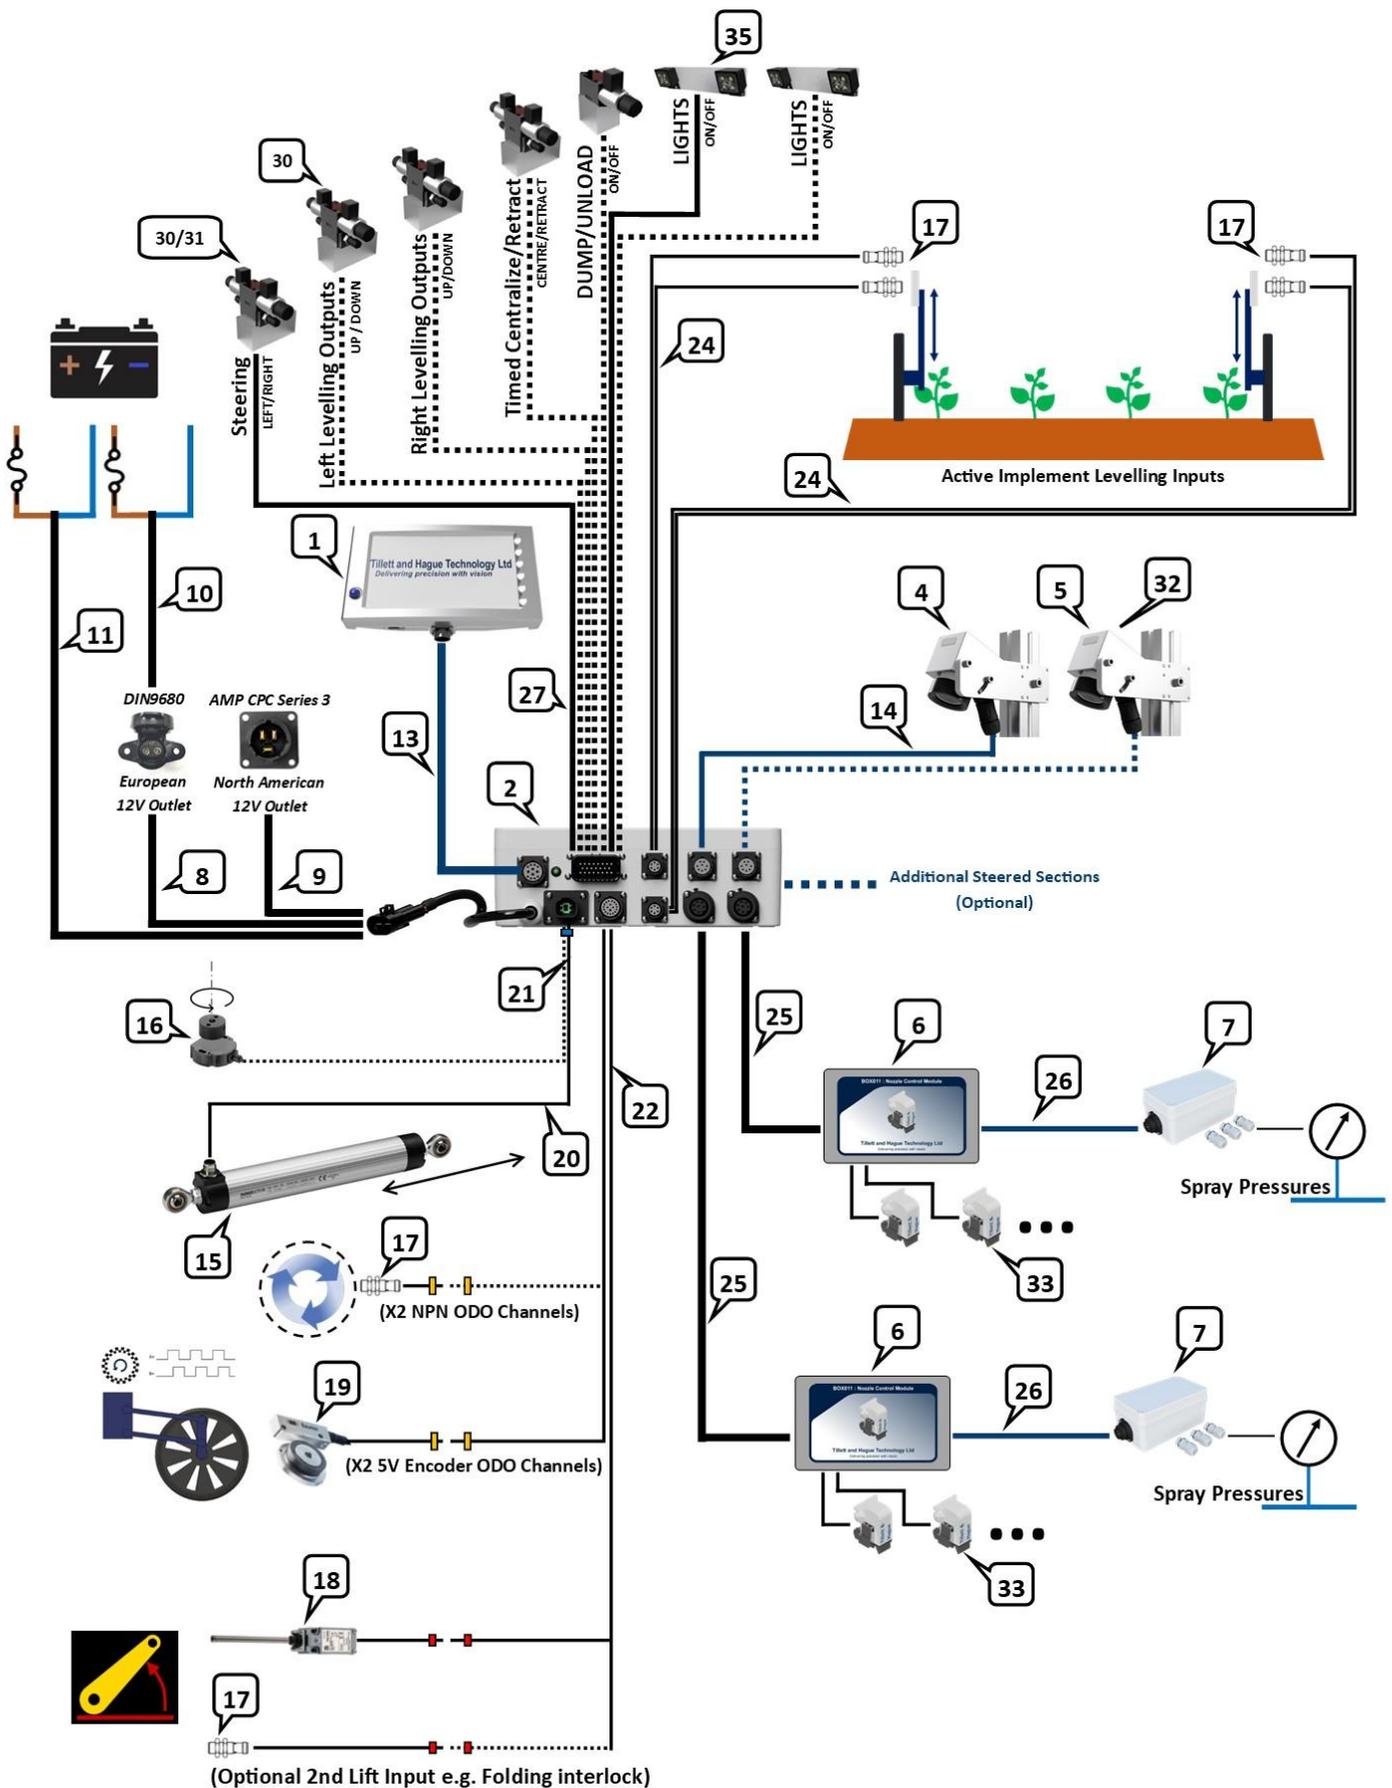


ISOBUS System overview - with optional additional equipment (broken lines)

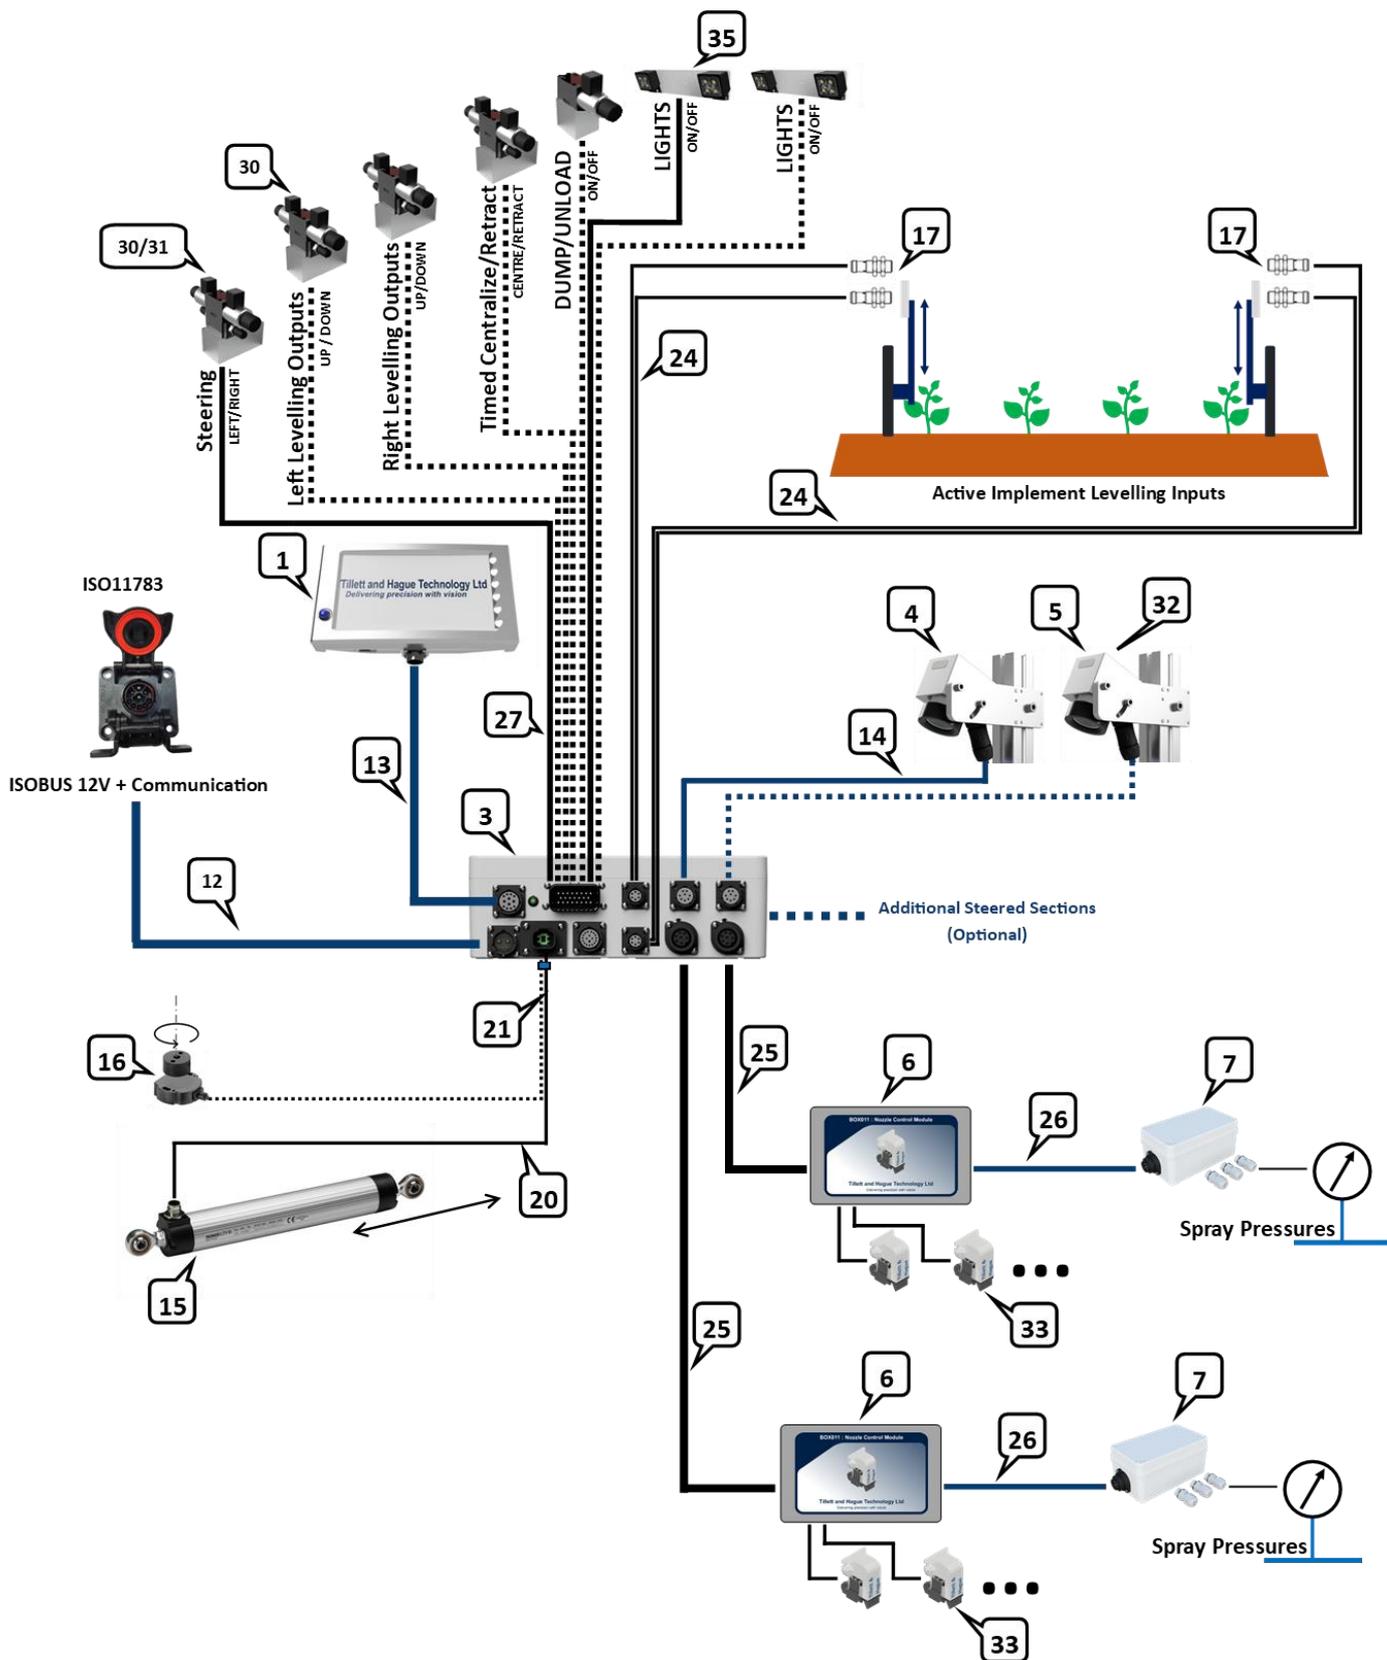


	Part Name	Part number
1	Console/Cab mounted terminal	BOX001-HS
2	Inrow implement control module	BOX006
3	Optional ISOBUS power and communication connection to tractor for Lift and Odometer input	BOX006-ISO
4	Camera 1	BOX003
5	Camera 2 (optional)	BOX003
CAN Devices		
6	Nozzle Control Module	BOX011
	Nozzle Controller PCB	PCB005
7	Condition Monitoring Module	BOX012
	Condition Monitoring PCB	PCB006
8	Euro "D" plug power cable	CBL004
9	North American power cable	CBL004-USA
10	Euro "D" plug receptacle to battery cable (optional)	CBL007
11	Direct to battery power cable (optional)	CBL020
12	ISOBUS implement module to tractor cable	CBL051
13	Console to implement module cable	CBL001
14	Implement module to camera cable	CBL002
15	Linear potentiometer position sensor	SEN002
16	Rotary potentiometer position sensor for disk steering applications (optional)	SEN005
17	NPN Proximity sensor (Lift, NPN ODO, Levelling inputs)	SEN001
18	Snap action finger switch (Lift)	SEN004
19	Incremental encoder input to system	SEN006
20	Single Potentiometer sensor cable	CBL003
21	Dual potentiometer sensor cable	CBL010
22	15 way Lift/Odometer cable	CBL011
23	12 way Lift/Odometer cable	CBL048
24	6 way levelling input cable	CBL012/CBL045
25	CAN/Power cable (High Power Version)	CBL022,CBL008
26	CAN/Power cable (Low Power Version)	CBL019
27	23 way valve output loom - Steer Left/Right - Timed Centralise/Retract - Levelling (Left up/down, Right up/down) - Night Operation Light - Dump/Unloader valve	CBL009
28	8 way valve output loom - Steer Left/Right - Night Operation Light - Dump/Unloader valve	CBL006
30	Hydraulic control valve block assembly (optional) used for steering, levelling, centralising etc. functions	HYD001
31	Proportional hydraulic control valve block assembly with filter (optional) used for steering.	HYD004
32	Universal camera bracket (optional)	BKT001
33	Nozzle Assembly	NOZ001

3.1 HS Console (cab mounted terminal.) PN: BOX001-HS

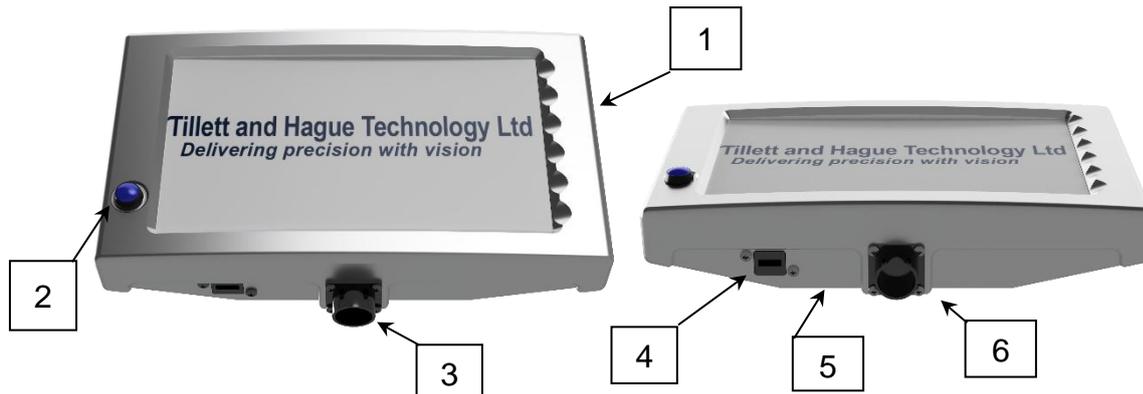

	Features
1	Cab mounted Console.
2	Power button
3	12-way Console cable connection.
4	USB socket (For system updating/backup via USB stick & keyboard connection)
5	ISO mounting holes (100x100mm)
6	Optional RAM mounting plate. (1" ball).

3.2 In-row implement junction box PN: BOX006

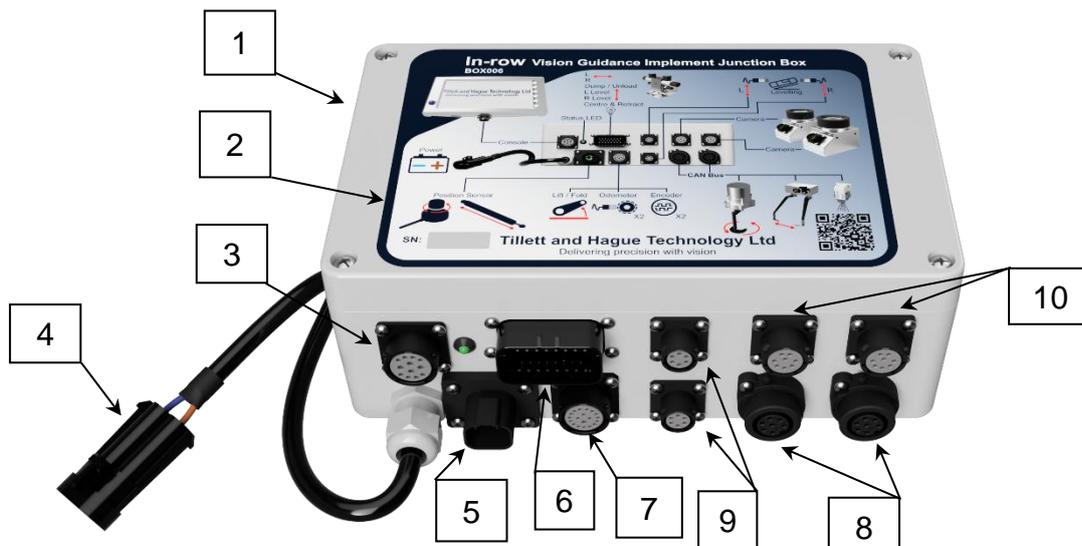

	Features
1	Implement junction box.
2	Junction box connection label.
3	Main Console cable connector.
4	Power supply cable (12V non-switched should be externally fused to 20 amp)
5	Slide/side shift/disc steer position sensor connector (Blue)
6	23 Way Valve cable connector
7	15 Way Odometry/lift/fold sensor connector
8	CAN connectors
9	Levelling left and right sensor connectors
10	Ethernet Camera Connectors

3.3 In-row implement junction box with ISOBUS Tractor Connection PN: BOX006-ISO




	Features
1	Implement junction box.
2	Junction box connection label.
3	Main Console cable connector.
4	ISOBUS Connection to tractor, 12V and ISOBUS via CBL051
5	Slide/side shift/disc steer position sensor connector (Blue)
6	23 Way Valve cable connector
7	15 Way Odometry/lift/fold sensor connector (Not used if ISOBUS Lift and Odometer inputs utilized)
8	CAN connectors
9	Levelling left and right sensor connectors
10	Ethernet Camera Connectors

3.4 Alternate 4 camera In-row implement junction box PN: BOX006-XC2




	Features
1	Implement junction box.
2	Junction box connection label.
3	Main Console cable connector.
4	Power supply cable (12V non-switched should be externally fused to 20 amp)
5	Slide/side shift/disc steer position sensor connector (Blue)
6	8 Way Valve cable connector
7	12 Way Odometry/lift/fold sensor connector
8	CAN connectors
9	X4 Ethernet Camera Connectors

3.5 Alternate 4 camera In-row implement junction box PN: BOX006-XC2-ISO

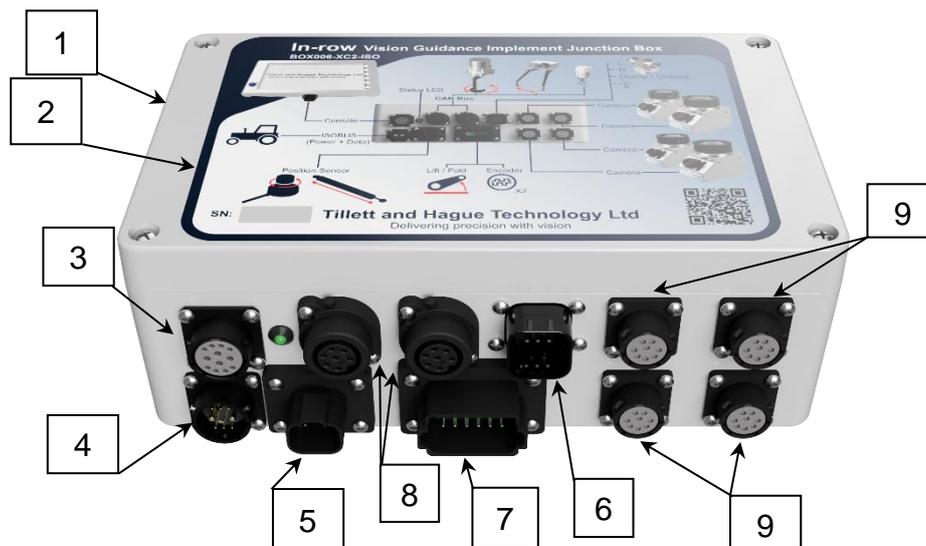

	Features
1	Implement junction box.
2	Junction box connection label.
3	Main Console cable connector.
4	ISOBUS Connection to tractor, 12V and ISOBUS via CBL051
5	Slide/side shift/disc steer position sensor connector (Blue)
6	8 Way Valve cable connector
7	12 Way Odometry/lift/fold sensor connector (Not used if ISOBUS Lift and Odometer inputs utilized)
8	CAN connectors
9	X4 Ethernet Camera Connectors

3.6 Camera (4mm or 6mm lens) PN: BOX003

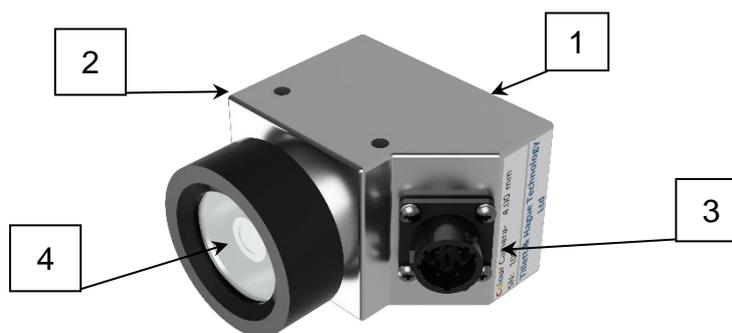

	Features
1	Ethernet camera
2	2 x M6 mounting threads each side
3	8-way camera cable connection.
4	4mm (wide angle) BOX003-4 and 6mm (narrow angle) BOX003-6 lens options available depending on requirements

NB Cameras serial number 4470 onwards (September 2022) are a MK2 version which is both mechanically and electrically identical to the original cameras. However, MK2 cameras use different software making it impossible to mix camera types on the same machine. Furthermore, implement modules serial numbers lower than 2230 (December 2021) contain firmware that is not compatible with MK2 cameras. Please [contact us](#) for solutions if these limitations are an issue.

3.7 Console cable 6m PN : CBL001-6, CBL018-6, CBL029-6, CBL039-6



NB Minimum Bend radius 45mm

	Features
1	12-way console cable [Female-Male] 6m and 10m lengths as standard CBL001-L
2	12-way console extension loom [Male – Female] 6m length as standard CBL018-L
3	12-way console extension loom [Female – Male] 6m length as standard CBL029-L
4	12- way console extension loom inline [Male - Female] 6m length as standard CBL039-L

3.8 Camera cable 5m PN: CBL002-5



NB Minimum bend radius 28mm

	Features
1	Camera cable, 2m, 5m, 7m and 10m lengths as standard CBL002-L
2	8-way female plug. (To Camera)
3	8-way Male plug. (To Implement junction box)


3.9 Camera disconnect at headstock extension cable PN: CBL013



NB Minimum bend radius 28mm

	Features
1	Camera cable, 1.5, 2m lengths available CBL013-L
2	8-way female plug (mounted box towards camera/toolbar), ideal for quick hitch toolbar applications
3	8-way Male plug. (To Implement junction box)

3.10 Tractor/implement power cable

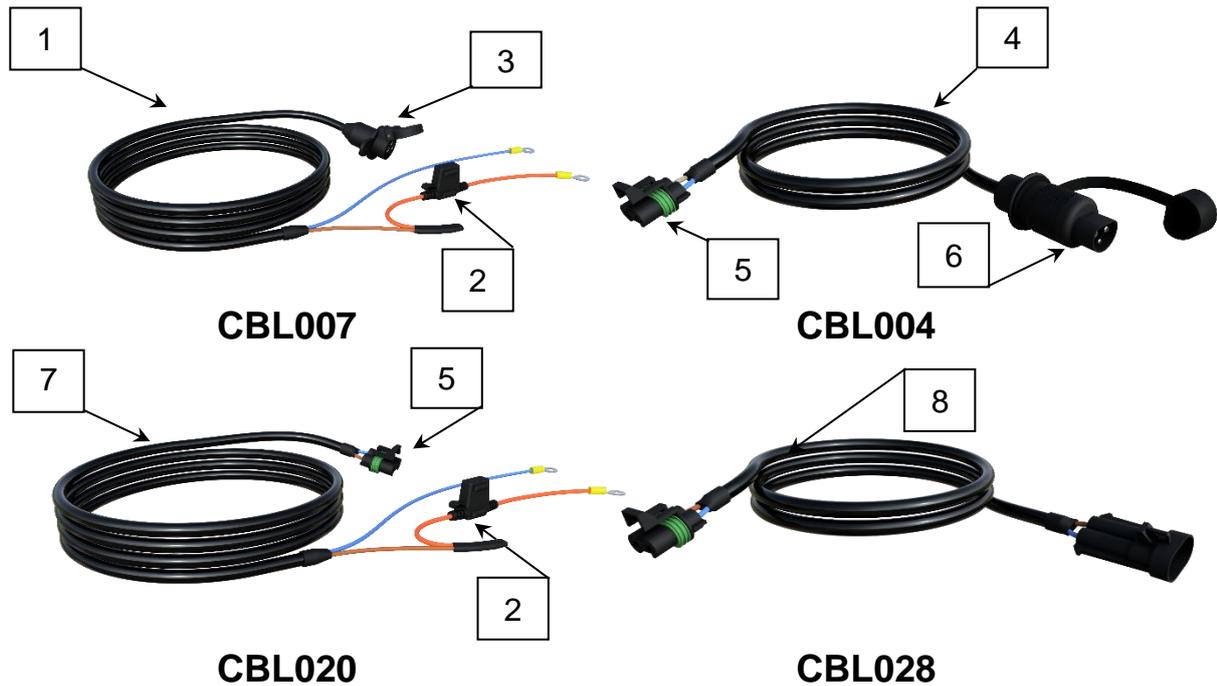

NB Minimum bend radius 94mm

	Features
1	Optional tractor power cable (3 Meters long as standard) CBL007-L
2	Fuse holder (20-amp MAX)
3	3-way Female 'D' plug.
4	Implement junction box power cable (3 Meters long as standard) CBL004-L
5	2-way power connector.
6	3-way Male 'D' plug.
7	Optional direct to battery power cable (5m and 8m variants) CBL020-L
8	Power extension cable CBL028-L


3.11 ISOBUS 12V and Communication cable PN: CBL051-3



NB Minimum bend radius 105mm


	Features
1	ISOBUS to Implement Module Cable 3m
2	ISOBUS Connector to tractor
3	12V and Communication cable 3m, other cable lengths available on request CBL051-"L"
4	Connector to Implement Module, only compatible with a BOX006-ISO

3.12 23 Way Valve cable connector PN: CBL009

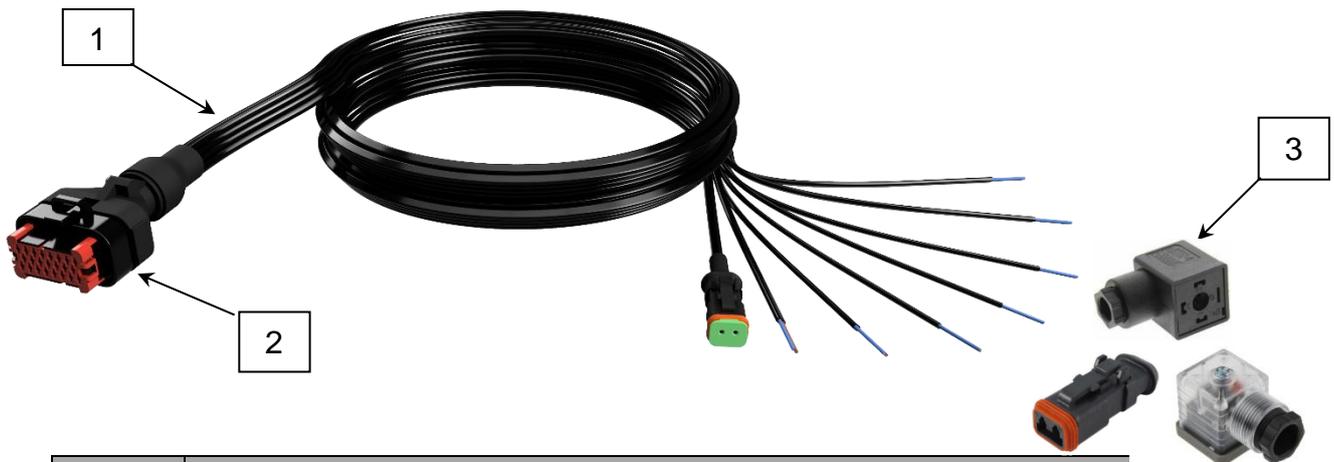

	Features
1	Valve connection loom.
2	23-way valve connector to implement module plug 6
3	Bare wire tails for connection to solenoid valves, Connector options available, e.g. DIN, Deutsch DT etc.
4	Solenoid connections for the following functions Steering Left/Right Centralising/Retract Left levelling Up/Down Right levelling Up/Down Dump/Unloader valve Night Operation Lights

3.13 8 Way Valve cable connector 2m. PN: CBL006-2

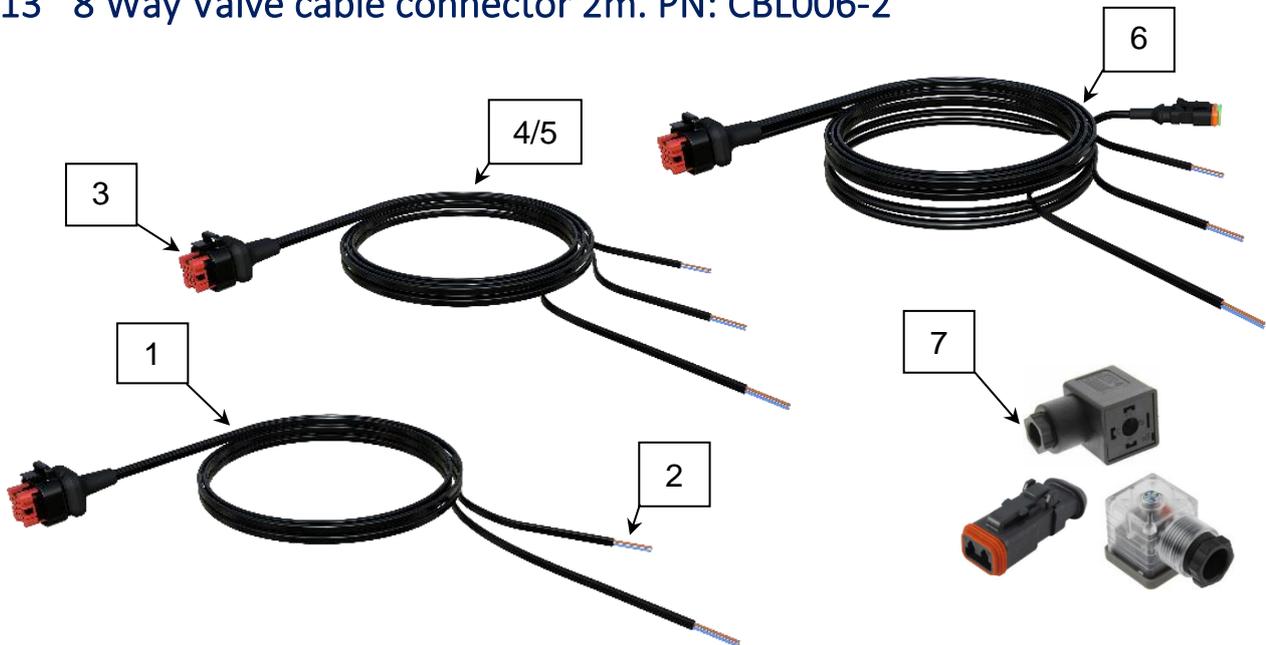

	Features
1	Basic hydraulic solenoid valve loom.
2	2m Open wire tails to take 2-way valve connector plugs.
3	8-way Male plug to implement module plug 6
4	Basic loom with additional output for hydraulic dump valve CBL006-2-W2D
5	Basic loom with additional output for night lights CBL006-2-W2L
6	CBL006-2-W2D2L integrates both 2m dump valve and 2m night operation lights into valve loom
7	Various connector options available e.g. DIN, Deutsch DT etc.

3.14 15 way Lift/Odometry sensor cable PN: CBL011-8




	Features
1	Lift/Odometry sensor cable 8m length, other lengths available on request e.g. CBL011-“L”
2	15-way connector to implement module plug 7
3	Bare wire tails for connection to proximity detectors for lift input and encoders for odometric input, DT connection to proximity and odometer sensors also available e.g. CBL011-“L”-DT for connection to CBL005+SEN001 (Lift) and SEN006 (Odometer) etc
4	More than one encoder input can be used in conjunction for higher accuracy odometric readings across machine, CBL011-8-DO-8
5	A second lift input (either NO or NC operation) for safety interlock etc, CBL011-8-DL-8
6	Odometer input using Proximity sensor inputs (CBL005+SEN001) is possible with this connection

3.15 12 way Lift/Odometry sensor cable PN: CBL048-8




	Features
1	Lift/Odometry sensor cable 8m length, other lengths available on request e.g. CBL048-“L”
2	12-way connector to implement module plug 7
3	Bare wire tails for connection to proximity detectors for lift input and encoders for odometric input, DT connection to proximity and odometer sensors also available e.g. CBL048-8-DT for connection to CBL005+SEN001 (Lift) and SEN006 (Odometer) etc.
4	More than one encoder input can be used in conjunction for higher accuracy odometric readings across machine, CBL048-8-DO-8
5	A second lift input (either NO or NC operation) for safety interlock etc, CBL048-8-DL-8

3.16 Proximity sensor and Lift/Speed sensor lead 5m PN: SEN001 & CBL005

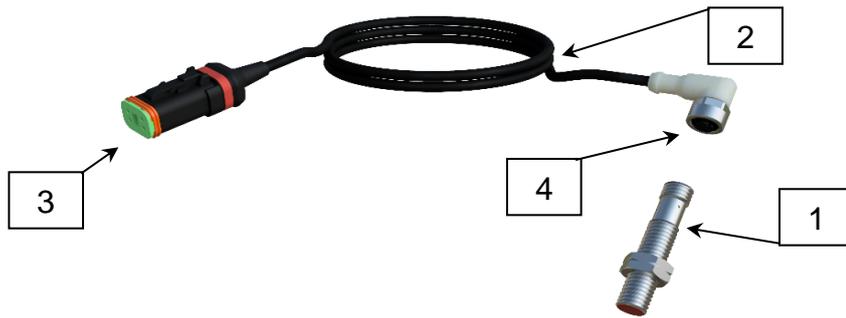


	Features
1	Ferrous metal sensing NPN proximity sensor
2	5m sensor lead, other lengths available on request, e.g. CBL005-“L”
3	4-way Female plug (To connect to CBL011-8-DT or CBL048-8-DT) (Red)
4	M12 connector to sensor
5	12mm mounting hole for sensor

3.17 6 Way Levelling sensor cables (left and right) PN: CBL012-6

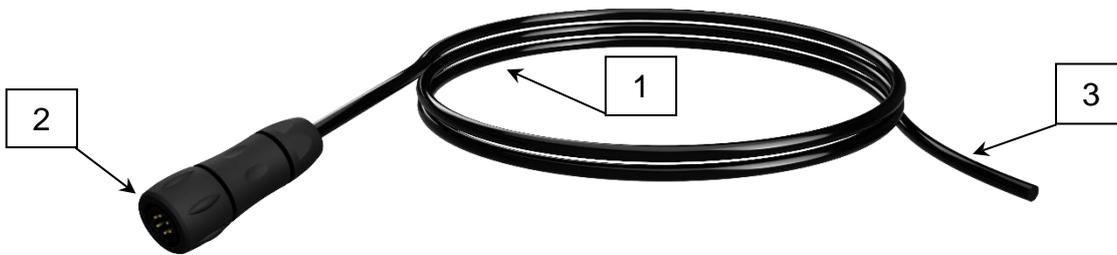


	Features
1	Levelling proximity sensor cable (two required per machine), 6m and 3m versions available as standard
2	6-way connector to implement module plug 9
3	Bare wire tails for connection to proximity detectors, NPN operation sensor inputs required

3.18 6 Way Levelling sensor cables (left and right) PN: CBL045-5

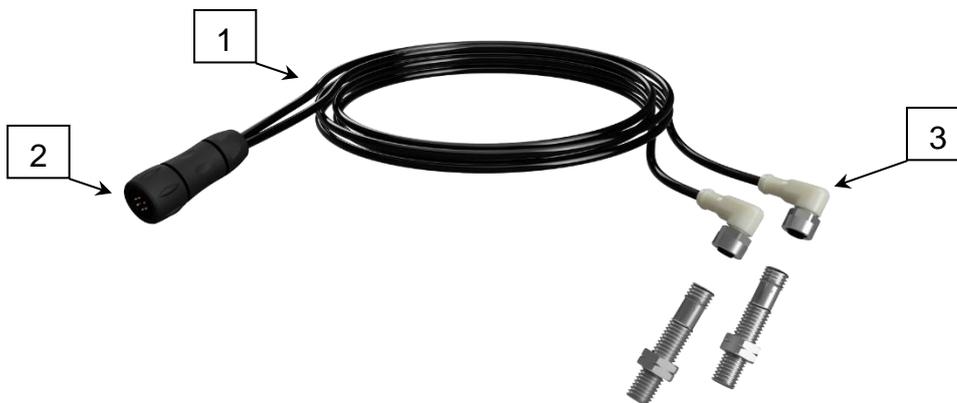

	Features
1	Levelling proximity sensor cable (two required per machine), 5m versions available as standard
2	6-way connector to implement module plug 9
3	M12 connectors to SEN001 NPN proximity sensors

3.19 Slide/side shift/disc steer position sensor cable PN: CBL003, CBL010

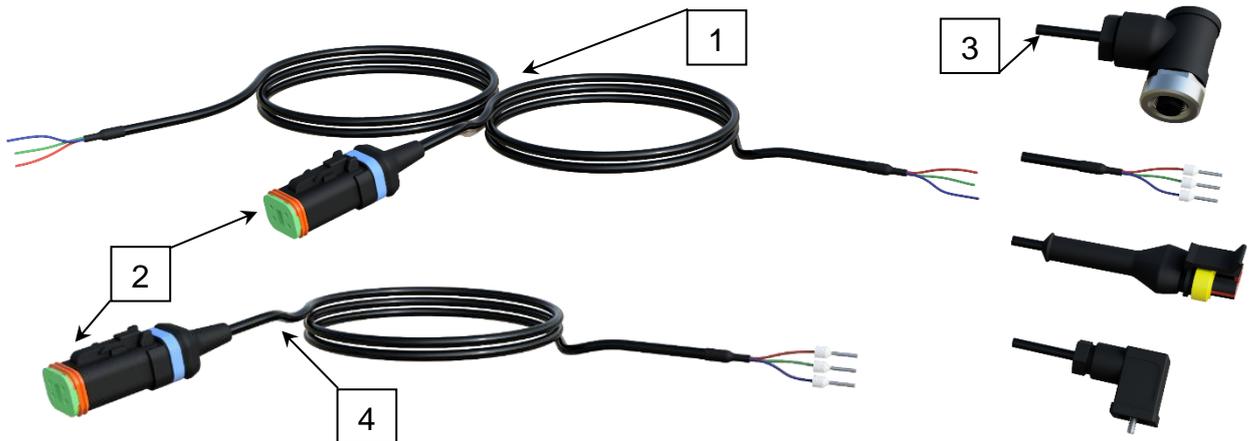


	Features
1	Dual input position sensor cable
2	4-way connector to implement module plug 5 (Blue)
3	Bare wire tails for connection to position sensors e.g. potentiometers, connector options available e.g. DIN, M12, TE3, Ferrules etc.
4	Single position sensor cable can be utilised if only one position feedback device is used (CBL003)

3.20 CAN/Power connector loom PN:CBL008-L, CBL019-L, CBL022-L



	Features
1	CAN/12V power loom, various lengths possible upon request
2	7 way connector to implement module plug 8
3	Bare wire tails for connection to bare board CANbus devices (CBL008-L)
4	Connection cable to enclosed low power junction box CANbus devices (CBL019-L)
5	Connection cable to enclosed high power junction box CANbus devices (CBL022-L)

3.21 Night operation lights and mounting bracket assembly PN: BKT002-2LED

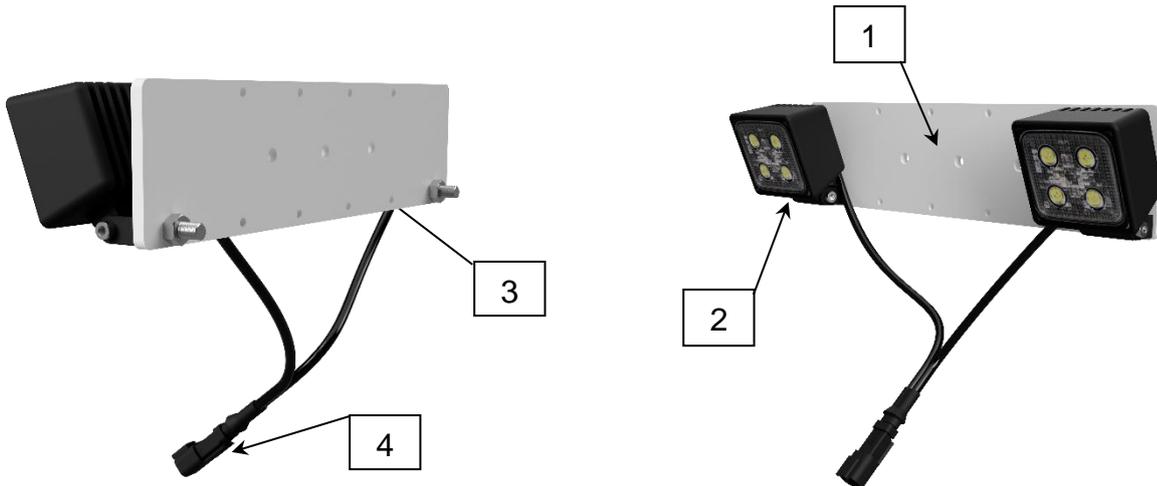


Features	
1	Night operation lights activated by touch screen display
2	x2 12W 1080 Lumen LED worklamps
3	Universal mounting bracket to camera pole
4	2-way Deutsch DT connector

3.22 Night operation light extension and “Y” adaptor cable PN: CBL017-L, CBL027-0.25




Features	
1	Night operation light extension cable
2	2-way Deutsch DT connector female
3	2 core cable available in various lengths (3m, 4m, 5m, 6m) CBL017-L
4	2-way Deutsch DT connector Male
5	“Y” adaptor cable enabling connection to multiple lights CBL027-0.25

3.23 Linear potentiometer for machine position PN: SEN002-L

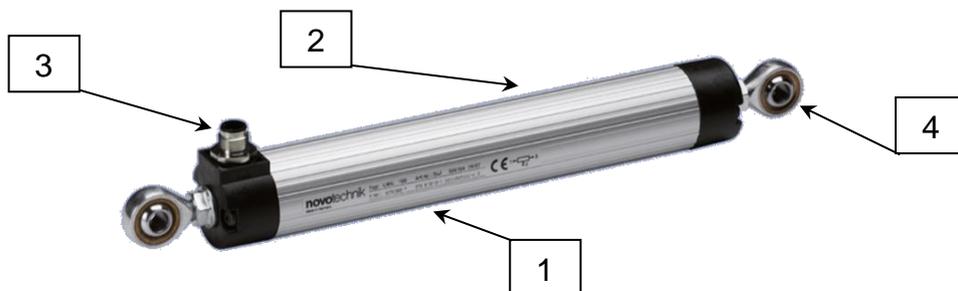


Features	
1	5K Linear potentiometer
2	Available in three variants depending on required stroke 300mm, 500mm, 600mm
3	M12 connector to sensor lead
4	8mm mounting points

3.24 Non-contact rotary position sensor PN: SEN005-L + SEN005-M

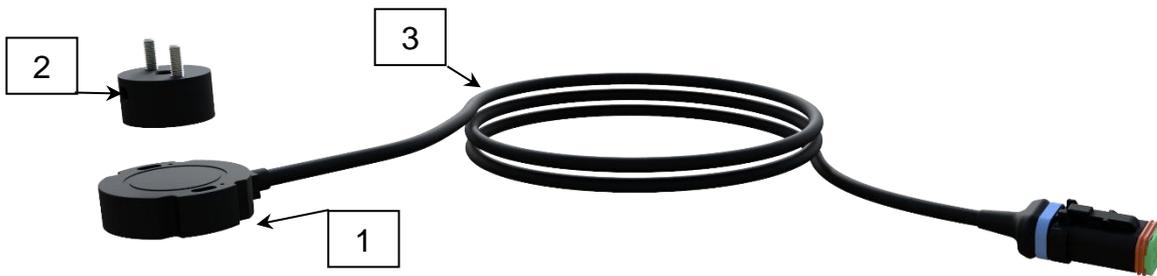


	Features
1	5V non-contact position sensor with cable SEN005-L
2	Position sensor magnet SEN005-M
3	2.5m cable length
4	Can be connected directly to NO: 5 (Blue) using Deutsch DT connector

3.25 Non-contact Incremental Encoder Odometer sensor PN: SEN006-0.5-DT + SEN006-M

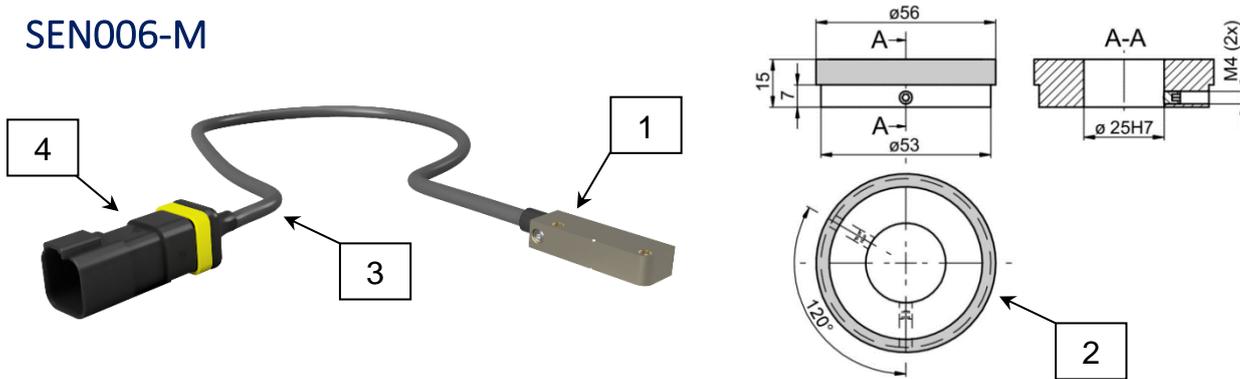

	Features
1	5V non-contact odometer encoder sensor with cable SEN006-0.5-DT
2	Encoder sensor magnet wheel SEN006-M
3	0.5m cable length, various cable lengths available on request
4	6-way Deutsch DT connector Male (Yellow)
5	Can be connected to implement module via CBL011-"L"-DT or CBL048-"L"-DT

3.26 Nozzle Assembly PN: NOZ001

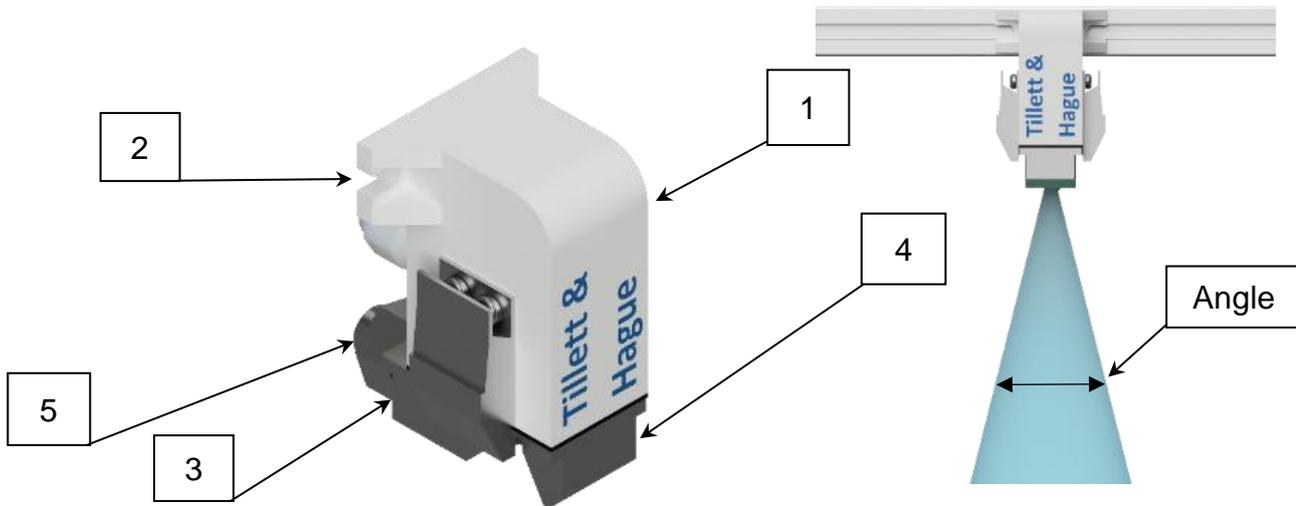


	Features
1	Nozzle Assembly with removable valve element
2	M5 mounting slots
3	Integrated fine mesh filter
4	Multiple nozzle tip options depending on application Sprinkler part number = Angle-Number of orifices – orifice size e.g. 14-6-40 Atomizing part number = Angle -A- Effective orifice size e.g. 14-A-50
5	4mm push fit quick connector

3.27 Nozzle Control Module PN: BOX011 (Contains PCB005)



	Features
1	12 channel nozzle controller module
2	X12 M12 cable glands for outputs
3	Male panel mount CAN/12V connector (for use with CBL022 only)
4	Optional female panel mount CAN/12V for connection to other CANbus devices (BOX011-EC)

3.28 Nozzle Control Board PN: PCB005

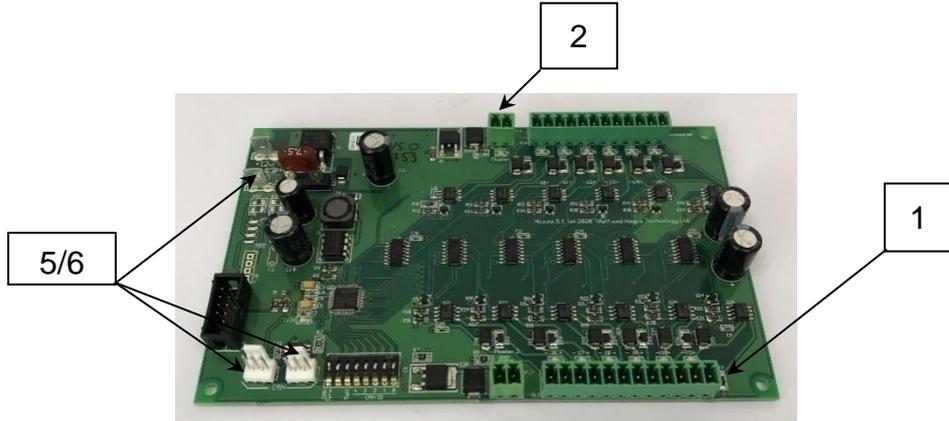


	Features
1	12 nozzle output channels
2	2 "Master" valve outputs
3	160mm x 100mm x 20mm board dimensions
4	3mm x 152.5mm x 91.5mm mounting holes
5	CANbus and 12V connection to implement module
6	CANbus connector for secondary CAN/12V device

3.29 Condition Monitoring Microcontroller Module PN: BOX012 (Contains PCB006)




	Features
1	Hydraulic and Spray condition monitoring options
2	X2 Hydraulic Pressure, x1 Temperature, x1 Filter blockage inputs (BOX012-H)
3	X3 Spray pressure, x1 Master pressure inputs (BOX012-S)
4	Panel Mount CANbus connector for use with CBL019

3.30 Condition Monitoring Microcontroller PN: PCB006

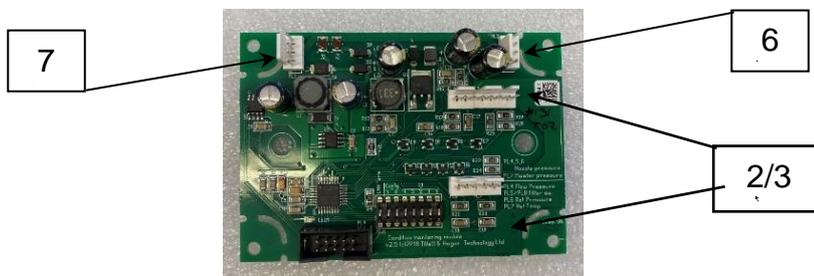


	Features
1	Hydraulic and Spray condition monitoring options
2	X2 Hydraulic Pressure, x1 Temperature, x1 Filter blockage inputs
3	X3 Spray pressure, x1 Master pressure inputs
4	100mm x 70mm x 20mm board dimensions
5	3.5mm x 91.5mm x 61.5mm or 6mm x 75mm mounting holes
6	CANbus and 12V connection to implement module
7	CANbus connector for secondary CAN/12V device

3.31 Opto-isolated input/output board PN: PCB008

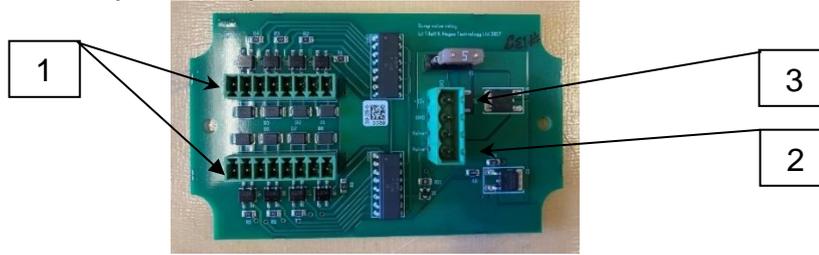


	Features
1	12 opto-isolated input channels
2	Electrically isolated inputs to trigger a single output
3	12V supply and single valve output channel
4	107mm x 70mm x 20mm board dimensions
5	4mm x 104.5mm mounting holes

3.32 Hydraulic steering control valve PN: HYD001

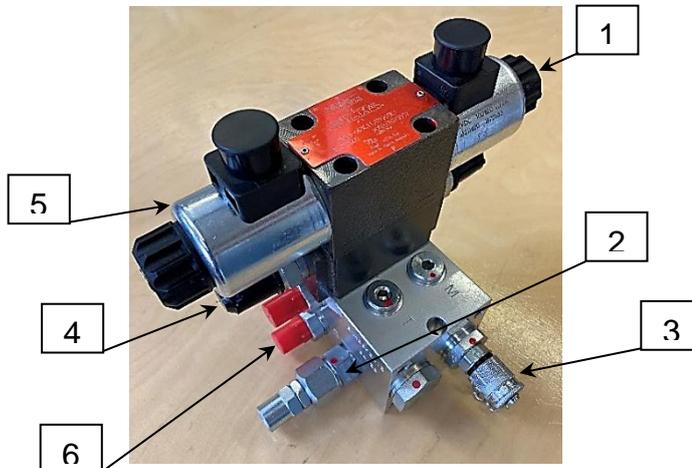

	Features
1	Open centre directional control valve (not suitable for hydraulic rotor operations)
2	Pressure reducer integrated into manifold block
3	Test point fitting for setting circuit pressure (gauge available HYD003)
4	Flow control for metering steering speed
5	12V solenoid coils
6	BSP fittings, Hydraulic piping kit available if required PN: HYD002

3.33 Proportional hydraulic steering control valve PN: HYD004

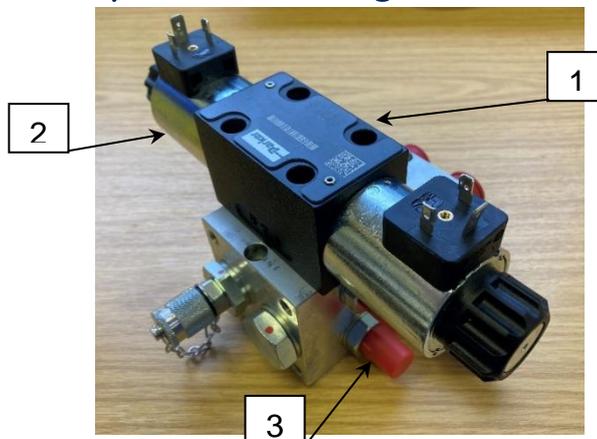

	Features
1	Closed centre proportional directional control valve
2	Proportional solenoid coils
3	BSP fittings, Hydraulic piping kit available if required PN: HYD002
4	Pressure line filter

4. Safety

1. These guidelines only cover aspects of safety specific to this guidance product. Machines should be operated under general safety and accident prevention regulations.
2. The operator is responsible for safe operation of the machine even when automatic steering is operating.
3. The guidance system is only intended to guide agricultural implements within agricultural fields.
4. When carrying out repairs or adjustments to an implement, ensure that the hydraulic supply is off, and pressure is zero.

Be aware that spurious speed signals can be generated potentially causing the side shift/steering discs to move unexpectedly. This is most likely if odometry is generated via GPS, which is inclined to drift, or via computer vision, particularly if people are moving in the camera field of view. These modes of speed estimation should only be used in inter-row mode.

5. Never conduct maintenance work on a side shift/slide mechanism while it is supporting the implement.
6. Side shift and steered disc mechanisms form pinch, trap and shear points. Be aware of these when carrying out maintenance.
7. Regularly check the condition of electrical cables, hydraulic hoses and fittings.
8. Do not allow other persons to ride on or work near an implement when it is in operation.
9. The optional tractor power supply cable has a 20Amp fuse fitted near to the battery terminals. This is for short circuit protection and must not be omitted. If connecting to an existing 12V power outlet ensure that it is appropriately fused.
10. When routing the loom and power supply cables ensure that they do not cause a restriction or trip point in the cab.
11. Take the normal precautions for operating agricultural sprayers.

5. Assembly

5.1 General assembly

It is assumed here that the implement is fitted with a hydraulic side shift or disc steered system actuated by a pair of “on/off” **12V** solenoid valves taking less than **3 amps** when operated. It is further assumed that the hydraulic circuit includes the means to regulate the flow of oil and thus the rate of side shift or steering, unless a proportional valve has been chosen.

Step 1 – Mounting the implement control box

The implement control box is best mounted centrally on the implement to reduce cable lengths. The metal box is water resistant to IP67, but we recommend providing a cover to protect against mechanical damage and direct rain. The box measures 260mm x 160mm x 91mm with 6.67mm diameter fixing holes at 240mm x 110mm centres. Minimum bend radius 28mm for camera and CAN cables, 45mm for console cables.

Step 2 – Mounting a side shift or steering potentiometer

Ensure the sensor has a stroke greater than implement movement and is mounted symmetrically so that mid stroke of the sensor represents mid stroke of the implement. (Offset configurations are possible, but best avoided in the interests of simplicity). Potentiometers should have a resistance of between **3K Ω** and **10K Ω** . Our standard potentiometer has a 300mm stroke and a maximum resistance of **5K Ω** . It is also possible to use Hall effect-based position sensors (12V or 5V supply, 0 - 5V output signal).

Step 3 – Odometry

Spot spraying requires high precision odometry. Odometry sources used for inter-row guidance based on GPS or vision are not adequately accurate. Instead, a ground wheel preferably incorporating an incremental encoder that offers between 8000 and 3000 pulses per meter travelled should be fitted. For example, a 0.4m diameter wheel fitted with a 4000 (2000 A+ and 2000 B+) pulse per revolution encoder to give 3183 pulse per meter would be acceptable. (NB Configurations takes the reciprocal e.g. $3.14 \text{ e}^{-4} \text{ m/pulse}$). It is also possible to derive a sufficiently accurate odometry signal from a ground wheel fitted with teeth detected by a NPN proximity detector. Our standard proximity sensor picks up ferrous metals up to a gap of 4mm. However, an accurate speed cannot be established until two pulses have been received and so this method can lead to crop damage when starting from stationary mid-field.

If an ISOBUS connection is available and the ISOBUS version of our implement module is installed our system can take lift and odometer data from the tractor’s ISOBUS. Subject to accuracy testing, use of ISOBUS wheel speed may avoid the need to install an odometer sensor.

Step 4 – Mounting the lift and fold (optional) proximity sensor

Lift and fold movements can be detected using either NPN type proximity detectors or microswitches. Lift sensors should be mounted on a depth wheel unit or adjacent to the tractor top link such that they are triggered when the implement is lifted. It is important that the lift sensor cannot be triggered spuriously, by passing over a wheel rut for example. Refer to [Annex](#) for lift and secondary lift input operation options that are available.

In the case of using an ISO 11786 socket or ISOBUS for hitch position, installation of a lift switch can be omitted. ISOBUS hitch lift trigger point can be set from the “Advanced settings and diagnostics” screen described in [Section 6.3](#).

Step 5 – Mounting the camera(s)

Under normal operating conditions cameras should be mounted on a vertical pole approximately 2m above soil level at an angle of approximately 40 degrees to the horizontal for interrow guidance and 24 degrees for spot spray operation (though both these can be refined during the commissioning process). It is important that the camera is held rigidly and square to the implement. It should be mounted centrally over the crop rows to be followed with at least half a row width visible outside the outer rows at the bottom of the image. Additional cameras may be fitted to ensure that all rows can be viewed adequately. Two camera sockets are provided as standard, additional sockets (maximum of four per module) are available on request. Camera cable minimum bend radius is 28mm.

Step 6 – Connecting hydraulic valve solenoids, potentiometer, lift and odometry proximity sensors

Route cables carefully ensuring they cannot become trapped or chafed making allowance for normal movement such as side shift or implement lift, steering, levelling movements.

Step 7 - Mounting the console

Mount the console in the tractor cab in a position where it can be clearly seen, but does not obscure operator's visibility. Four M6 mounting holes on a square 100mm pitch at the console rear are designed to accept VESA standard brackets. We recommend "RAM" type ball and socket style mounting brackets, but other mounting methods are available.

Caution

- The console should be protected from severe vibration.
- The console is water resistant but should not be mounted where it will be exposed to direct rain.
- Minimum bend radius 45mm for console cables.

Step 8 – Hitching to the tractor

Position the tractor and implement on a level surface. Check that the tractor's lower link arms are evenly adjusted and hitch to the 3-point linkage points on the implement frame.

Caution

- Once the 3-point linkage is correctly fitted stop the tractor and apply the handbrake.

Step 9 – Reducing free lateral movement

Adjust the stabiliser links to prevent lateral movement of the lower link arms to give the implement a rigid reference to steer against.

Caution

- For side shifting front mounted systems it is particularly important that there is no lateral movement in the linkage.
- For large rear mounted side shifting implements it is beneficial to use fixed discs attached to the non-side shifting part of the frame so that the moving section has a firm reference to push against. This also reduces lateral loads on the tractor. When using such fixed discs for stability, it is acceptable to have a small amount of lateral movement in the tractor lower link arms.

Step 10 – Levelling the implement

With the implement on the ground, adjust the top link so that the frame is level, front to rear and the camera pole(s) are vertical. If automatic levelling is fitted, it may be required to repeat this step once the machine's automatic levelling has engaged and is in working position. It is also necessary to level the machine laterally in relation to the ground/bed top so that the camera pole is vertical in both directions.

Step 11 – Connecting the implement cable to the console

The cable from the implement should be routed into the tractor cab and through to the console.


Caution

- Do not allow the cable to restrict access to or exit from the cab or act as a trip point.
- Plug the multi pin plug into the socket in the bottom of the console.

Caution

- Note the correct alignment of the tabs in the plug and socket and avoid excessive force in pushing the connector together.

Ensure alignment tab and slot are lined up when inserting the plug into the socket

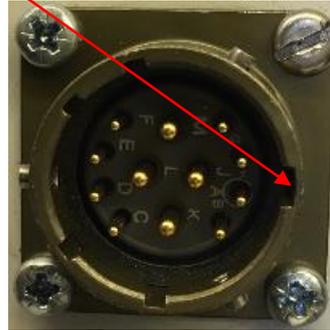

Caution

- Clipping the loom and hoses to the top link should help keep them clear of catch points.
- Make sure that the linkage can be operated over its full range without stretching or chaffing cables or hoses.

Step 12 – Connecting the power supply cable

The implement control box power supply cable should be connected to the tractor's 12V battery. For small or inter-row machines it may be possible to use the tractor's auxiliary 3 pin power sockets. However, it is normally preferable to connect direct to the battery via the cable provided. It is important that this cable includes a 20amp fuse at the battery end for short circuit protection. Cigarette lighter sockets are definitely not suitable!

Caution

- Check polarity of power connections if fitting direct to the battery!
 - **BROWN = +12V**
 - **BLUE = 0V**


When the system is connected to 12V supply the console power button will flash every 5 seconds, indicating the console is ready to boot. If no flash occurs, please check connections for breaks.

Step 13 – Connecting the ISOBUS 12V power and data cable (ISOBUS Implements)

Route the cable from the implement module to the tractor's ISOBUS socket.

Caution

- Do not allow the cable to restrict access to or exit from the cab or act as a trip point.
- Note the correct alignment of the tabs in the plug and socket and avoid excessive force in pushing the connector together.

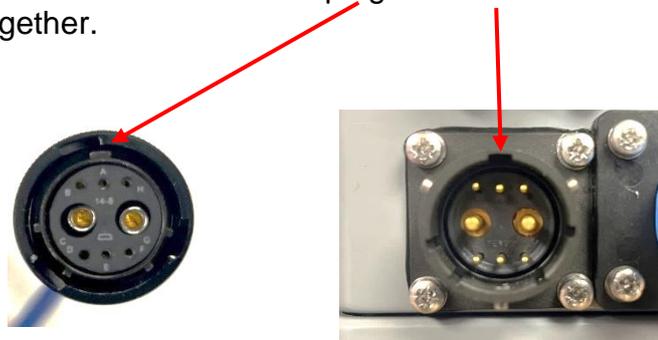

From Implement



Tractor Socket



Step 14 – Connect the hydraulic supply hoses

Connect the hydraulic supply hoses in such a way that they are not chaffed or over extended with full link movement. Attaching hoses to the top link is sometimes helpful.

Step 15 – Activating night operation lights or the ON while moving output

In addition to valve outputs the module is equipped with an extra output that can drive up to 3 amps that can be configured to either switch on when moving, potentially useful for band spraying, or on when switched on from the console. The latter being intended for activating night lights. Which mode the module operates in is determined by a DIP switch on the module PCB as outlined below.

The Function DIP switches are located on the right-hand side of the implement microcontroller PCB. To turn on the light option switch "2" should be in the "UP/ON" position.



5.2 CANbus and Accessories

All CAN devices on the network must have separate CAN IDs which are set via a PCB mounted DIP switch.

It is advisable to arrange multiples of the same CAN device on the bus in ascending identification address from left to right of the machine.


The end of the CAN bus must be terminated by setting the CAN Terminator DIP switch “ON” at the last PCB on the bus.

5.2.1 Nozzle Installation

Step 1 – Mounting nozzles

Nozzles should be mounted as far forward as possible to minimise the distance between the bottom of the camera field of view and the cultivator blades. The longer plants are out of sight and not tracked visually the greater the reliance on odometry leading to reduced accuracy.

Nozzles can be mounted using the two 5mm x 35mm mounting slots. They should be mounted in an appropriate position and height, depending on application, tip type, tip spray angle, spray pressure etc.

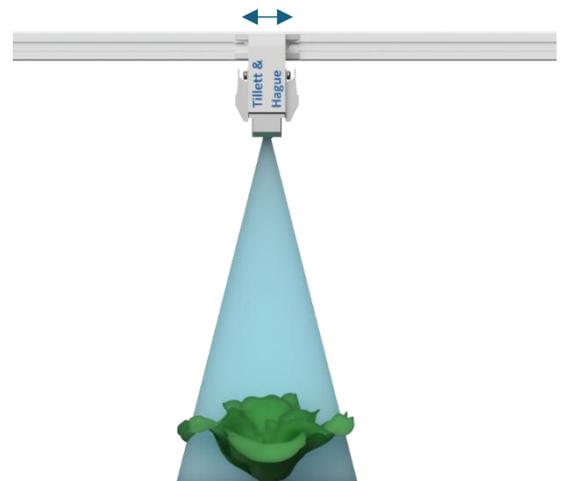

Step 2 – Connecting nozzle spray system

Nozzles can be connected to the spray circuit via the 4mm push fit connector. Appropriate spray circuit materials and filtration should be integrated depending on chemical to be used.

Step 3 – Mounting nozzle board

Nozzle board must be mounted securely via the provided mounting holes in an IP65 or better enclosure to protect from mechanical damage and water ingress. Our BOX011 meets this requirement. It is also advised to provide a cover for this enclosure to protect from mechanical damage and direct rain.

Step 4 – Wiring nozzle outputs

Nozzles should be wired channel 0 (left of machine) to channel 11 (right of machine) sequentially. Tillett and Hague spot spray nozzles can be wired with 0.22mm/24AWG wire but nozzles with larger solenoids may require greater wire gauges.

Step 5 – Connecting nozzle board to implement module

Nozzle board must be connected to the implement module via CANbus using CBL008 (Board) or CBL022 (BOX011).

DIP switches on PCB005 inside the box need to be set for CAN termination and identification address. See [Annex](#).

5.2.2 Condition Monitoring

Our condition monitoring board has four analogue and one digital input that can be used for monitoring spray system pressures and filter blockages. The same board with appropriate sensor selection and DIP switch settings can be used to monitor hydraulic systems.

It must be mounted securely via the provided mounting holes in an IP65 or better enclosure to protect from mechanical damage and water ingress. Our BOX012 meets this requirement. It is also advised to provide a cover for this enclosure to protect from mechanical damage and direct rain.

It is connected to the implement module via CANbus using CBL019 or CBL022. See [Annex](#), for DIP switch settings, CAN termination and identification address.

Sensor supply voltage from the board is 15V.

Spray pressure sensors

Spray pressure transducers can be integrated into the system to monitor master/supply pressure and three banks of spray pressure. Sensor recommendations as follows:

Spray pressure sensor - 0-4bar range, 4-20mA output

5.2.3 Opto-isolated Input/Output Relay Board Installation

This board takes up to eight inputs and provides an output that turns on when any of the inputs are activated. This is normally used to drive a dump/unloader valve to unload a hydraulic system when no hydraulic services are required. It is not CANbus connected.

Step 1 – Mounting input/output board

Mount securely via the provided mounting holes in an IP65 or better enclosure to protect from mechanical damage and water ingress. It is also advised to provide a cover for this enclosure to protect from mechanical damage and direct rain.

Step 2 – Wiring multiple inputs to board

Inputs are opto-isolated so current draws are low requiring only a light wire gauge. Channels are not polarity dependant.

Step 3 – Wiring supply voltage and output device

Supply voltage and output device should be wired according to silk screen of board. Appropriate wire gauge should be used. Board is fused to 5A so output function should not exceed this.

Before proceeding it is worth familiarising yourself with the working screen

6. User Screens




Start-up screen

Turn the system on by pressing the console button for about a second until the button is illuminated. After some PC start up text the user is presented with a start-up screen offering the choice between starting spot spraying, going directly to the configuration editor, opening the service menu, or shutting down.



6.1 Working Screen


To get to the spot spray working screen press touch screen button with the nozzle graphic. When a press has been detected the touch screen button will become darker, though the function is only activated when your finger is released.

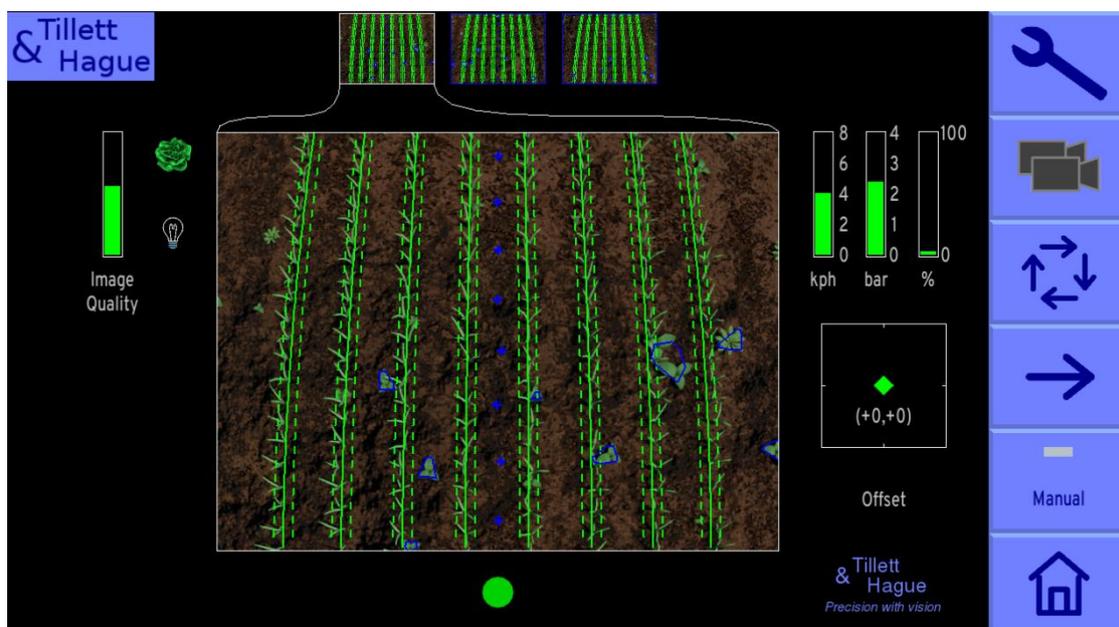

Console working screen showing the implement in work


The spot spray working screen has the following features:

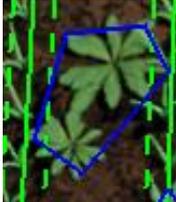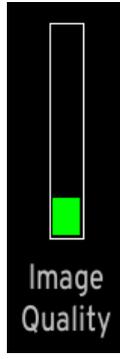- A live video image in the centre of the screen. On placing the machine down into work three sets of markings will be superimposed over that video image. The first are solid green lines representing the template to which crop rows are matched. The second are a set of dashed green parallel lines either side of each solid green template row representing the crop foliage width to be avoided by spray nozzles. The third are a series of eight crosses arranged from the top to the bottom of the image. These represent how well the template lines up at different levels up the image.
 - **Blue** crosses in a relatively straight line indicate a good match.
 - **Yellow** and **red** crosses indicate a poor match at that level that will not contribute much to overall template tracking. If many of the crosses are red or yellow performance will be compromised and you should follow the instructions in [Section 8](#) of this manual.
- Any weeds above a user defined size threshold will be overlaid with a **Blue** polygon which tracks the plants as they move down through the image. As they leave the bottom of the image the machine decides on the basis of polygon shape and position which nozzles should be switched on and for how long in order to deliver an adequate dose with minimum of overspray.
 
- Systems operating with multiple cameras will display live thumbnail video along the top of the display. Briefly touching on a thumbnail selects that image for the main display and other parameters such as offsets relate to the section that camera is fitted to. Alternatively, the button labelled with a multiple camera graphic toggles between thumbnails for full size display.
 
- Briefly touching on the main video images switches to a full screen video mode. Guidance continues in this mode, but the information symbols, speed, position indicator etc are obscured. Touching again reverts to the normal size image.
- An image quality gauge to the left of the screen giving relative indication of likely tracking performance. The higher the green bar the better. A low bar indicates either a poor template match or poorly defined crop plants. Guidance will, under most circumstances, operate down to an indication of approximately 20% albeit at reduced accuracy.
 
- Colour settings can be altered by pressing the plant symbol displayed next to the image quality bar. This allows for fine adjustment of colour of crop to be tracked and weed colour to be treated.
 
- This brings up the display illustrated below in which graphical slide bars can be moved, either directly, or via the arrow buttons to the left or right. To help visualise settings the colour of the plant graphic changes with colour setting. Press the loop back button to exit the screen.
- If in doubt it is better to retain normal unbiased colour settings denoted as having value zero. However, experience has shown that sometimes advantage can be gained by making very small adjustments. For example, biasing crop colour towards blue for some brassicas and alliums can improve performance. A value of about 30 has often be found to be satisfactory in those blue coloured crops.

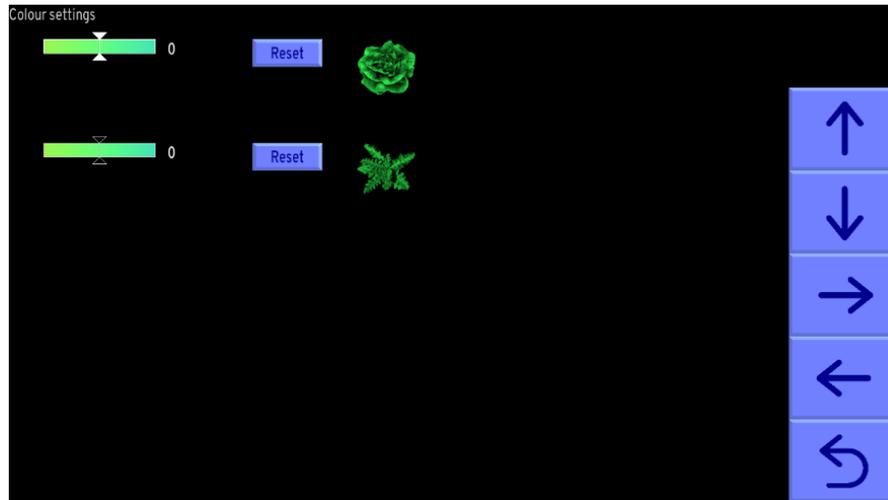


Colour settings adjustment tool


- If lights are configured a light bulb symbol is shown at the bottom right of the image quality bar. Touching the symbol turns lights on and the bulb yellow. To activate the lights option see [Section 5.1 Step 15](#).
- Information symbols at the lower left of the display:
 - A warning triangle indicates poor tracking. If it is displayed with a horizontal double headed arrow lateral implement position error is estimated to exceeds 25mm.
 - A vertical direction warning triangle may also be displayed if an odometry discrepancy between measured speed and visual odometry occurs. If enabled the warning triangle will be accompanied by an audible warning.
 - An implement lift symbol is displayed if the lift sensor detects the implement is lifted.
 - A circular red braked symbol is displayed if the implement is down but not moving.
 - A lightning bolt within brackets indicates a steer valve in an open circuit state.
 - A lightning bolt with lines radiating indicates a steer valve direct short.
 - Thermometer and computer chip indicates the console processor is overheating.
 - A CAN warning triangle with a “?” or “!” indicated unknown, conflicting, or dropped CANbus messages suggesting CAN connection issues.
 - A 12V battery symbol indicates low voltage on the 12V supply
 - A leaking pipe indicates a leak or blockage within the spray system if spray condition monitoring is fitted. **Stop operation** & perform nozzle tests to locate leak/blockages.



- A speed gauge on the right shows forward speed and should match tractor speed. The speed bar is normally green, an amber section indicates the machine is operating at over 75% of maximum speed and a red section indicates over speeding.
- A pressure gauge on the far right shows spray system supply pressure. If multiple spray lines for different products/concentrations are monitored a secondary pressure gauge will be displayed. (only available if spray pressure monitoring is fitted)
- The “%” coverage gauge gives a live instantaneous measure of the percentage area being sprayed.

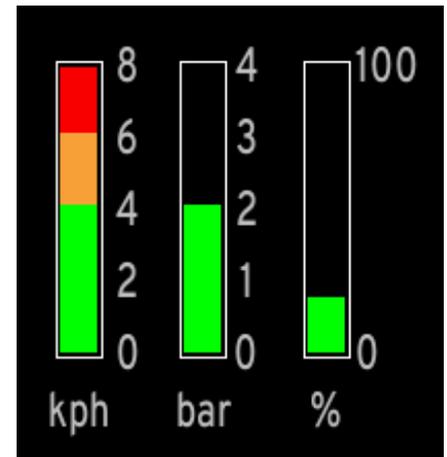

- A green dot and green chevrons below the image indicate side shift/slide position. A red chevron with a vertical bar indicates the limit of travel has been reached. This should not be allowed to occur for extended periods.
- The fine offset gauge shows the amount of left, right, forward or backward bias set by the user. This is used to compensate for minor lateral camera misalignment, but the lateral fine offset can also be useful on side slopes. By default, fine offset has six 1cm steps in each direction, though the number and size of steps is configurable.
- It is possible to reverse applied lateral fine offset in a single press, using the fine offset flip tool that can be activated from the [System information & diagnostics screen](#).
- The fore and aft fine offset alters the phase relationship between the nozzles the crop plants. It applies equally to all nozzles in that view. See [Section 8](#) for how to adjust the fine offset.

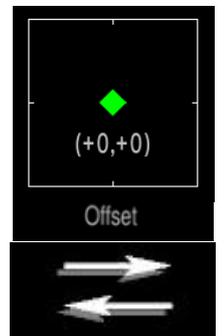


Note:

For multi camera systems fore and aft fine offset relates to the rows associated with the image selected for full size display.

For independently steered multi section systems the lateral fine offset is also associated with the image selected.


Touch screen buttons located along the right have the following functions:

- Spanner symbol, this button accesses the setup screen ([Section 6.2](#))
- Double camera symbol on multi camera systems and blank for single camera systems. This touch screen button toggles between cameras affecting the main image displayed and fine offset context. Alternatively, pressing on a thumbnail image will also select it for full size display.

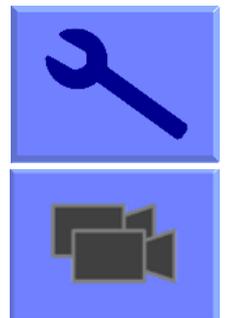

Additional cameras are normally used to provide extra guidance information, but it is possible to configure the system so that an additional camera, or cameras, provide a CCTV function. See [“Settings available from the advanced editor”](#) for instructions on how to achieve this.

- A button with four arrows arranged in a square, cycles the direction of the arrow button below.
- In normal running the arrow button moves fine offset by 1cm in the direction that the arrow is pointing. A left or right arrow effects lateral offset and up and down arrows affects nozzle phase.
- In manual mode, thick left and right arrows replace fine offset adjustment buttons and allow manual operation of side shift or steering discs moving 7% to the left or right with each button press.
- Touch screen button labelled “Manual” disables vision steering allowing the user to move left or right manually in 7% steps for each press of the arrow buttons. For disc steered machines with a slide position sensor fitted this is achieved by automatically steering discs to maintain the desired slide position. To prevent mechanical damage these functions only operate when lifted or moving.

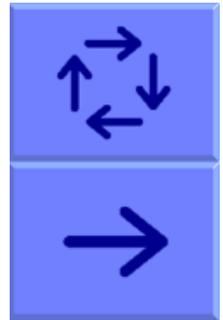

- In manual mode green lines representing the template and purple cross hairs are locked on the screen whilst retaining a live video image. These are useful when adjusting cameras ([Section 8 Step 2](#)).

Return to vision guidance by pressing same button again. By default, the side shift/discs remain in the position they were placed manually until forward movement under vision guidance is commenced, or an implement lift is detected. The later will centralise the side shift/discs. Alternatively, systems can be configured such that side shift/discs centralise on entry into manual mode ([Section 6.3](#))

Spot Spray machines will automatically jump into camera guidance as soon as motion is detected.

- Pressing the touch screen button with the house logo returns you to the start-up screen.
- From the start-up screen pressing the touch screen button with the power switch logo enters a shutdown screen from which you can confirm shutdown



Inter-row working screen

This screen is very similar to the spot spray working screen but omits functions relating to individual weed tracking and the control of nozzles. Fine offset offers only lateral adjustment. The live video image has superimposed solid green lines representing the expected row position.


Touching and holding on an image, or its thumbnail, stops images from that camera being used for guidance, making guidance solely reliant on any remaining cameras. When a camera is disabled in this way a red cross is superimposed over the image which remains live. Touching and holding again restores normal function. The ability to switch cameras off in this way is not available when running spot spray software.



The button labelled “Manual” in spot spray software is replaced with a graphical button with a Camera → Hand graphic allowing manual operation of side shift or steering discs moving 7% to the left or right with each button press.




Return to vision guidance by pressing same button again, now labelled with Hand → Camera icon.

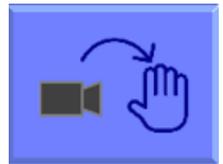

For single section side shift machines manual control is retained by default when moving forward with a normal tracking screen shown so the operator can see if vision guidance is likely to be successful.

For machines with mechanical guidance feelers fitted the guidance mode button cycles between manual mode, feeler mode and vision guidance. In manual or feeler guidance mode the fine offset slide bar is replaced by a graphic symbol indicating the mode in use.

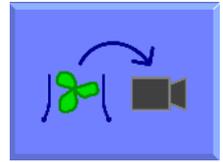

If a manual box is fitted switching the box to manual overrides the console and a manual hand graphic replaces the fine offset slide bar.




Inter-row operation also offers some operation and manual mode preferences, accessible from the [Advanced setup & diagnostics screen](#).

6.2 The Setup Screen

The setup screen can be reached by pressing the “spanner” touch screen button in the working screen.



Navigation within the set-up screen is achieved by moving the cursor over options using buttons labelled with arrows. When the cursor is over an appropriate setting it changes colour or brightness indicating it is selected.

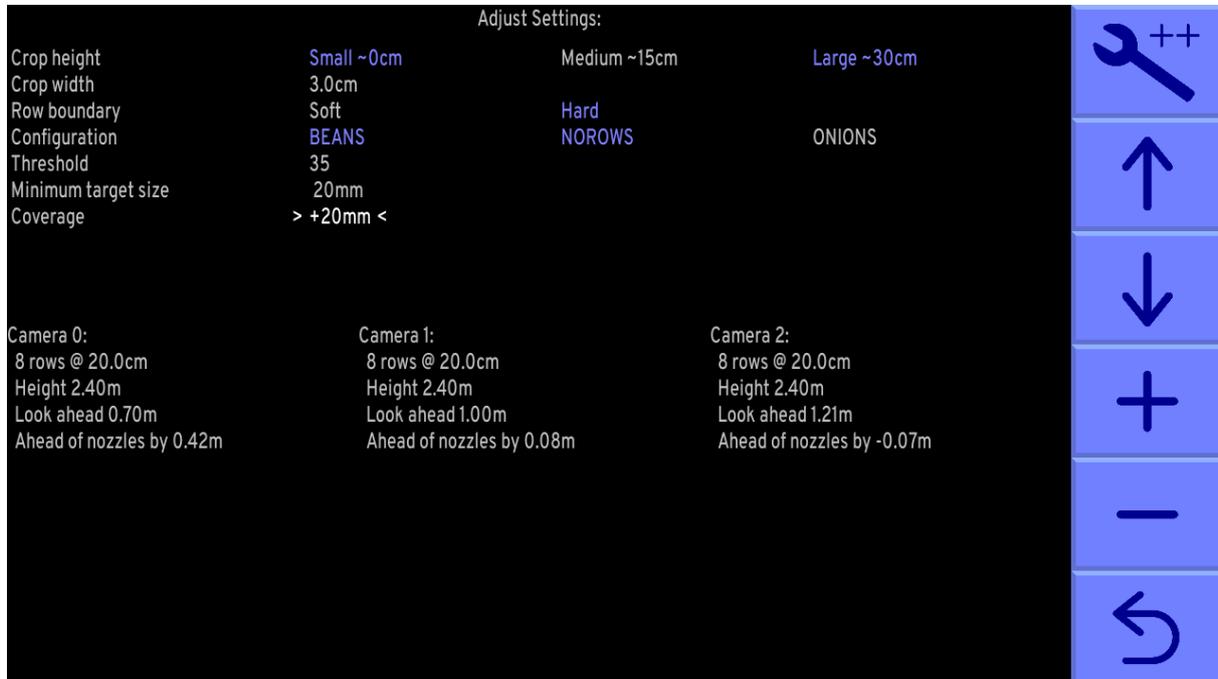

The settings “Crop height”, “Crop width”, “Row boundary”, “Configuration”, “Threshold”, “Minimum Target size” and “Coverage” can be altered in the setup screen. Settings will be stored from your previous session running the selected configuration.

Crop height

Increases template size to compensate for the crop canopy getting closer to the camera as it grows. This avoids the need to physically adjust camera height when moving between crops of different heights. There are settings for small, medium and large crops. The definition of small, medium and large is approximately scaled according to camera height in accordance with this table.

Camera Height	“Small”	“Medium”	“Large”
< 0.5m	0	5cm (2”)	>10 (4”)
0.5m – 1m	0	10cm (4”)	>20cm (8”)
>1m	<5cm (2”)	15cm (6”)	>30cm (12”)

On initial set up the default will be medium, though crop size is saved from the previous session regardless of which configuration was last used.

Crop width

Determines the row width over which the machine expects to find crop plants and relates to the pair of dotted lines drawn either side of crop rows when in work. If the lines are too narrow, cutting through the plant rows as seen on the live image, plant material falling outside the lines is in danger of being classified as weed. If the lines are set too far apart the system is more likely to miss weeds growing close to the row.

Crop height and width from the previous session are remembered regardless of which configuration was used.

Row Boundary

Toggles the type of within the row operation that is desired. The “Hard” boundary setting prevents spraying between the dotted crop width lines as set above. The “Soft” boundary allows weed targets that lie within the crop row width boundary to be tracked and sprayed.

Configuration

Allows users to select between alternative pre-programmed configurations when going to work on crops with different planting geometries requiring different templates. The main parameters of the chosen configuration are displayed towards the bottom of the screen, they are:

Camera

Viewing – No. of rows used for tracking,

“Spacing” - spacing between rows being viewed.

“Height” - Distance vertically from lens to ground when in work

“Look ahead” – Horizontal distance in the ground plane between a point vertically below the camera lens forward to the centreline of sight (cross hairs in Manual image).

“Ahead of nozzles” by - Horizontal distance between a point vertically below the camera lens back to the nozzles. (If the camera is mounted behind the nozzles this figure is negative)

Special cases:

If a configuration is created in which the number of rows is set to zero that configuration when selected will allow the machine to spot spray detected weeds without reference to crop rows. In that mode the implement will automatically steer to maintain a central position with respect to the tractor for a free-shift and disc steer configuration or in the case of a side-shifted implement the hitch will remain central.

If a suitable configuration is not available this can be created. We recommend that customers ask their dealer to produce an appropriate configuration. However, experienced users can use the configuration editor ([Section 10](#)) to create their own.

Threshold

Sets a sensitivity level for picking up weed foliage. Normally set to 35 and we recommend not adjusting this unless advised by an expert.

Minimum target size

Sets the size threshold below which weeds will not be sprayed. This setting is useful where there are significant numbers of small weeds that can be controlled by other means and for which the spot application of herbicide presents an unnecessary risk to adjacent crop plants. Care should be taken to not set target size excessively small (e.g. <1.5cm) as this could cause unnecessary spraying.

Coverage

Determines the percentage of a target weed’s detected leaf area that the machine will attempt to spray, or for coverage values above 100% a linear margin (cm) around the detected leaf area to be sprayed.

For systemic total herbicides (e.g. glyphosate) applied at high concentrations it is not necessary to cover 100% of weed area, typically 50% or even less is usually adequate. The minimum number of nozzles that need to be turned on to achieve the desired coverage is calculated. It will also ensure that these nozzles are turned on slightly late and off slightly early so that herbicide is

applied to the centre of the weed, minimising the risk of off target contamination. The nozzles have a minimum on time that corresponds to approximately 3cm of forward motion and so coverage is likely to be higher for very small weeds.


It is possible to set coverage to greater than 100% and create a margin, which will result in some area being sprayed around the target. This may be useful spraying selective herbicides with a contact action requiring complete coverage for full efficacy.

6.3 Advanced set up & diagnostics screen

This screen is reached from the setup screen by pressing the top right touch screen button labelled with a spanner ++ symbol.



Navigation is similar to that used in the set-up screen.

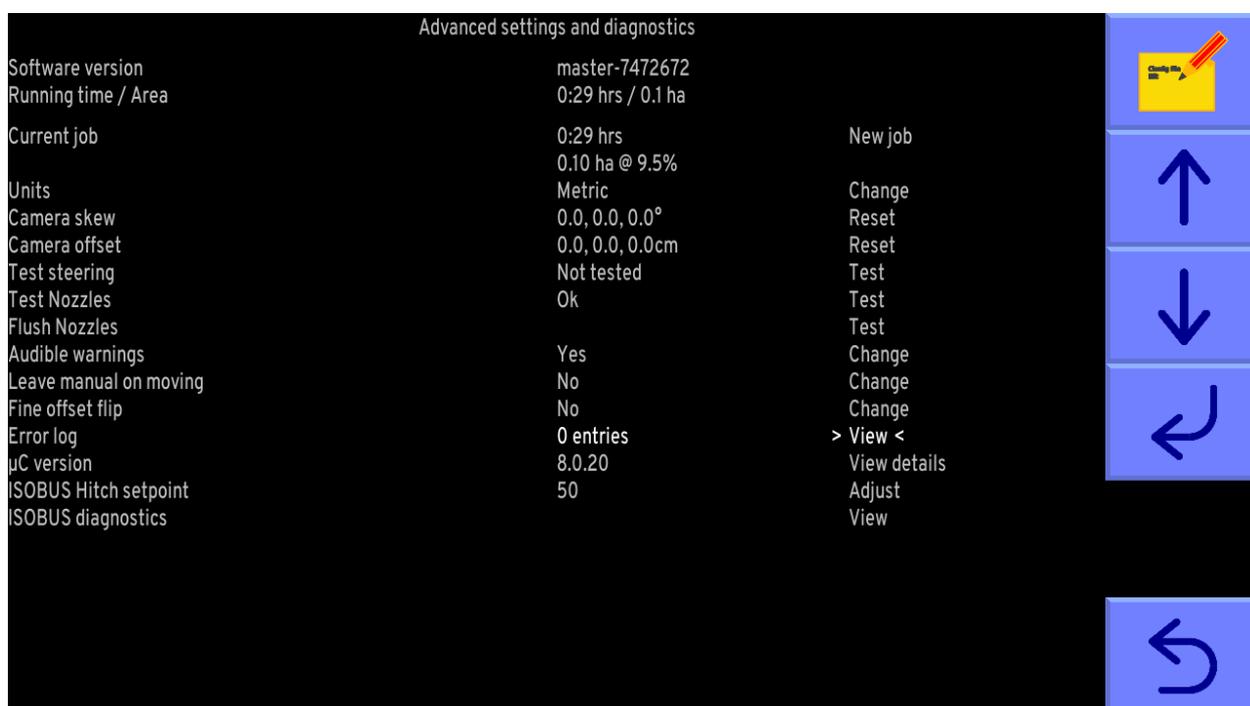

The first three items are for information only and cannot be changed by the user. Area worked is based on distance x width.

The remaining items on this screen are as follows:

Current job

Provides resettable counters for elapsed time, area treated and the percentage of total area sprayed.

Units

Selecting toggles between metric and imperial units. This change affects all user screens and the configuration editor.

Camera skew

A measure of camera angular misalignment in the horizontal plane. This angle is automatically estimated during field running. Rate of change is highest during initial runs and after resetting to zero. It stabilizes after approximately 100m. During this initial learning phase, it is sometimes necessary to readjust the fine offset ([Section 8 Step 3](#)).

As camera skew relates to a particular camera poise it is necessary to reset it to zero manually and allow it to estimate a new value each time the camera is moved. Small lateral camera adjustments by sliding within the stroke of a camera bracket should not however require a reset, as camera poise should not be significantly affected. A reset to zero is achieved by highlighting reset and pressing the return button.

Caution

After resetting camera skew it will probably be necessary to adjust fine offset.

Camera skews more than 3 degrees indicate poor alignment requiring improvement.

Camera Offset (only present with multiple cameras on the same section)

Camera Offset is the lateral error between two or more cameras fitted to the same section. Like skew it is estimated during field operations. Rate of change of this estimated displacement is highest during initial runs and after resetting to zero. There are as many offsets as there are cameras on a section. The first camera is master/datum from which offsets are derived and so it always has zero offset.

The purpose of estimating lateral misalignment and automatically compensating is to avoid the need for very accurate mechanical setting up.

Camera skew influences camera offset so that resetting skew resets both figures for all cameras fitted. However, resetting offset does not automatically reset skew.

Test steering

This function checks a number of components and settings relating to side shift or steering angle movement. Included are micro-controller communication with the main computer, direction of hydraulic flow, rate of flow, side shift/disc potentiometer connection polarity and continuity over the stroke. A successful steering test should return a message of **“OK”**. The test also detects mechanical obstructions preventing the expected full travel which result in the message **“Hit stop”**. This is achieved by exercising the hydraulic cylinder and recording the response. It is therefore necessary to turn the hydraulic supply on. For multi section machines you are prompted to select which section to test. This test also serves as an initial calibration of steering direction (when viewed in the direction of travel) through a series of questions on screen. If the module DIP switch settings indicate a proportional valve is fitted it will calibrate the side shift to the target rate entered in the configuration (0.1m/s default).

Caution

Ensure steering mechanism is clear of obstructions and people before running.

Test Nozzles

This test presents three options from a pop up menu. (Leakage and blockage tests require condition monitoring to be installed):

Visual Test – Turns all nozzles ON individually in mapped order for one second each in a continuous cycle.

Leakage Test –Spray lines are pressurised and pressures monitored to identify drops in pressure that could indicate leaks or nozzles stuck in the open position. If leakages are detected, spray bar address information on the detected leak will be displayed.

Blockage Test –Spray lines are pressurised, and nozzles individually opened. Pressure decay monitored is to check for blockage or incomplete opening. If blockages are identified, affected nozzle channels will be displayed.

Flush Nozzles

Activates alternate nozzle channels for one second then switches to the other half for one second in a continuous cycle.

Note

A weak spray during a flush nozzles test could indicate insufficient pump flow capacity.

Audible Warnings

When selected “Yes” a buzzer inside the console sound when warning symbols such as the poor tracking symbol appear on the working screen. The default is “Yes”.

Go to manual if lost (Inter-row only)

When selected “Yes” control will be switched to manual if the system is unsure of row position and the buzzer will sound for four seconds. If “No” is selected it will attempt to relocate the rows and continue vision guidance. The default is “No”.

Uncertainty Threshold (Inter-row only)

This setting is only applicable if “Go to manual if lost” is set to “Yes” and allows the user to adjust the level of guidance uncertainty to be reached before entering “Lost” mode whereby the guidance is set to manual mode.

When in this “Lost” manual mode, guidance uncertainty is still monitored, and guidance can be automatically resumed if the setting of “Auto-resume” is set to “Yes”.

Larger uncertainty threshold values result lower sensitivity of guidance doubt before entering “Lost” mode.

Lower uncertainty threshold values result in greater sensitivity meaning that “Lost” mode is entered more easily.

Note:

As default an uncertainty threshold of 25mm is set, it is not advised to set uncertainty threshold below 10mm or above 40mm.

Auto-resume (Inter-row only)

When set to “Yes” allows for automatic reengagement of camera guidance when the guidance enters “Lost” manual mode. Auto-resume monitors uncertainty while in “Lost” manual mode and once the level of uncertainty drops below the threshold for long enough that camera guidance can be carried out the system will reengage camera guidance automatically.

Centre when entering manual

When selected “Yes” the side shift or steering discs will centralise whenever manual is selected. If “No” is selected the side shift or discs will stay in their current position until a manual steering input is made. The default is “No”.

Auto select feelers (Inter-row only)

This setting is only shown if mechanical crop guidance feelers are fitted. When selected “Yes” automatically drops from vision guidance to feeler guidance when one of the feelers is deflected. The default is “No”.

Side slope compensation (an optional experimental feature)

This experimental function is intended to automatically apply a lateral offset to compensate for sides slopes. Please [contact us](#) if you wish to try this feature.

Enable fine offset flip

Selecting “Yes” adds a touch button on the working screen below the fine offset bar with opposing arrows which when touched flips fine offset direction. The default is “No” and should only be changed for work on side slopes or in cross winds.


Error log

Is a log of automatically generated error messages (e.g. camera connections, microcontroller connections and excessive camera skew). Selecting “view log” displays single line messages that can be helpful with diagnostics. Not all messages indicate serious faults. On exit you have the option to select “clear” which erases messages or close which returns to the advanced set up & diagnostics screen without erasing. These messages are saved between sessions.

Tip
When seeking advice over the telephone it is very useful to have an exact word for word record of any error messages and to make a note of numeric error codes.

µC version


Displays the version numbers and allocated CAN address IDs of any microcontroller boards fitted. To exit the status and diagnostics screen press the bottom right touch screen button labelled with a loop back arrow.

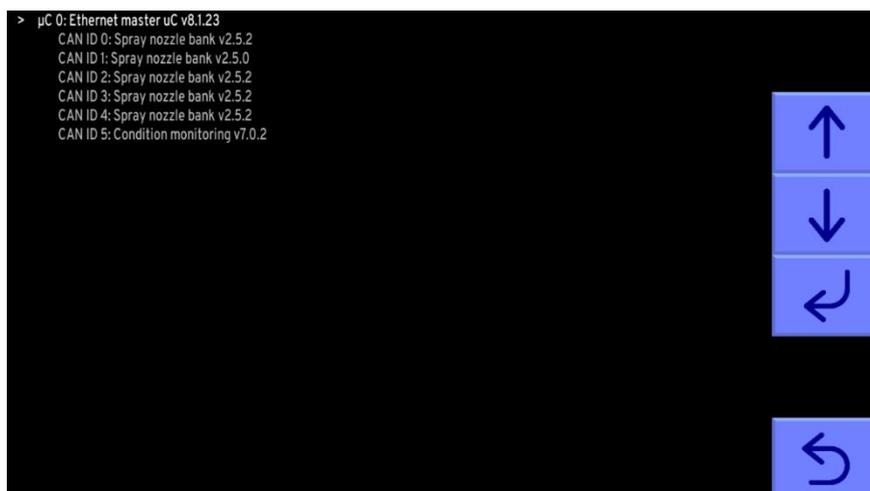

ISOBUS Hitch Setpoint

This utility provides a means of adjusting the hitch transition point between in-work and lifted out of work. The green vertical bar is a live representation of tractor hitch position read from the ISOBUS. Pressing the “Set” button changes the transition point to the current hitch position, which is then displayed as a percentage of full stroke at the base of the bar.

Hitch setpoints are retained between sessions.

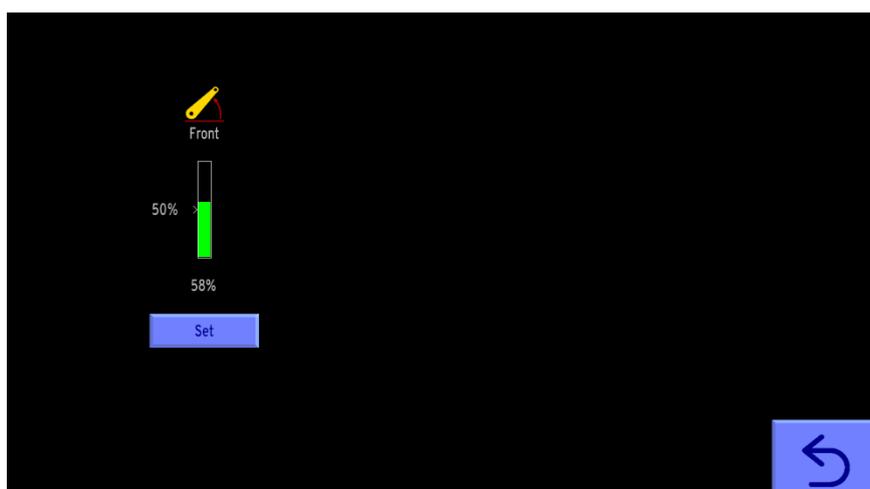

ISOBUS Diagnostics

This utility allows for observation of live ISOBUS data. Useful in ensuring that connection between tractor and implement has been achieved and sensor data is available for implement operation.

```
T&H ISOBUS TECU CLIENT - DIAGNOSTICS
NAME A0368400A7600000, address FE, state PASSIVE

SA Manufacturer      Function      Messages RHitch FHitch WSpeed GSpeed
-----
B0 AGCO              Tractor ECU   3898  57.2%  58.0% R2.1m/s
FE N/A              Bus Management 1
```



Note

Hitch setpoint and ISOBUS diagnostics are only applicable for implements fitted with ISOBUS connectivity.

7. Initial testing in the yard

Step 1 – Start the tractor and console

With the implement still on the ground check that hydraulic spool valves are in neutral and all persons are well clear. Start the tractor, switch on the console and enter the working screen.




If the implement is lowered to its normal working position the “stopped” (red brake) symbol should be displayed on the working screen and the speed bar should read zero.



Taking care to ensure that the hydraulic supply is off, spinning the odometer wheel (if fitted) should register a green speed bar

Lift the implement clear of the ground. The side-shift should centralise and the “stopped” symbol replaced by the “Lifted” (yellow lift arms) symbol.

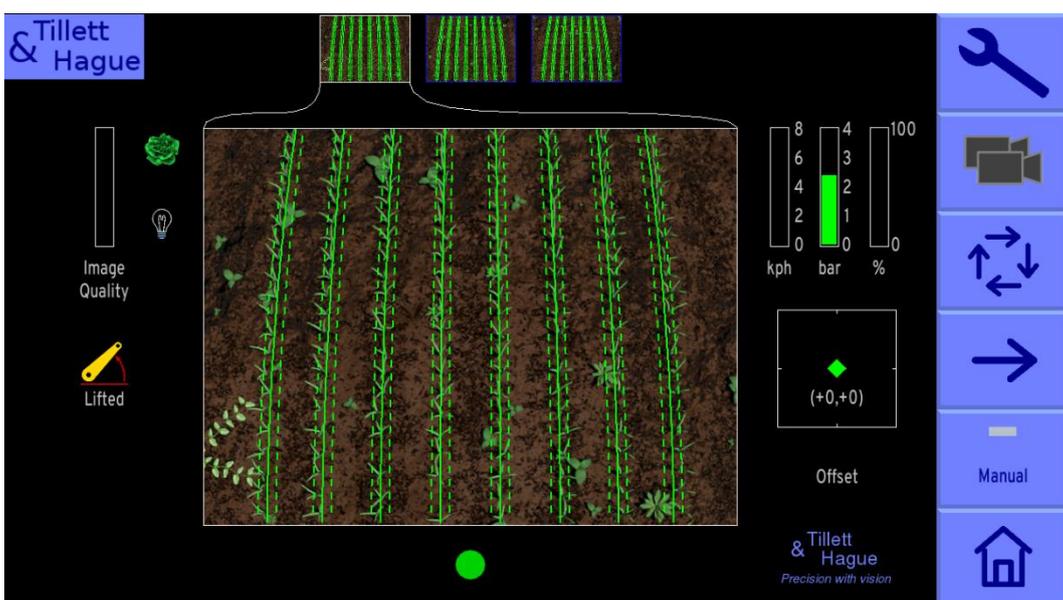

Console working screen showing the implement is lifted and centred

Step 2 – Checking hydraulic steering operation (for Non-Proportional directional valves)

If adjustment is available, set the tractor's hydraulic flow rate to an appropriate level, typically 5 to 10% of full flow.

With the guidance system running, lift the implement clear of the ground and engage the hydraulic supply. Be ready to disengage immediately should a fault occur.

From the working screen touch the top right "spanner" touch screen button in the working screen. Touch in the same area again (this time marked by a spanner++ symbol) to reach the advanced settings and diagnostics screen. Use the arrow buttons to move the cursor down to "Test steering" and touch on the return button to start an interactive process that will set up the steering and prompt you should any adjustments be required. Left and right are defined when looking forward in the direction of travel.

At the end of the test the side shift or steered discs should centralise.

If you wish to test steering manually return to the working screen using the loop back button and touch on the button labelled "Manual". The hydraulic side shift/steering is now in manual mode and can be operated using the touch screen buttons labelled with left and right arrows. Each press of a button steps the side shift/steering by 1cm/2°. Repeated pressing and releasing (but not holding) will result in continuous travel up to the end of the stroke denoted by a red vertical bar. This procedure can be used to check that hydraulic flow is in the correct direction and that side shift rate is correct. A normal side shift rate would be 0.1m/s (e.g. 3s to travel a 0.3m stroke). To return to normal automatic mode press the same button again. The side shift/disc will stay in the position it was placed under manual control until the implement is lowered and raised again, or the machine starts to travel forward.

Caution

- Side shift/disc travel all the way to one side on lifting the implement may indicate that the hydraulic supply is connected the wrong way.
- Rapid side shift/disc oscillations back and forth about the central position indicates that the hydraulic flow rate is too high. The tractor flow control should be turned down. Alternatively, if fitted the hydraulic flow control valve on the implement may be adjusted.
- "Reverse oil flow" message can sometimes be falsely triggered by side-shift hydraulic flow control being fully closed.
- For safety only adjust the flow control valve with the implement on the ground and the tractor engine switched off.

Step 2 – Checking hydraulic operation (for Proportional directional valves)

The procedure for proportional hydraulic operation is the same as for a non-proportional valve except that sequence movements initiated by the "Test steering" function includes an additional full stroke movement to calibrate steering speed.

If the steering test with a proportional valve does not behave as expected check that the circuit board inside the implement module is version 1.2 or higher (see white silkscreen text at top right) and that switch No.1 of the 10-way DIP switch is ON (up position).




Step 6 - Camera set up by measurement

If you wish to set cameras up in the factory or yard without reference to crop rows you can do this with two simple measurements as follows:

From the working screen go into the “set up” screen by touching the spanner button. Select the configuration you require using the arrow buttons (the text will change colour or brightness when selected). Make a note of distances called “look ahead” and “camera height”. ([Section 8 Step 1](#))

Having checked that the implement is fully lowered and at its normal working depth adjust camera height so that it matches the figure given in the configuration. Now mark a point on the ground directly below the camera lens (ideally using a plumb bob). From that point measure forward along the ground and place an object at the “look ahead” distance as illustrated in the diagram below. Return to the working screen and select manual mode. Purple cross hairs will appear in the image. Adjust camera inclination so that the cross hairs align with the object placed at the “look ahead” distance.

The camera is now correctly aligned.

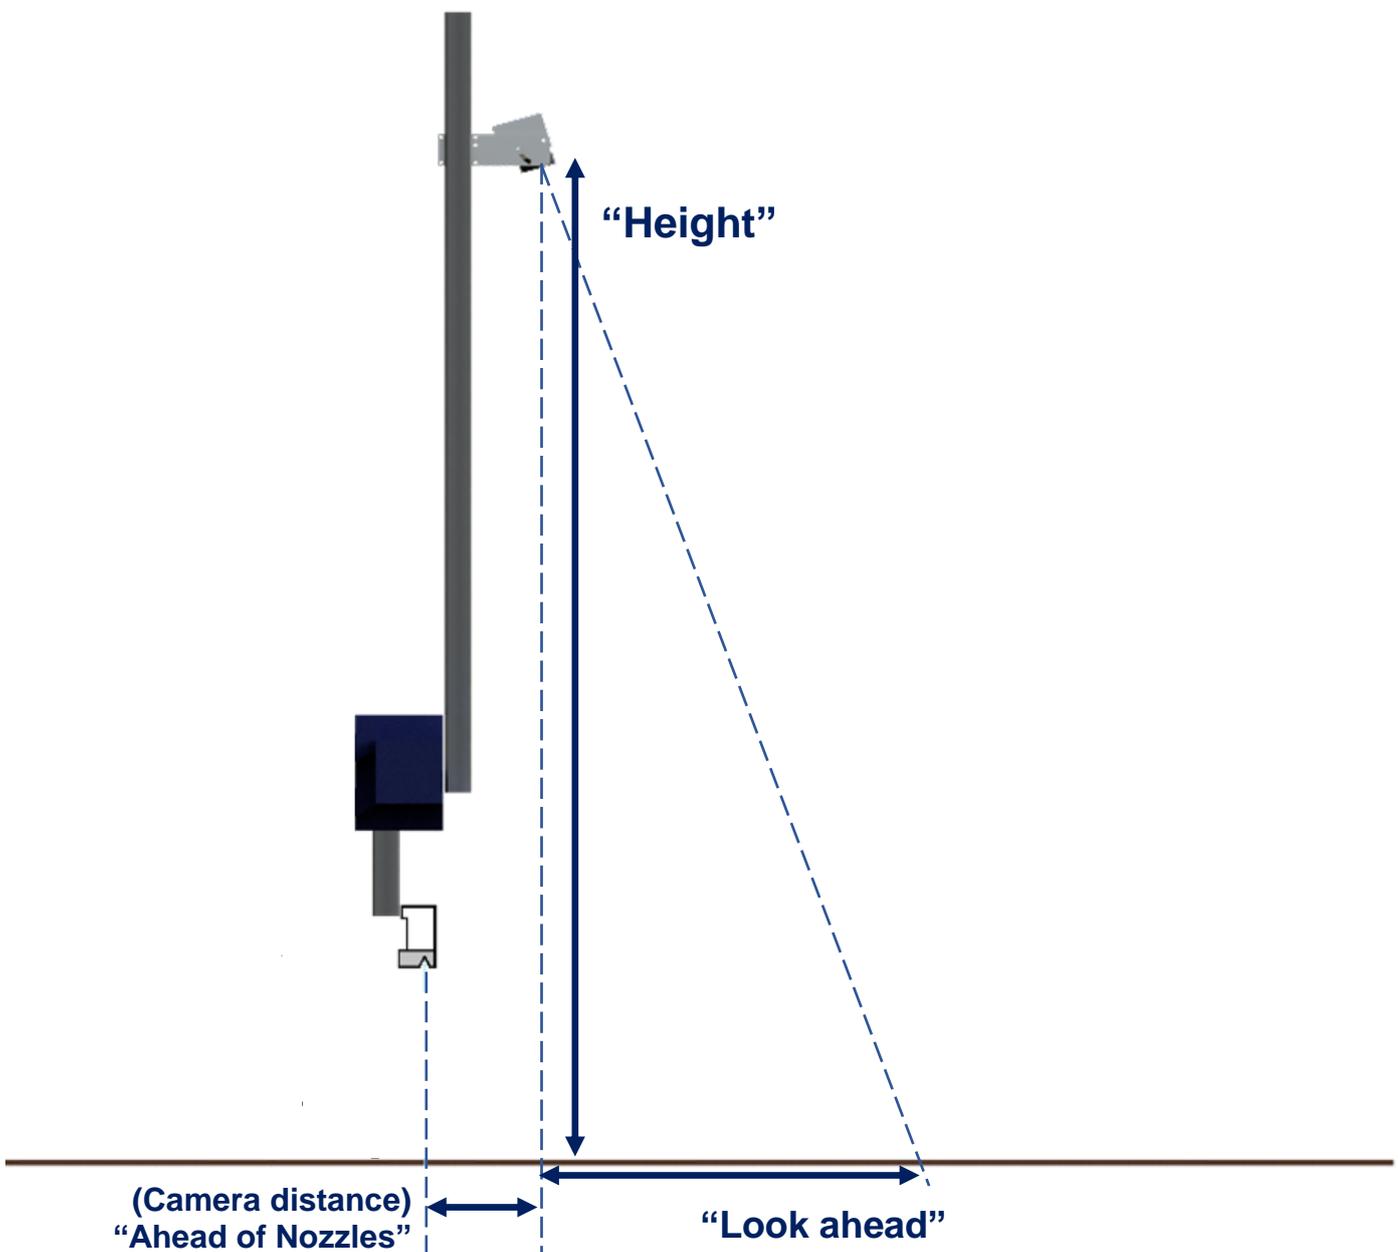

Note: Remember to tighten any bolts loosened in the process of adjustment.

8. Getting to work in the field

For initial running we advise running with clean water. For these first three steps you have the option to run in either in interrow (if installed) or spot spray mode. Any adjustments such as lateral offset made in inter-row mode will also apply when running spot spraying mode using the same configuration.

To ensure good guidance is very important to match the template representing expected planting pattern with crop plants as they appear in the live video image. The following steps outline how to get the best match and hence achieve good guidance.

Tip

It is critically important that the drill used for crop establishment is setup symmetrically and with high accuracy (<5mm). Growers should set their drill up with the same care they would take if they planned to undertake high precision inter-row cultivation, even if it is not their intention to control weeds in this way.

Tip

For the first few hundred meters of running after commissioning the guidance system learns a term that compensates for minor errors in camera orientation. Wherever possible we recommend that set up runs ([Step 3](#) below) are conducted in crop showing the clearest rows available so that this term, known as camera skew, is learned as quickly and accurately as possible. High visibility rows also help manual alignment checks ([Step 2](#)). We also recommend that side slopes are avoided during initial running. Once set up is complete more challenging situations can be tackled. It is also possible to view camera skew and reset it manually (see [Section 6.3](#)).

Step 1 – Selecting configuration and crop size

From the working screen press the button labelled with a spanner symbol. This switches the display to the setup screen.


Use the up down arrow key to move the cursor onto correct line and use the horizontal arrow keys to select an option or adjust a value.

Adjust Settings:

Crop height	Small ~0cm	Medium ~15cm	Large ~30cm
Crop width	3.0cm		
Row boundary	Soft	Hard	
Configuration	BEANS	NOROWS	ONIONS
Threshold	35		
Minimum target size	20mm		
Coverage	> +20mm <		

Camera 0:	Camera 1:	Camera 2:
8 rows @ 20.0cm	8 rows @ 20.0cm	8 rows @ 20.0cm
Height 2.40m	Height 2.40m	Height 2.40m
Look ahead 0.70m	Look ahead 1.00m	Look ahead 1.21m
Ahead of nozzles by 0.42m	Ahead of nozzles by 0.08m	Ahead of nozzles by -0.07m

The top line of this screen indicates crop size (height) settings under categories of small, medium and large. The heights assigned to these labels vary with camera height and are displayed. Ensure that the highlighted option corresponds to the crop you are running in.

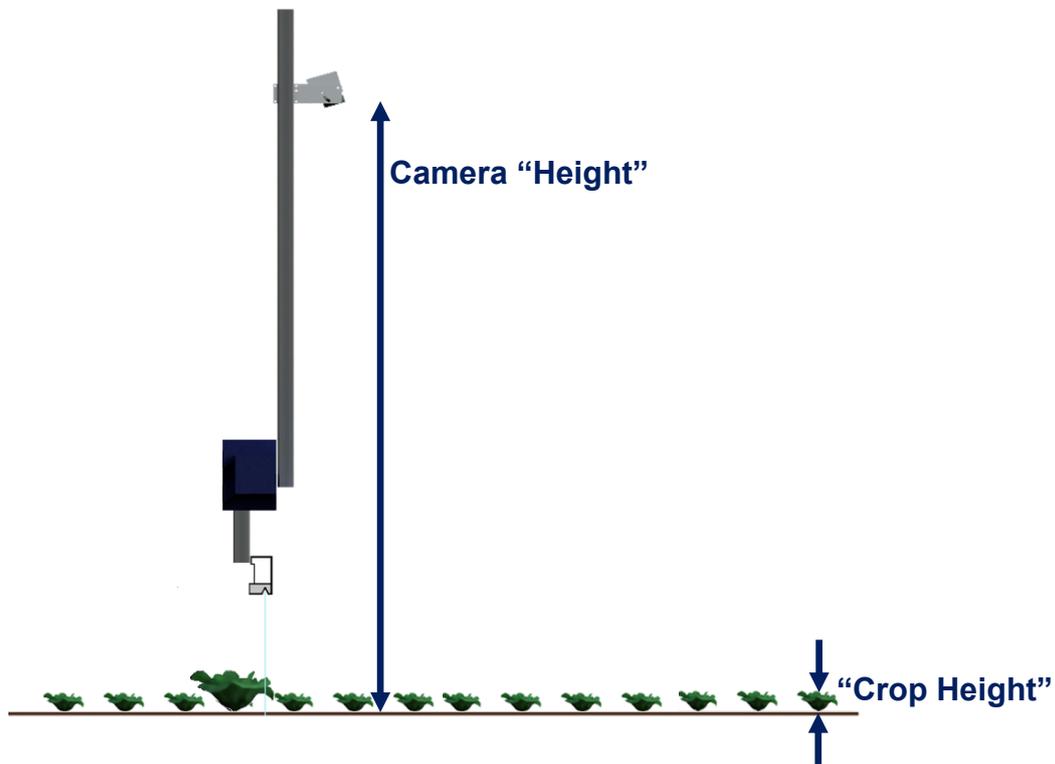

Check selected configuration settings displayed at the bottom of the screen match crop geometry. E.g. that the number of rows viewed by the camera corresponds to the number being tracked and that row spacing on the ground correspond to the numbers on the screen. Also make a note of the three dimensions for "Height", "Look ahead" and "Ahead of nozzles by". These are particularly important parameters for spot spraying as they effect the timing of nozzle operation.

Ensure that selected configuration settings match the number of cameras fitted.

If either crop or implement geometry do not match the selected configuration settings, select an alternative configuration. If a suitable configuration does not exist refer to [Section 10](#) for instructions to create one.


The remaining lines relate to spot spray parameters. At this stage all you need to do is to set the last parameter "Coverage" to 0%, which will turn off spot spray nozzles for initial running. This allows the operator to concentrate on lateral alignment before introducing spot treatment.

To return to the working screen press the bottom right button with a loop back arrow.


Step 2 – Checking camera height and inclination angle in the field

Draw into the crop and set the implement down onto a typical section of crop row. The implement should be level and set onto the rows as accurately, and as straight as possible with the camera at its normal operating height (as displayed in the "set up" screen).

Centralise the fine offset gauge so that the indicator is a diamond shape in the centre.

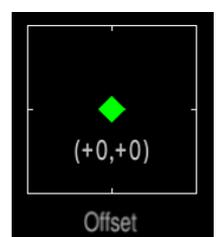


Press touch screen button labelled “Manual” to enter manual mode, The overlaid green lines representing the template should lock in the centre of the screen with no tracking crosses down the centre.

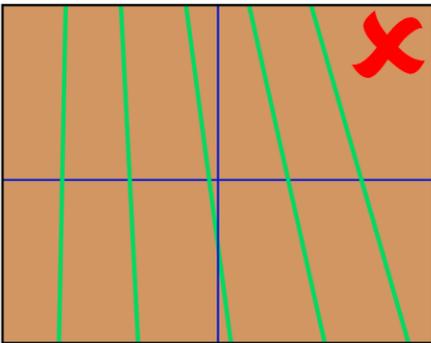


If the overlaid green lines are not symmetrical on the screen (by more than 3 degrees) the camera skew value may need resetting from the advanced set up & diagnostics screen as described in [Section 6.3](#).

If multiple cameras are fitted and the green template lines are aligned with the blue cross hairs in the left most camera but are laterally offset in any additional camera(s), camera offset may require resetting from the [advanced set up & diagnostics screen](#).

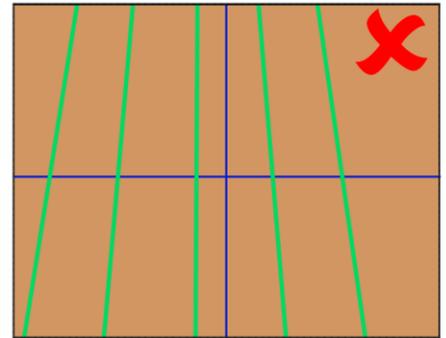

If the overlaid green lines are offset laterally from the real crop rows move the camera(s) laterally until they are aligned.

Green lines superimposed over the live image should match the crop rows as illustrated below.

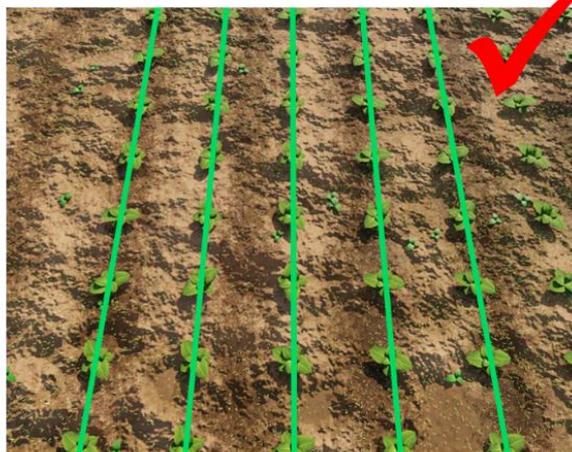

Tip
If crop rows are difficult to see in the live video image you can enhance them by placing high visibility objects such as a strip of wood exactly over the row centre line.

If the green lines appear narrower or wider than the real crop rows check the “crop size” selected in the “set up” screen and change if appropriate. If this does not resolve the problem, it may be that the camera height (measured from centre of lens to ground level) does not match the figure displayed in the “set up” screen. The best solution is to measure the correct position and move the camera accordingly. If the discrepancy is small a less accurate, but sometimes satisfactory alternative, is to adjust camera height until the “picture” looks correct as illustrated below:

If template lines do not line up with the real crop rows in the live video image it is possible to make minor adjustments to camera orientation by eye to obtain a good match as explained below. This form of adjustment by eye is acceptable for inter-row guidance and should give good results. However, for spot spray operations if you change camera orientation you will need to remeasure

camera “Height” and “look ahead” as they effect the timing of in-row cultivation blades and other in-row devices such as nozzles. If those parameters no longer match those in the configuration you must edit the configuration or create a new one so that they do match.



If the camera is too low, then the template will appear narrower than crop rows. In this case raise the camera.

If the camera is too high, then the template will appear wider than crop rows. In this case lower the camera.



If the template matches mid screen, but not at the top or bottom, check that the implement is level. If it is, camera inclination angle may need adjusting.




If template lines appear narrower than crop rows at the top of the image but wider at the bottom, rotate the camera up so it views further ahead.

If template lines appear wider than crop rows at the top of the image but narrower at the bottom, rotate the camera down so it views less far ahead.




Best tracking will be achieved when template lines are centred on all the rows being tracked.

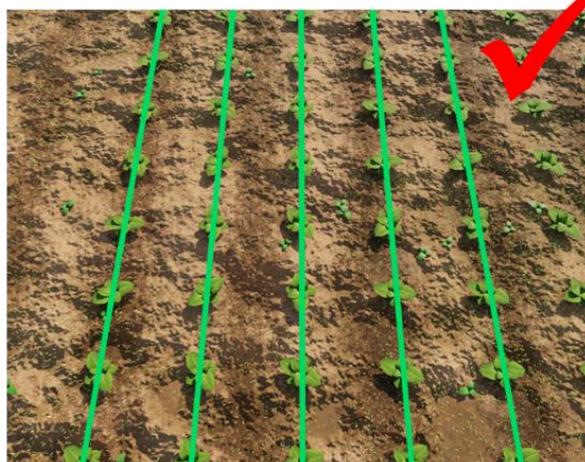

Step 3 – Initial running and adjusting camera lateral position

When you are happy you have a good template match press the touch screen button labelled “Manual” to resume camera guidance. You can be sure that the machine is ready for tracking if a line of blue crosses has appeared down the centre of the display. Green lines will also be laid over and track individual crop rows.

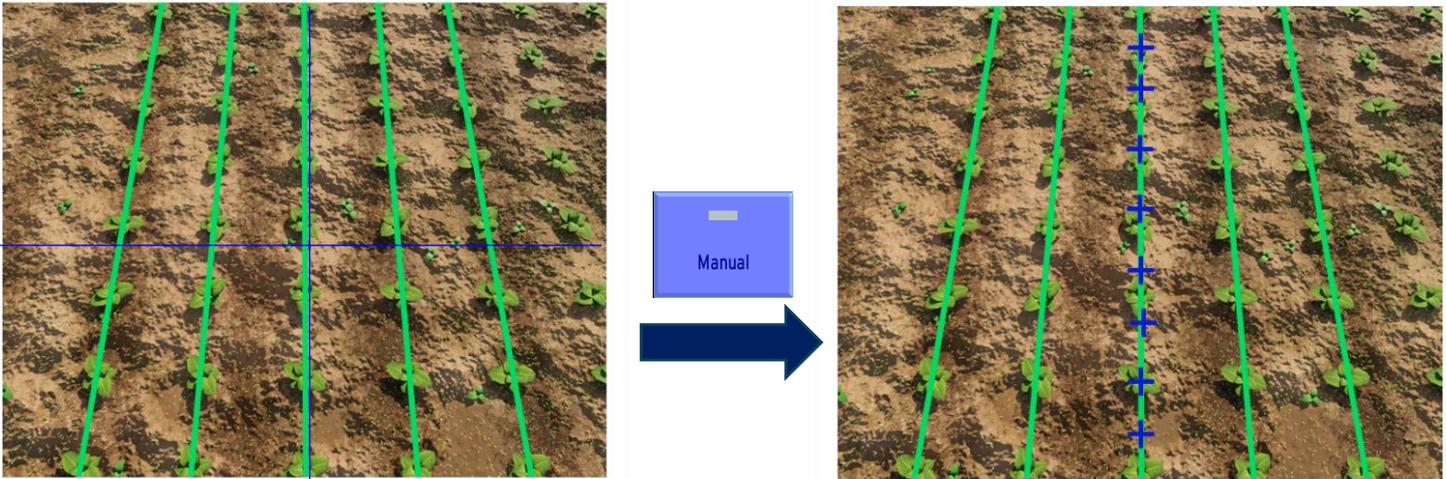

Note

For initial runs almost all the crosses should be coloured blue and form a relatively straight vertical line. If this is not the case, or a triangular tracking warning symbol is displayed, either the machine is not correctly set up, or crop rows are not sufficiently well defined for initial running.

If tracking appears good set off slowly. The implement should quickly align with crop rows. It is likely that after a short distance it will have settled at a small lateral offset. Small offsets can be corrected using the fine offset facility. Touch screen button labelled with left and right arrows adjust fine offset. Each press of an arrow key biases the side shift in steps of 1cm (3/8”). Continue down the field stopping occasionally to check lateral position. If the required fine offset exceeds the available number of steps the camera should be physically moved as described below and step 3 repeated.

It is the operator's responsibility to decide at which point the vision guidance system becomes 'lost'. If the system losses track of crop rows the operator should carefully guide the implement through to the next good reference.

Tillett & Hague Technology Ltd accept no responsibility for damage to or loss of crop whatsoever.

After approximately 100m of running alignment (“camera skew”) should have been learnt and lateral bias stabilised. If fine offset is greater than two steps, we recommend physically moving the camera along the tool frame by the equivalent distance and resetting fine offset to zero.

Tip

If fine offset is set to the left, then the camera should be moved right as viewed from behind looking forward.


Once you are confident tracking is accurate and reliable, forward speed can be increased.

Tip

When setting up a multi-section machine it is advised to treat each section and its associated cameras as a separate machine and perform individual setup of each section in turn.

Step 4 – Running with nozzles operating

Once you are confident that the machine is tracking laterally accurately and reliably you can setup to spot spray.

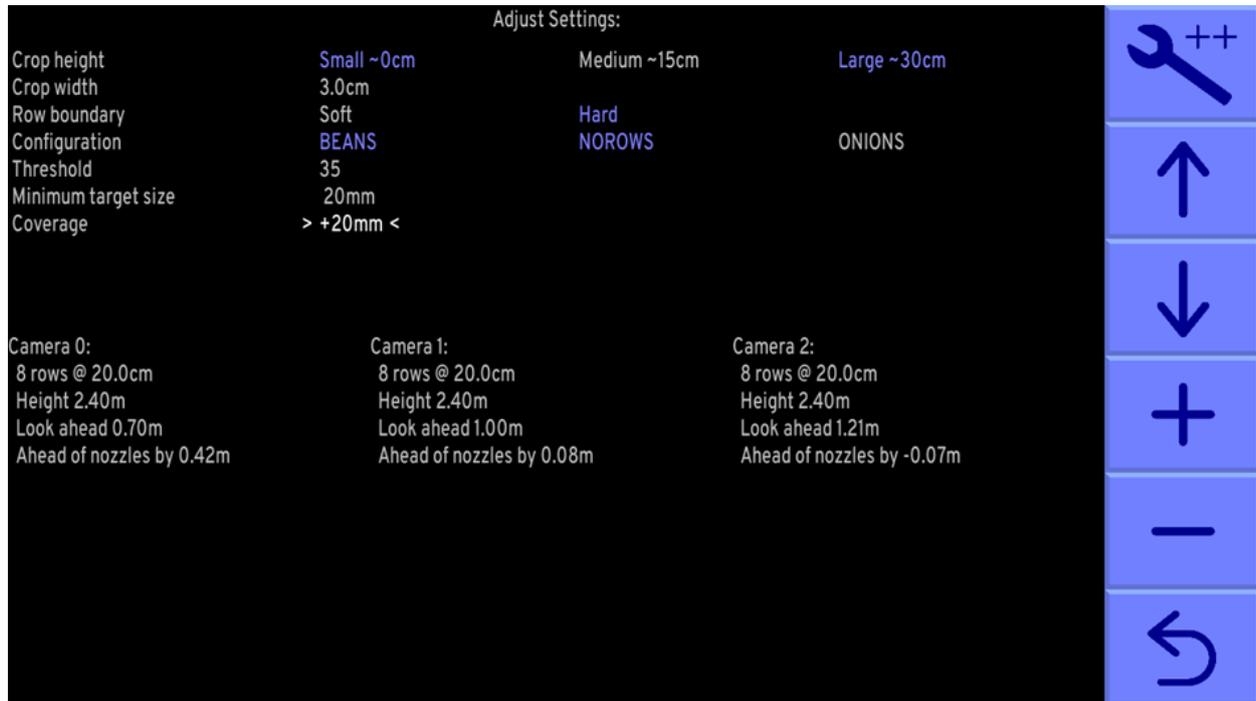

From the working screen press the button labelled with a spanner symbol to return to the setup screen to set the spot spray parameters. A full description of these parameters are given in [Section 6.2](#), but are briefly recapped here.

Crop height – As set previously.

Crop width – sets the outer limits of crop foliage depicted by overlaid dotted lines either side of the row.


Row boundary – toggles between two options “Hard” and “Soft”. Hard prevents spraying of weeds falling within crop width lines. Soft allows spraying of weeds falling within crop width lines.

Configuration - As set previously.

Threshold - Normally set to 35 and we recommend not adjusting this.

Minimum target size - should be set to reflect the size of the weeds you want to treat. It should be borne in mind that if it is set too small and there are a number of small weeds that do not need treating the sprayed area will be unnecessarily large.


Coverage - sets the % of an individual weed’s area that you wish to spray. For coverage above 100% the scale automatically switches to a linear margin around weed area, entered in cm. For systemic total herbicides such as glyphosate you may wish to set coverage below 100% to reduce overspray. For selective herbicides where a margin around the weed may be beneficial to maintain efficacy, coverage may be set above 100%.

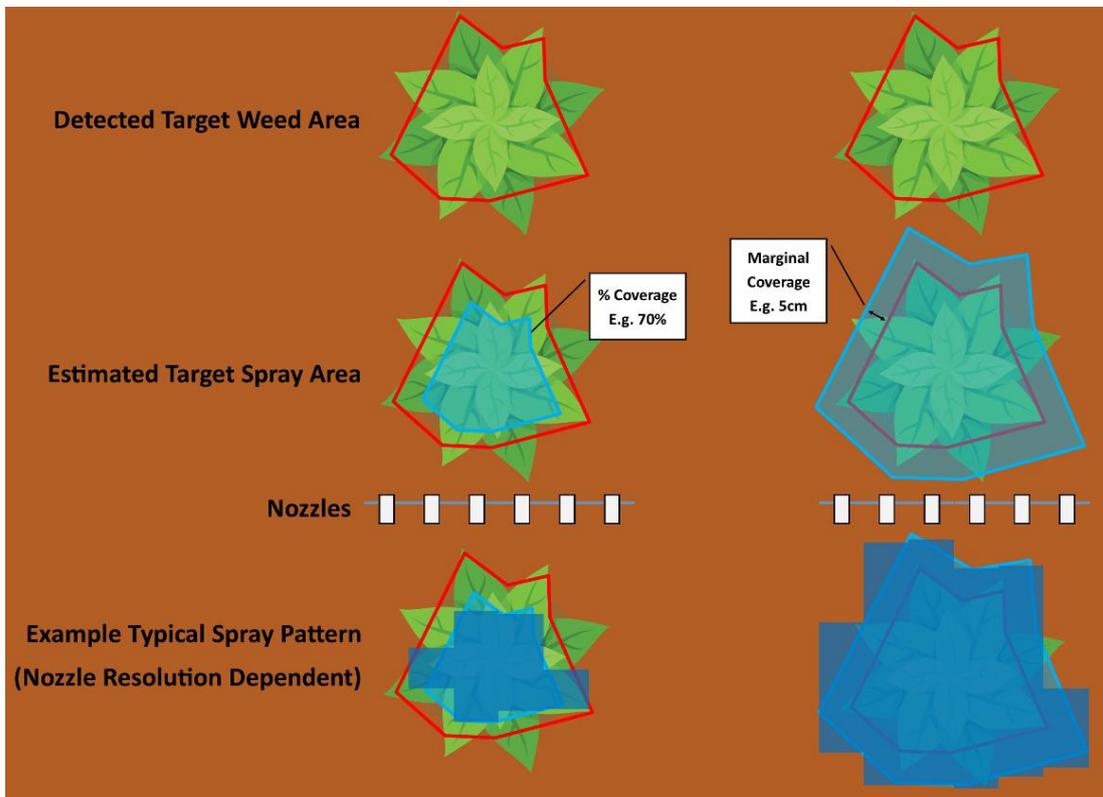

Ensure that the fine offset position in the fore and aft direction is central (see [Section 6](#)) and place the implement down.

Tip
 Arrange for the test crop to be weed free except for a small number of widely spaced well defined weeds larger than the user defined size threshold. If necessary either manually weed a test area, or if the crop is clean, “plant” suitable weeds or green targets for test purposes. For maximum accuracy matt green tape stuck to a brown background such as cardboard provides a good test target with a relatively clear visual indication of sprayed area.

Set off at low speed. After the first few weeds have been passed the accuracy of spraying should be assessed. If nozzles are consistently turning off too late fine offset should be moved down using the down arrow. Each button press corresponds to 1cm (3/8”) of phase shift. Similarly, if nozzles are turning off too early the up arrow should be used. Multiple camera systems require fore and aft offset to be checked separately for each camera and its associated nozzles.

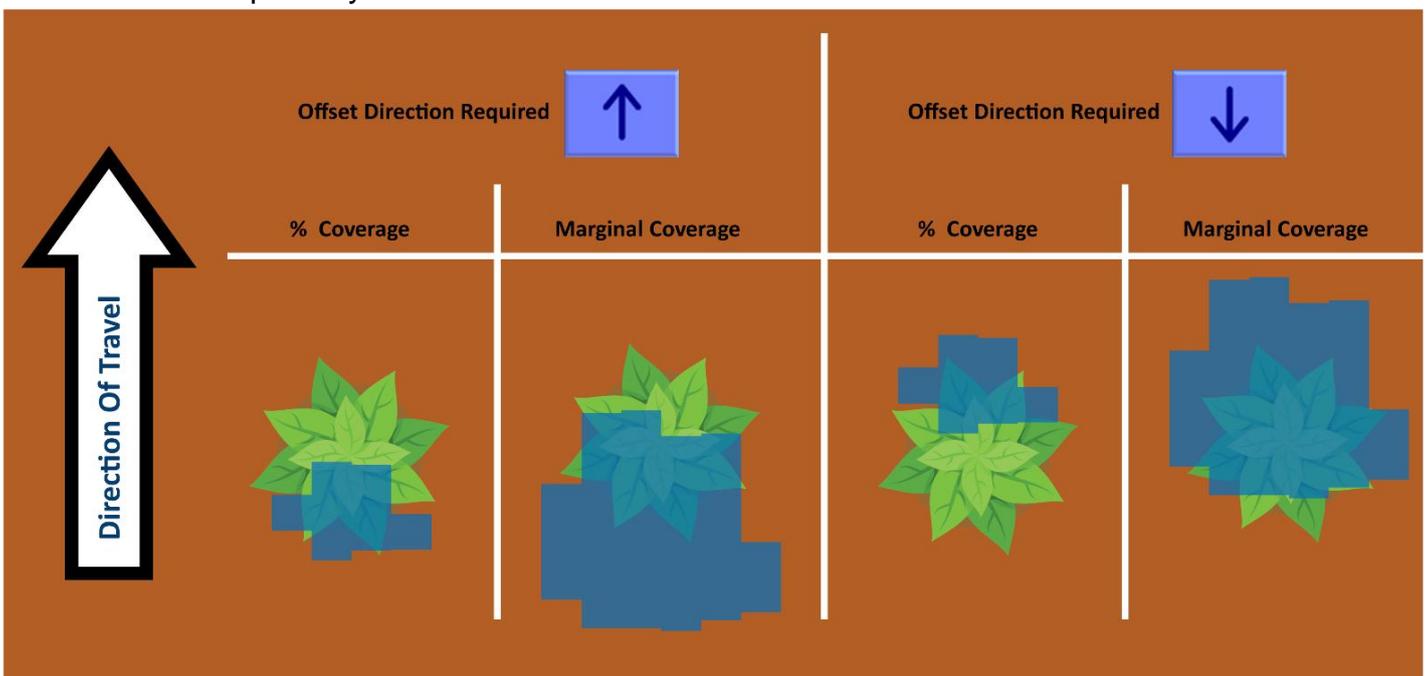

Once you are confident that the system is tracking accurately and reliably, both laterally and fore and aft, forward speed can be increased. Accuracy will reduce progressively with increasing speed. We would suggest that 4 to 5 kph (2.5 to 3.1 mph) offers a good compromise between accuracy and work rate. Excessive speed above our recommendation will be shown as a red section on the normally green speed bar.

It is the operator's responsibility to decide at which point the vision guidance system becomes 'lost'. If the system loses track of crop plants the operator should cease operation and seek to establish the cause of the problem. If necessary, your dealer should be consulted for advice.

Tillett and Hague accept no responsibility for damage to or loss of crop whatsoever.

Step 5 – Neutralising forward and backward fine offsets

Once all the nozzles are timed correctly you will probably find that the forward and back fine offset values are not central. Like lateral fine offset it is good practice to leave the customer with these at least close to zero so that they have scope for adjustment in the future.


These forward and back offsets can be neutralized in two different ways. You can either physically move the camera forwards and backwards in relation to the nozzles, or you can edit offsets in the configuration.

We will consider physical adjustment first.

It is a good idea to think of the camera and crop as a fixed datum and decide which way you want to move the nozzles to neutralize the applied offset. If the fine offset is forward shown as upward and positive in the fine offset graphic, you would want to move the nozzles forward closer to the camera.

In practice it is easier to move the camera so for a positive fine offset you would instead move the camera backwards by the same amount. For example, for an applied forward fine offset of + 3cm, the camera must be moved backwards by 3cm to compensate. Similarly, of course if the applied fine offset was negative, you would move the camera forward.

Note that it is important that all other aspects of camera alignment are maintained, and that this forwards and backwards movement is a pure translation.

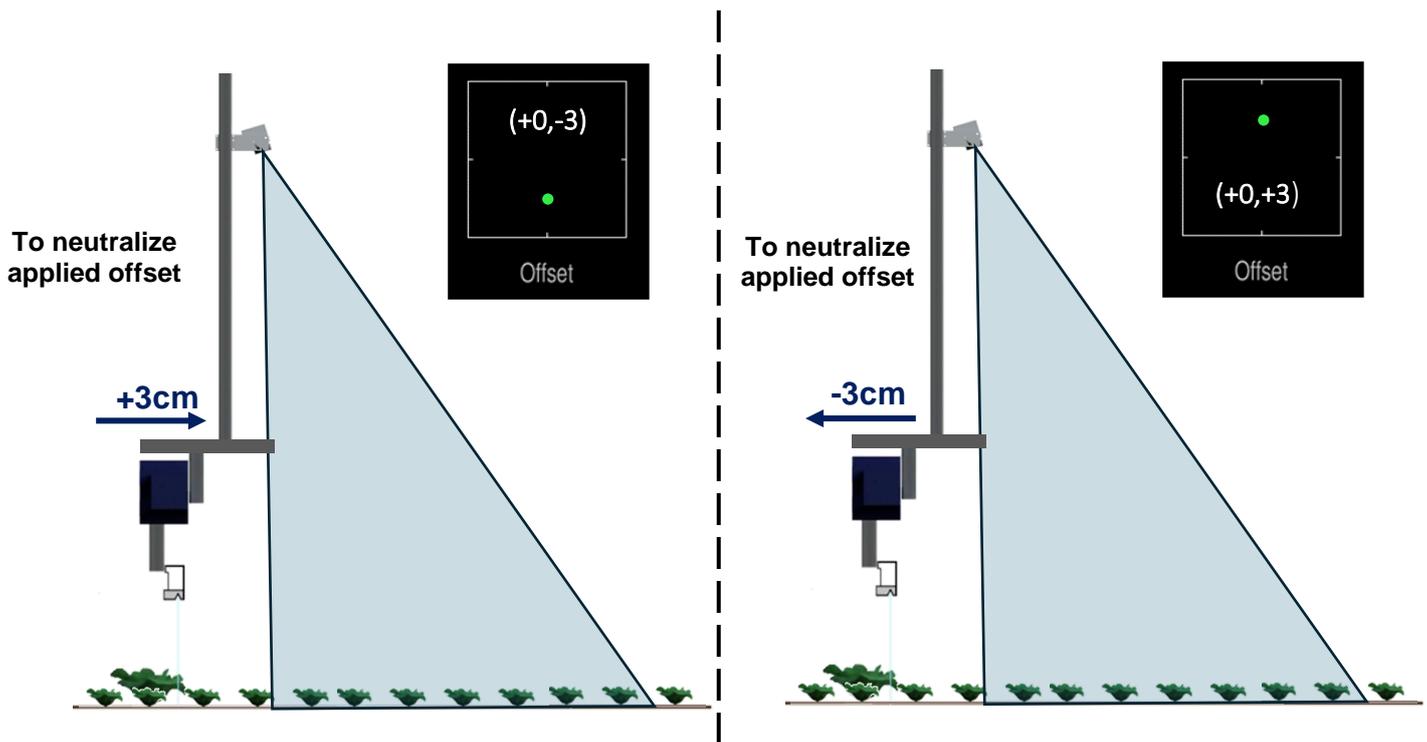

To avoid the need for physical adjustment you can instead change the camera “distance ahead of nozzles” number in the configuration to have the same effect. To take the same example, for a 3cm positive fine offset you should add 3cm to the “distance ahead of nozzles figure” using the configuration editor ([Section 10 Edit Camera Settings](#)). You can think of this as correcting for the fact that the nozzles seem to be further behind the camera than previously thought during initial set up. You are correcting for that error that rather than physically moving the nozzles. Similarly, if the offset is negative, decrease the “distance ahead of nozzles figure” by 3cm.

Once you have made an appropriate adjustment, either physical or to the configuration, you should neutralize the fine offset.

Step 6 - What to do if none of the available configurations are appropriate

If none of the available configurations are appropriate for your situation. Make a note of the relevant parameters and the name of the configuration that most closely matches your situation.

Enter the configuration editor and either edit your chosen configuration or create a copy of it to edit.

Instructions on how to edit configurations is given in [Section 10](#).

9. Notes on daily operation with a correctly set up machine

- Before operation check that electrical and hydraulic connections are secure and that there are no obstructions to side shift/disc movement.
- On first setting the implement down in the field check for each camera that the green lines line up with crop rows and blue crosses form a relatively straight line. There should be few yellow or red crosses.
- Proceed with caution for first few meters checking that displayed speed gauge matches that of the tractor's and that implement alignment is good. If performance is satisfactory speed can be increased. Spot spray performance should be satisfactory at speeds of up to 5 kph (3.1 mph). If the machine is only being used for inter-row cultivation or band spraying lateral much higher speeds (<15kph) can be achieved with adequate lateral accuracy.
- Fine offset settings are remembered from previous sessions and so there should not normally be any need to adjust this unless changes have been made to camera/spray bar position.
- Operating on side slopes will result in some lateral error due to the tractor "crabbing" across the slope. Normally this is not significant, but in extreme cases it may be necessary to use the fine offset function to compensate. If operating in this way remember to reverse the bias when heading in the opposite direction and to return to a neutral setting when stopping work or moving to a flat area.
- Each time the implement is lifted at row ends it will centralise ready for the next run.
- It is important to regularly check that the spray system is functioning correctly as its operation is not generally visible from the cab. A nozzle test function automatically check for leakages and stuck valves, but some faults can be difficult to detect and so a periodic visual check of spray patterns and spray marks on the ground is highly recommended.
- The very special spray characteristics required for spot spraying have necessitated use of valves and nozzles with smaller orifices than commonly found on agricultural sprayers. For this reason, the spray system includes an unusually fine (200 mesh) filter that should be checked regularly. It is also important to flush the system out with very clean water after use. In hard water areas it may be necessary to flush with softened or deionised water to prevent scale building up inside nozzle orifices. Although it would be beneficial to blow air through the nozzles after flushing in order to remove excess water this is not recommended as high pressure air may damage the pressure sensors.
- At the end of the day shut down the system by pressing the button on the far bottom right labelled with a house icon, and wait until returned to the start-up page. It is also advisable to discharge the hydraulic accumulator by reversing the tractor's hydraulic spool briefly. The implement's pressure gauge indicates if this has been achieved.
- At the end of the day shut down the system by pressing the touch screen button with the power button logo and the system will shut down automatically. The power button led go out but will continue to briefly illuminate every 5 sec indicating that power is still applied via the implement. In this state the current draw is negligible.


10. Configuration editor

Configurations store information relating to a specific crop planting pattern and implement/tractor geometry that is necessary for row tracking. Each combination of a different crop pattern or implement geometry requires its own configuration.

The editor allows experienced users to create and edit configurations. It is reached from the System information and diagnostics screen by pressing touch screen button labelled with a file and pen symbol. Users are required to enter a PIN to prevent accidental entry to the editor. The default is 1,2,3,4.

The editor is multilingual, though translations are not available in all languages. Where translations are not available, English will be displayed, though use of graphical symbols makes many functions independent of language

The editor uses the touchscreen for navigation and data entry.

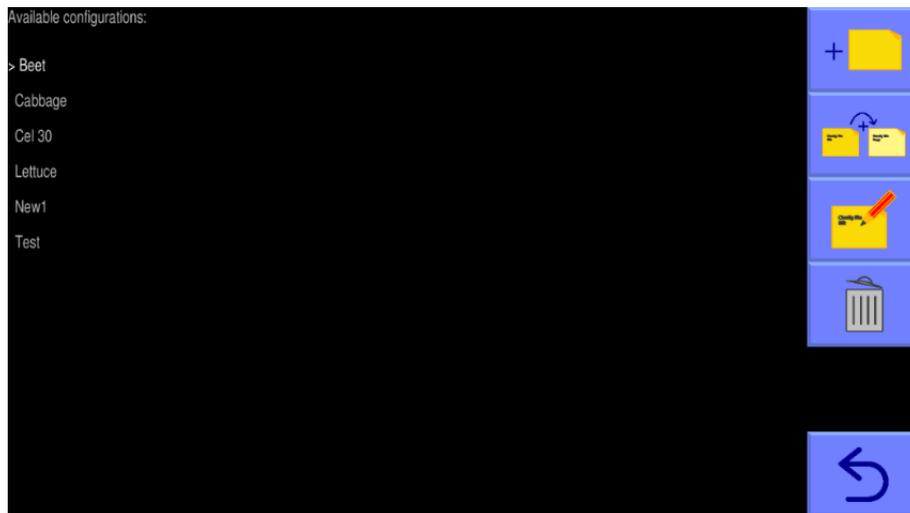

Overview of screen display and how to edit configurations

On entry to the configuration editor users are presented with a list of available pre-entered configurations. Touching on a name selects that configuration, highlights it with a change in intensity or colour and prefixes it with a “>” character.

Buttons on the right-hand side of the screen perform actions on the selected configuration, create new configurations, or change language settings.

- The top right button with a drawing of a single file and a “+” symbol creates a new configuration . **NB It is very rarely advisable for users to create a new configuration from defaults in this way. It is usually easier and safer to use the copy function (see below) to create a new configuration based on one that was factory installed and is already known to work.** If pressed users are presented with a series of choices regarding the type of machine that they want to create a configuration for. Following these choices will eventually lead to a default configuration that offers the best starting point for a new configuration. The newly created configuration will be added to the list, given the name “new” and selected ready for editing.
- The second button down depicting a two file graphic copies the selected configuration and adds that copy to the list with the name “new”. It is selected and ready for editing. This is the preferred method for creating new configurations on a working machine.
- The third button down depicting a file and a pen graphic starts the editing process on the selected configuration, presenting a list of configuration parameters that are available for editing.
- The fourth button down on the top configuration editor page depicting a bin deletes the selected configuration.

- The bottom button labelled with a loop back arrow returns to the start screen.

Note: When you next run the system you need to select the appropriate configuration as editing a configuration does not automatically select it.

Settings available from the standard editor




Configuration editor screen with standard settings selected

In editing mode three buttons are present at the bottom right of the screen:

- The top button marked with a spanner and two “+” symbols selects the advanced version of the editor. This offers a wider range of settings, but is rarely necessary under normal circumstances and should only be used by experts, and even then with caution. See below for the additional functions offered in the advanced editor.
- The second button from the bottom switches between metric and imperial units.
- The bottom button labelled with a loop back arrow returns users to the next level up.

Touching on an item either pops up an appropriate keyboard (Letters for editing names, numeric for entering numbers) or presents another lower level list of parameters to select from. To remove the keyboard from the screen, press it's return key.

Touching the keyboard **?** key gives context relevant help. Please make use of this facility it can be very helpful.

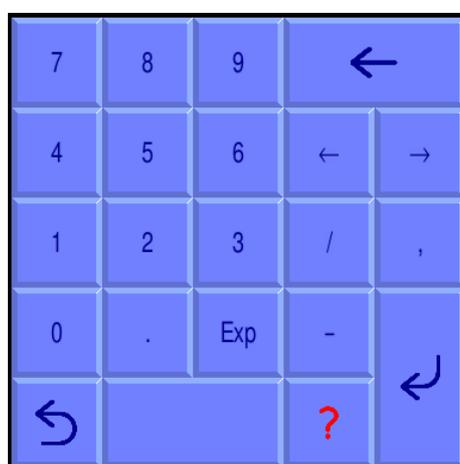

Numeric keypad with “?” Help function

General settings

The first provides an opportunity to change the configuration name. This can be up to 10 characters long and should be meaningful to the operator.

The second setting of “Speed Source” allows for selection between odometer input source to be derived from ISOBUS wheel speed or Microcontroller/Visual odometer input.



Configuration editor selection of speed source

The remaining categories of settings relate to machine subcomponents. It is possible to have more than one of these subcomponents on a single machine. For example, a machine may have two or more cameras so there will be the option to edit settings for each of these cameras independently. For reasons relating to internal computing conventions numbering of these subcomponents always starts at zero, e.g. the first camera has index number 0 and the second 1.

To edit settings for any of these subcomponents touch on the blue index number in “[]” for the sub component that you wish to edit. This will get you into the edit screen for that particular component. Once you have completed editing that subcomponent you can return to the previous screen by pressing the button with a loop back arrow.

Section settings


A section is defined as a frame that has independent steering. Most implements will have only one section. However, it is possible to have an implement with up to four independently steered sections. This is useful when it is required to span multiple drill/transplanter bouts.



Configuration “Section” standard editor screen

The settings are;


“Width” is the width of that section and is only used to calculate area worked, “Steering arm length” (distance D in figure below) for disc steered machines only.

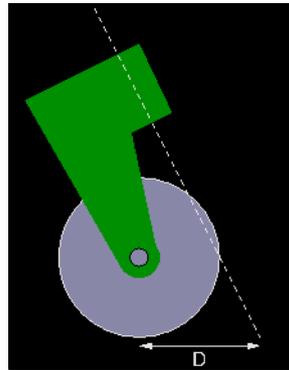

“Steering arm length” D

“Cameras mounted” which allocates which cameras are fitted to that section, e.g. 0 for one camera, 0,1 if two are fitted.

It is also possible to edit further steering mechanism parameters.

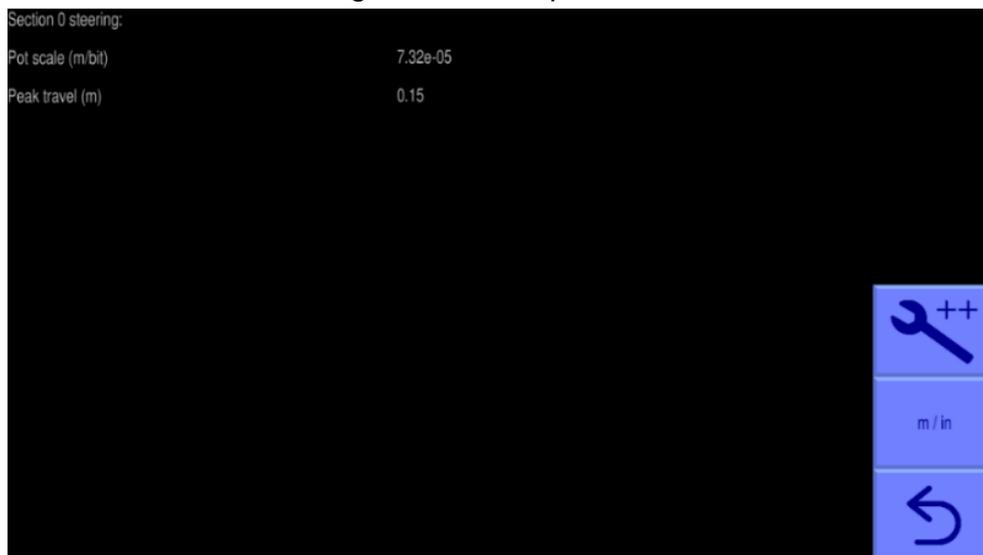

Configuration “Steering parameters” standard editor screen

For side shift machines using a linear position sensor “Pot scale” is derived by taking full sensor stroke in m and dividing by the digital range in bits. Our electronics accepts signals from 0V to 5V and use a 12bit converter i.e., 4096 bits. A potentiometer driven by our 5V reference will provide a 0-5V output giving a 0 – 4096 digital scale. For a 0.5m potentiometer that would be $0.5\text{m}/4096 = 0.00012207 \text{ m/bit}$. For a within cylinder position sensor with a 0.5V to 4.5V output then the digital scale would be 409 – 3687, a range of 3278 bits, so a 0.5m stroke position sensor would have a scale $0.5\text{m}/3278 = 0.00015253 \text{ m/bit}$.

“Peak travel” is measured from central position, usually set to be just under half total sensor stroke.


For disc steer machines peak travel becomes maximum angular deflection in degrees from the central position and Pot scale becomes the full rotary stroke of the rotary position sensor in degrees divided by 4086 (for a 0-5V output).

Camera settings

The first three settings relate to camera mounting geometry as illustrated below. Camera height is the vertical distance in m (or inches with imperial units set) from ground level to the camera lens when the implement is at its normal working height. Look ahead is the horizontal distance from a point directly below the centre of the camera lens the centre of the image in the ground plane (depicted by cross hairs in “manual” mode). “Distance ahead of nozzles” is the horizontal distance in m (or inches with imperial units set) from a point vertically below the camera lens back to the nozzles. (If spot spray software is installed this distance is referred to as “Distance ahead of nozzles” even if operating in inter-row mode).

Note:

If the camera is behind the nozzles then this number should be entered as a negative value.

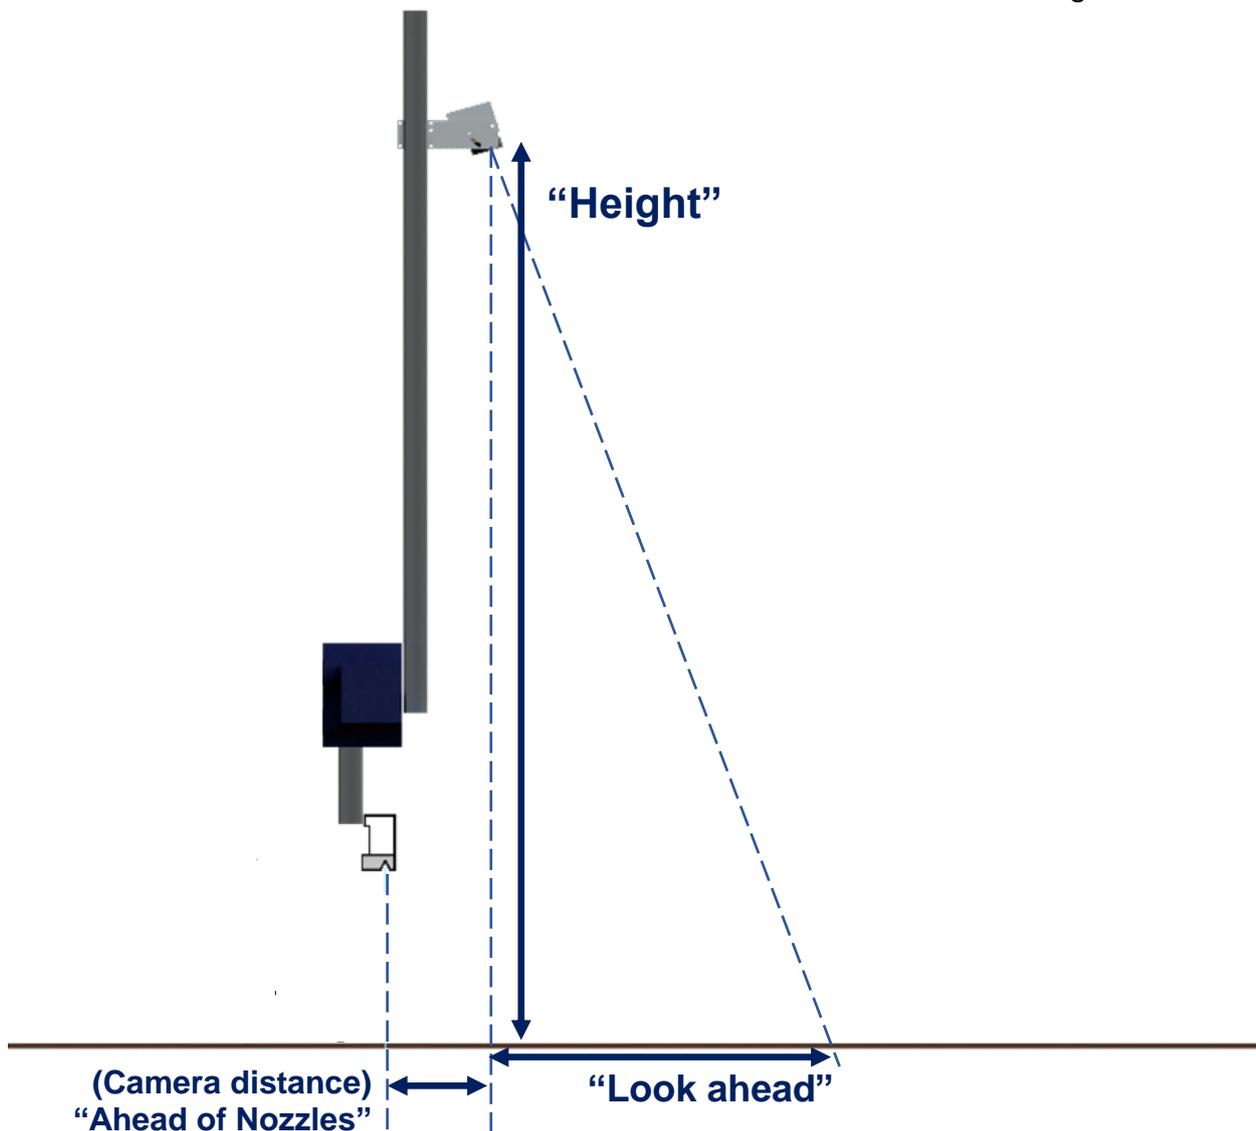


The next settings relate to what is seen in the image. The number of rows and their spacing.

The number of rows entered here determines how many rows are used to construct the template.

Spacing between rows is normally uniform across the field of view and is therefore a single figure. However, some crop geometries with a number of different row spacing's in the same scene require a more complex arrangement. Syntax for this is based on the assumption that the pattern is symmetrical about the centre line and starts with the central row spacing working out to the edge. Figures are comma delimited. In the case of an even number of rows the first figure is always the whole row spacing, not the distance from the centre line to the next row. The following examples cover likely configurations.


Odd no of rows irregular spacing example

Rows 5
Spacing 0.4,0.5

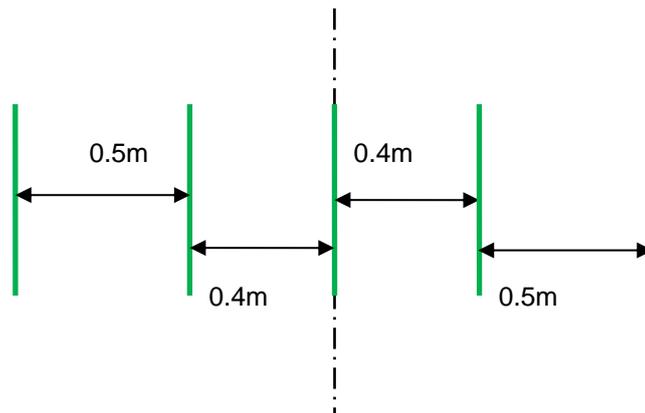


Even no of rows regular spacing example

Rows 4
Spacing 0.4

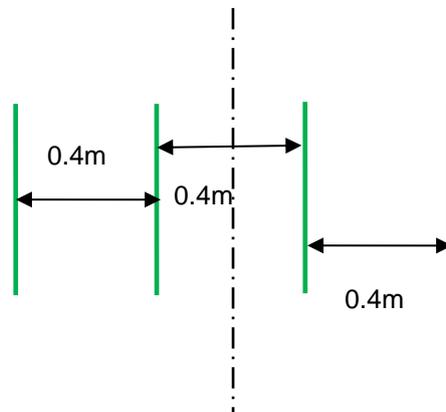

Grouped sets of rows example

Rows 12
Spacing 0.2,0.05,0.05,0.2,0.05,0.05

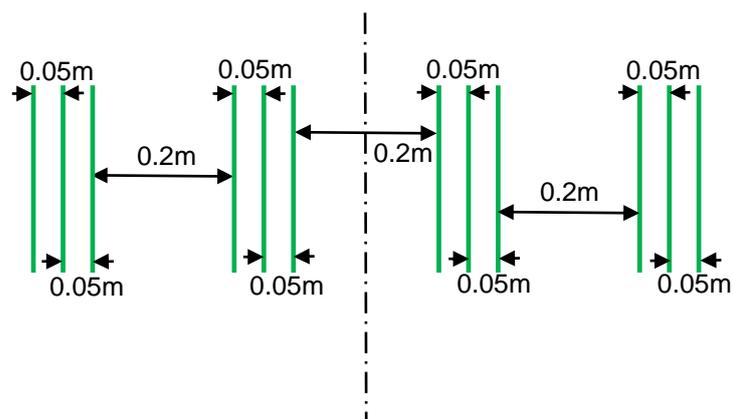


NB In the special case of following only one row the most accurate tracking will be achieved with row spacing set to between two and three times crop foliage width with an absolute minimum of 20cm.



Configuration "Camera" standard editor screen

Tip

Context sensitive help is available within the configuration editor by pressing the red ? key with the cursor on the relevant title.

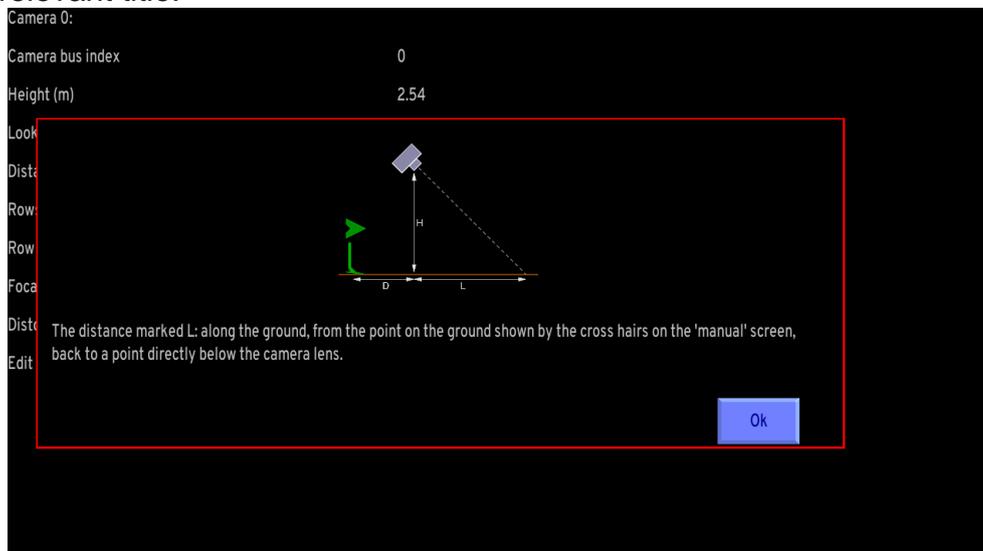

Example of context sensitive help obtained by using the ? key

Edit associated nozzles


Entered via the camera page this page allows users to enter the number and position of nozzles associated with that camera.

Note: If zero is entered as a value for "Nozzles used" nozzles on that board will be turned off. If all nozzle boards have zero "Nozzles used" the machine will not spray, but inter-row guidance will continue facilitating inter-row operations such as band spraying.

Nozzle spacing uses the same syntax as row position described above. (see advanced configuration editor for more complex arrangements).

Spray width is the width of the spray pattern in the ground measured perpendicular to the direction of travel. It is a function of nozzle fan angle and spray bar height.



Spray pattern length is the spray pattern on the ground measured in the direction of travel.

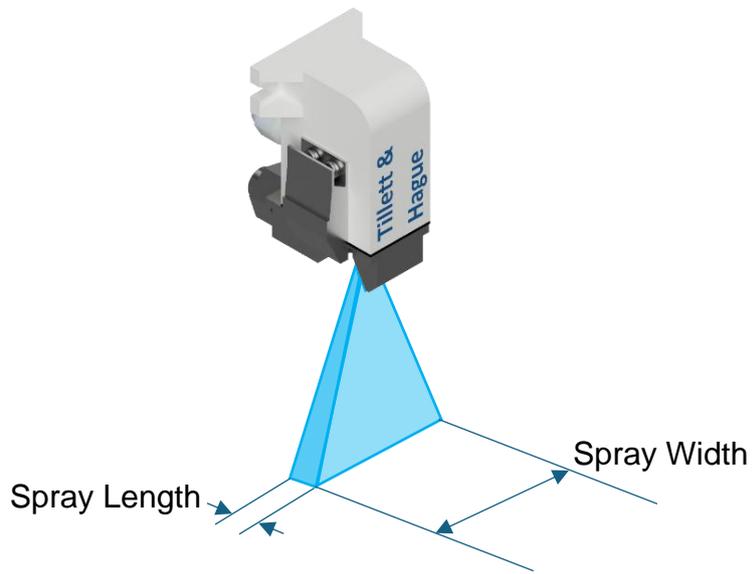

Spray Width and Spray Length parameter diagram

Example :


Even nozzle spacing and nozzles with even spray widths

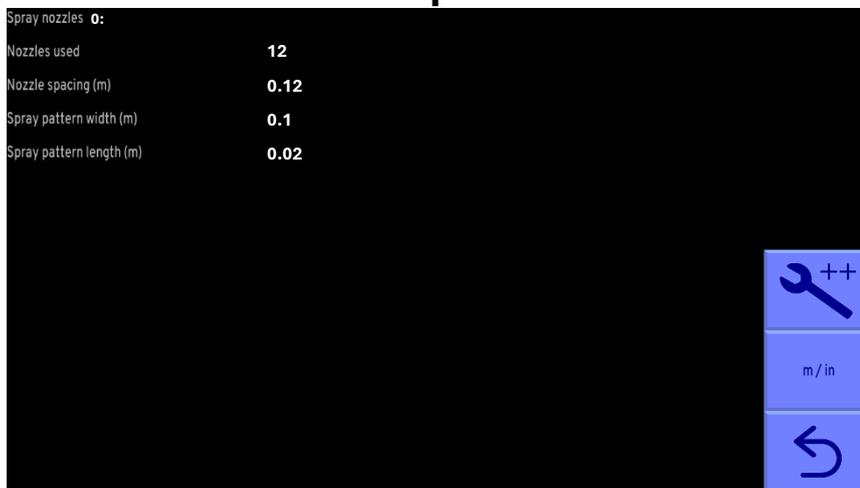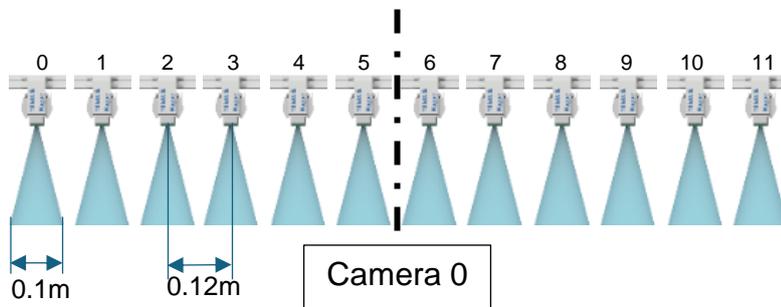


Configuration "Edit associated nozzles" standard editor screen for above example

Example :

Uneven nozzle spacing and nozzles with different spray widths

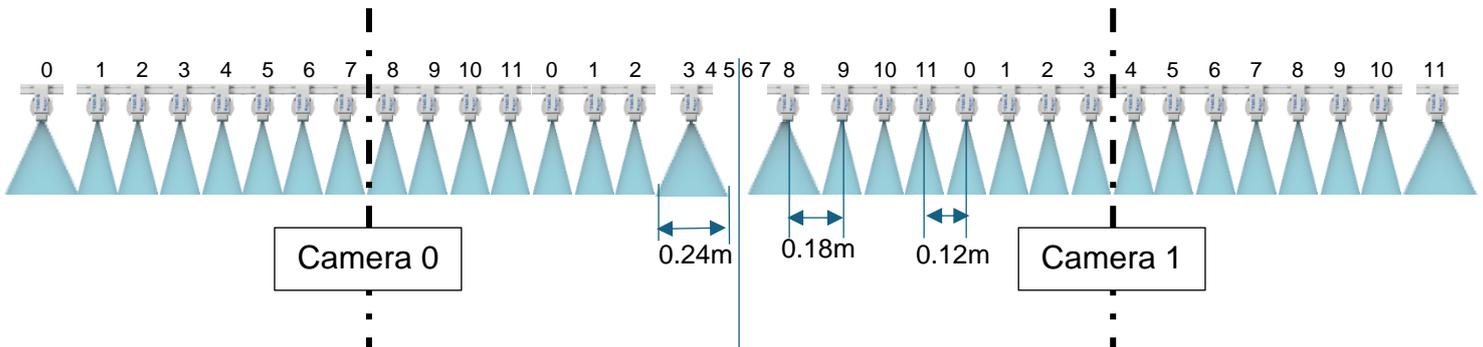

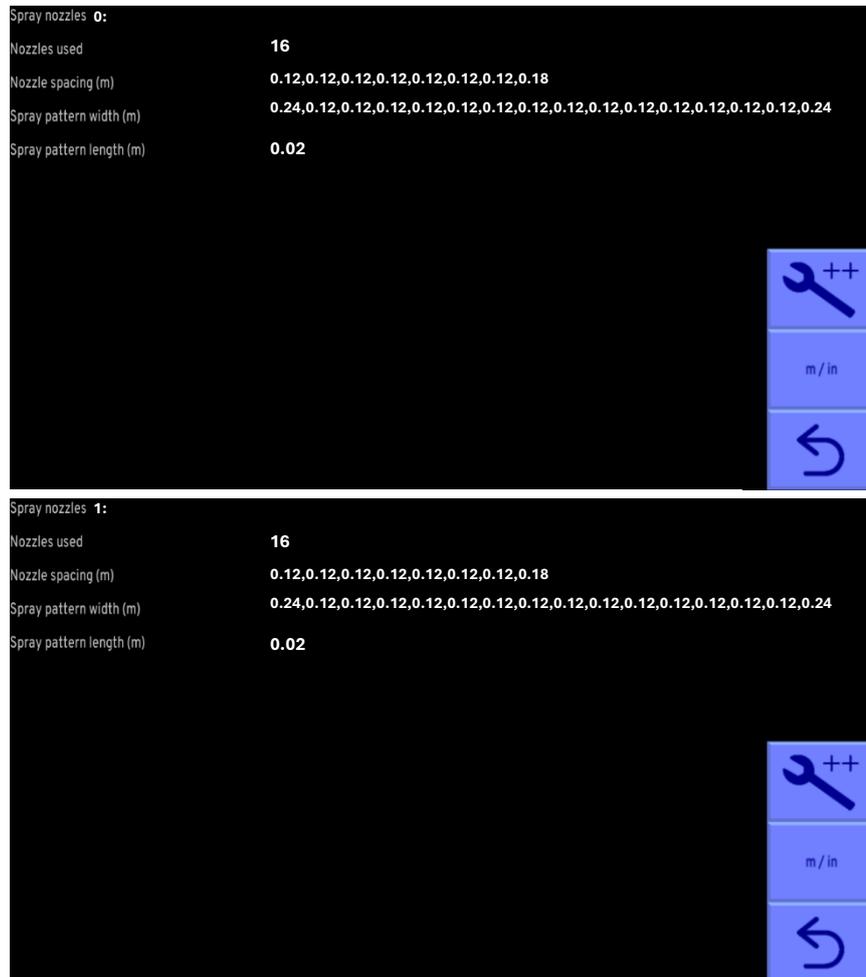

Configuration “Edit associated nozzles” editor screens for the above example

Condition monitoring

Allocates pressure transducers to specific input channels on a condition monitoring board. It is normal to have one supply side pressure transducer monitoring pressure before any shut off valves and one pressure transducer after each shut off valve.

Nozzles can be arranged into separate banks each of which can be isolated from the main supply by its own shut off valve. Typically, a bank might be associated with a physical spray bar spanning one bed, though a spray bar can be split into multiple banks for more precise and specific condition monitoring

The first line of the condition monitoring editor determines which banks of nozzles relate to the supply side pressure transducer. The remaining lines allocate which of the pressure transducers situated downstream of the shut off valve are allocated to which nozzle bank. Entering a -1 indicates an input is not used for spray condition monitoring and will not be allocated to a spray bank.

This selection is repeated for each condition monitoring board.

Nozzle banks are allocated sequentially as per CANbus addresses set via the DIP switches on the nozzle boards, see [Annex](#). For example, nozzle board CAN ID 0 will be nozzle bank 0, nozzle board CAN ID 1 will be nozzle bank 1 etc. each consisting of 12 output channels 0-11.



If split mode is activated via the nozzle board DIP switches (Switch 3 ON = Split mode) this divides a nozzle board into two 6 output nozzle banks. Nozzle board CAN ID 0 in split mode will be nozzle bank 0 and nozzle bank 1 and nozzle board CAN ID 1 in split mode will be nozzle bank 2 and nozzle bank 3 etc. Each bank consisting of 6 output channels 0-5.

It is also possible to monitor two spray supply pressure lines with nozzle banks allocated to the appropriate supply lines. This option being advantageous for application of different concentrations/products.

Below are four different examples of spot spray configurations:

Example 1:


A simple configuration with supply pressure monitoring only without the facility for leak or blockage monitoring.

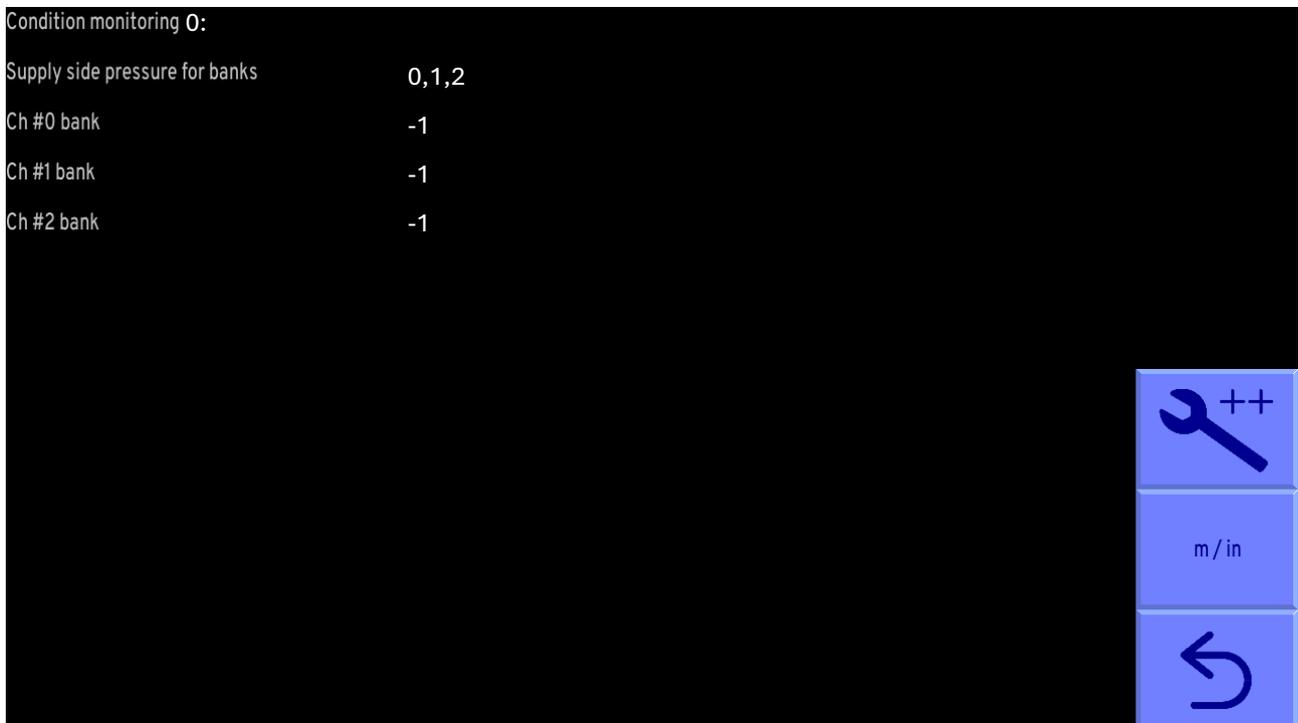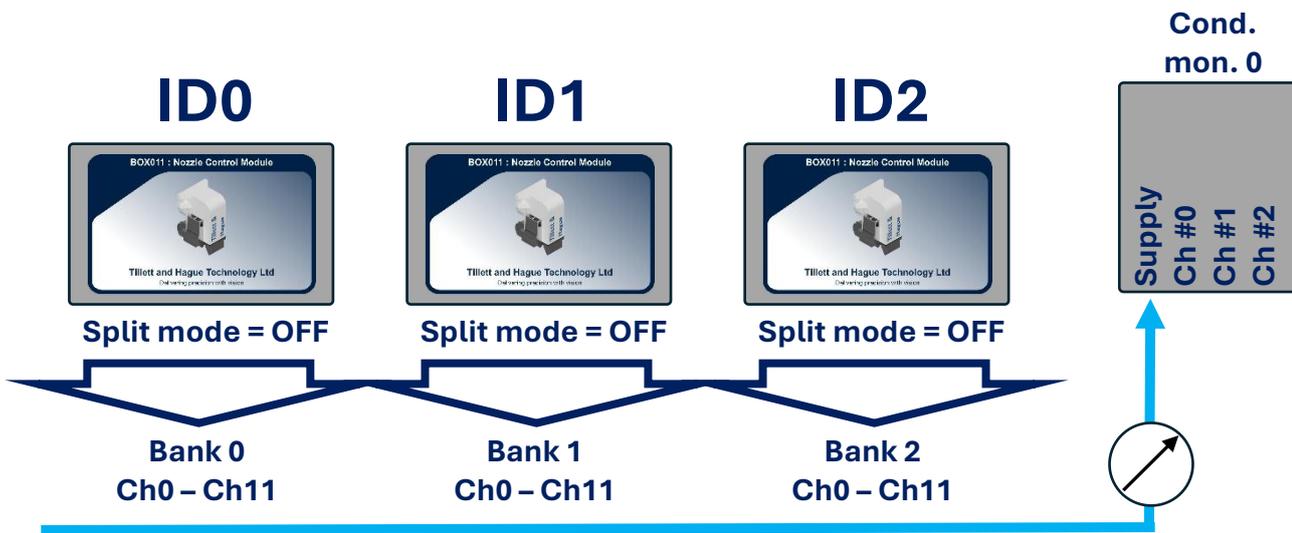

Configuration "Condition Monitoring" editor screen for above example

Example 2:

A configuration with three nozzle boards each allocated to a bank with a pressure transducer.

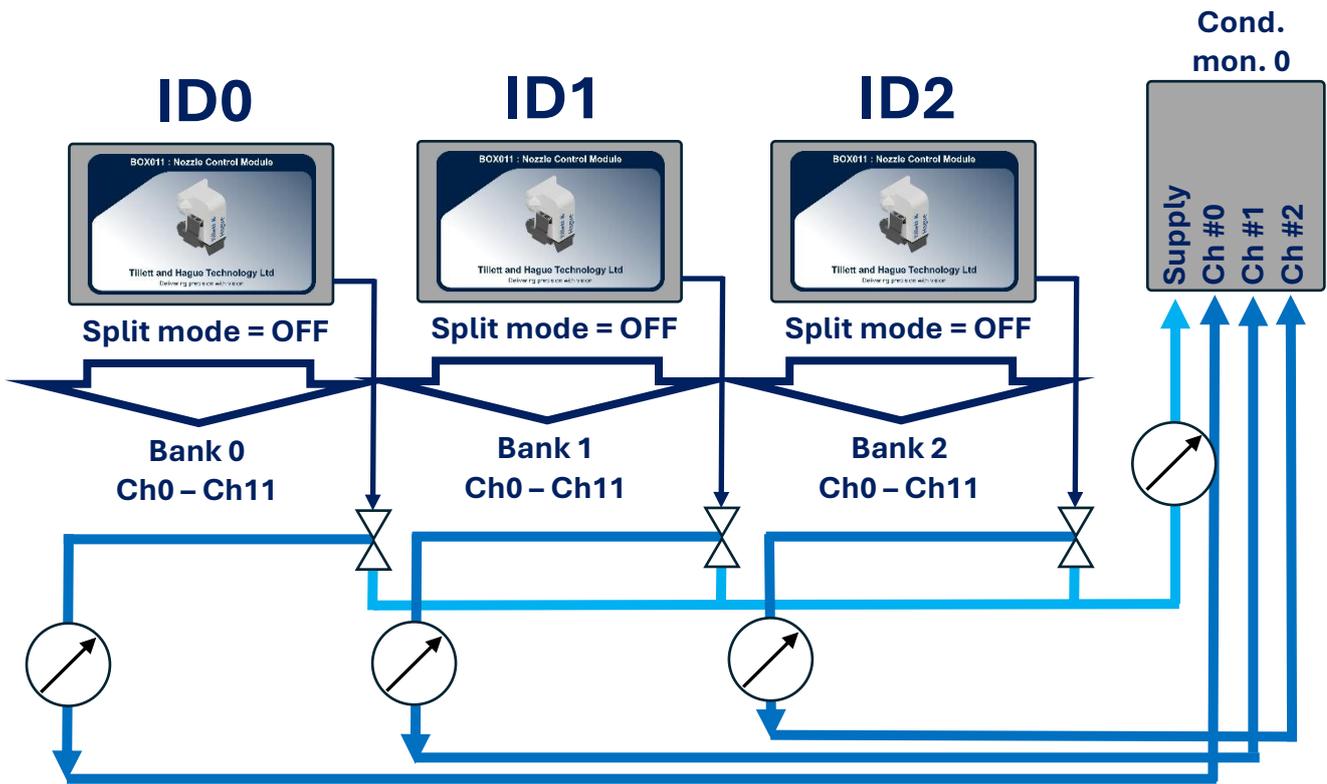

Condition monitoring 0:

Supply side pressure for banks	0,1,2
Ch #0 bank	0
Ch #1 bank	1
Ch #2 bank	2




m/in



Configuration "Condition Monitoring" editor screen for above example

Example 3:

A similar example but with each nozzle board split into two 6 channel banks requiring two condition monitoring boards to give higher resolution condition monitoring.

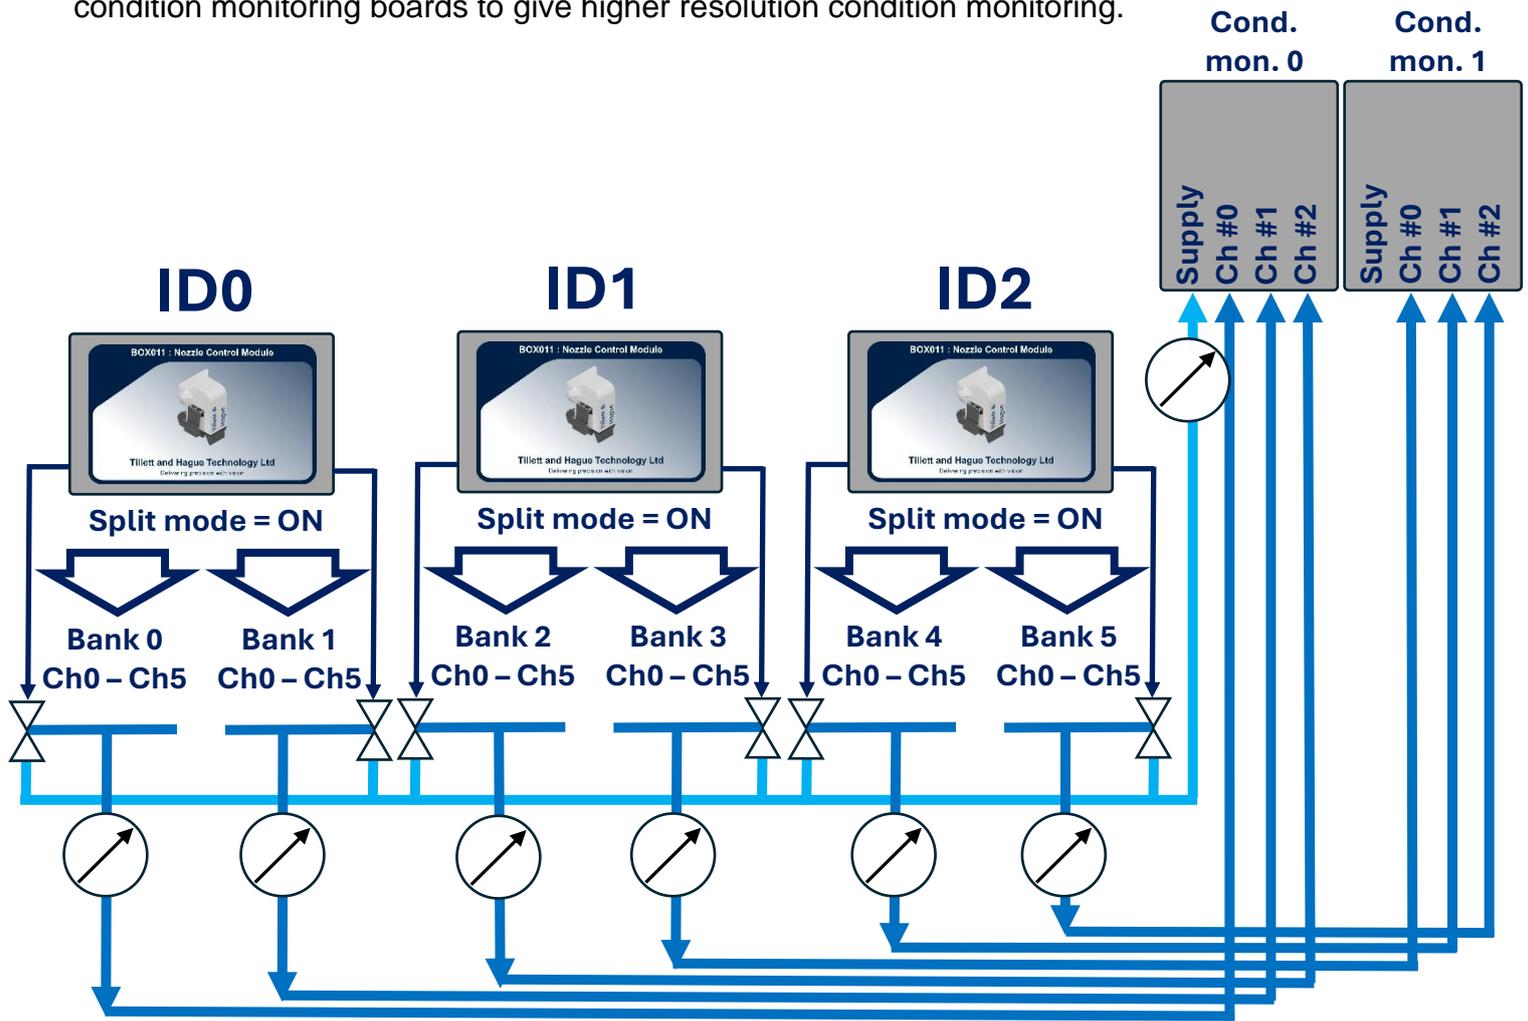

Condition monitoring 0:

Supply side pressure for banks	0,1,2,3,4,5
Ch #0 bank	0
Ch #1 bank	1
Ch #2 bank	2


Condition monitoring 1:

Supply side pressure for banks	-1
Ch #0 bank	3
Ch #1 bank	4
Ch #2 bank	5

Configuration "Condition Monitoring" editor screens for Condition monitoring 0 and 1 for above example

Example 4:

Finally the same configuration but with two separate supply lines for two products requiring two supply side pressure transducers, one on each condition monitoring board.

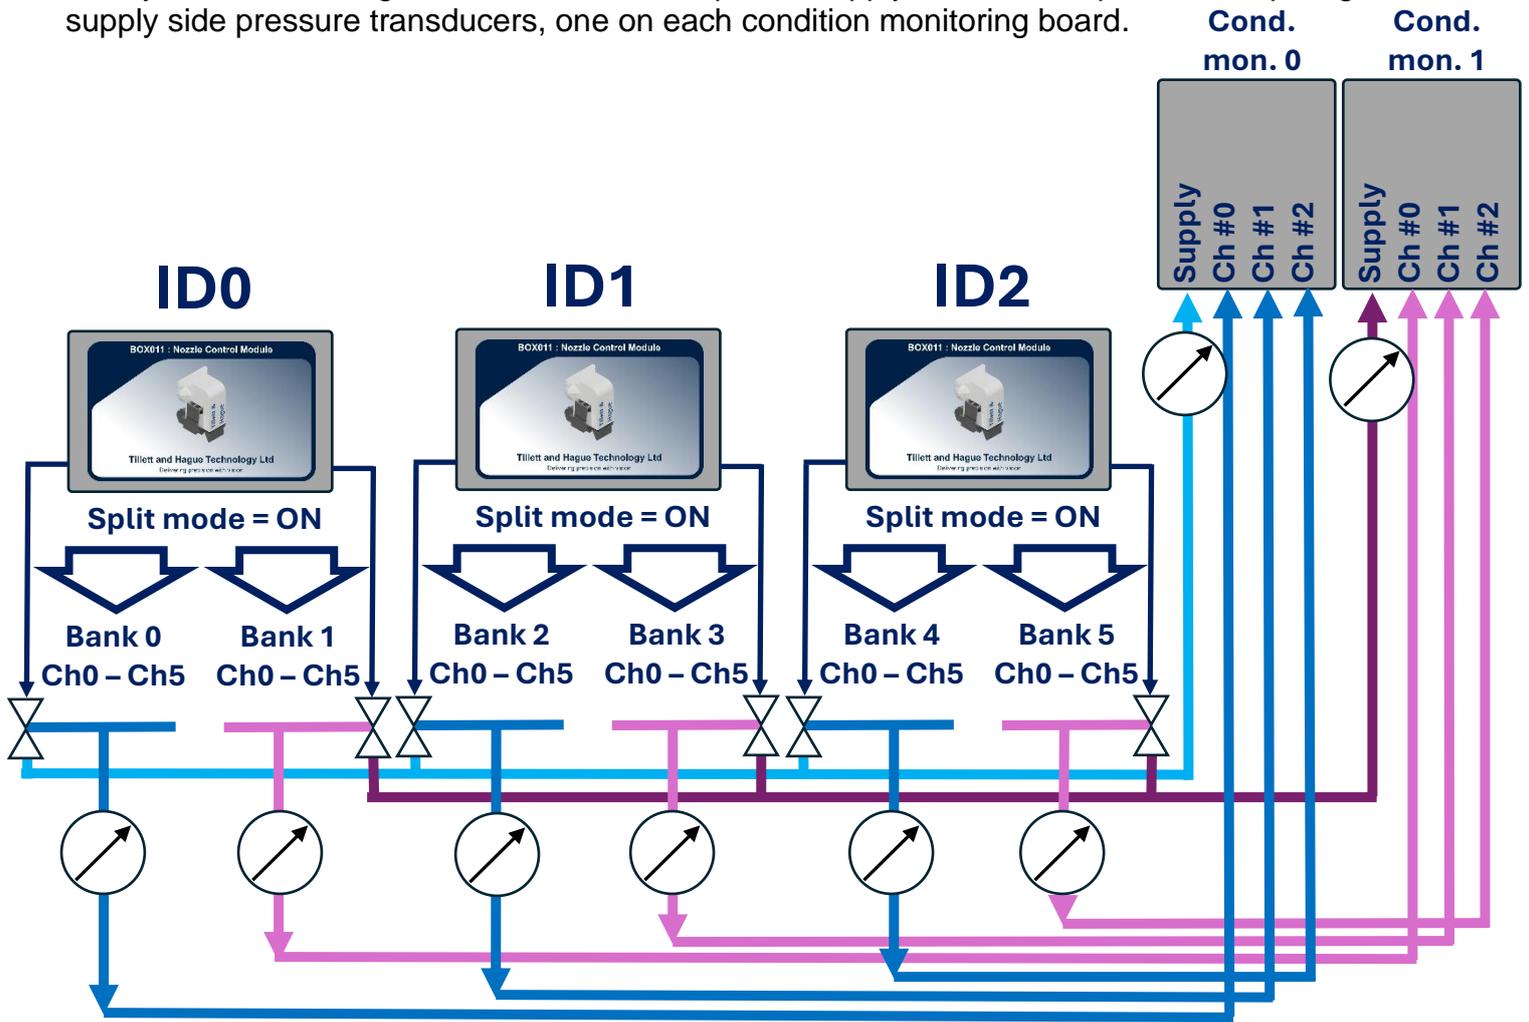

Condition monitoring 0:

Supply side pressure for banks	0,2,4
Ch #0 bank	0
Ch #1 bank	2
Ch #2 bank	4

Condition monitoring 1:

Supply side pressure for banks	1,3,5
Ch #0 bank	1
Ch #1 bank	3
Ch #2 bank	5


Configuration "Condition Monitoring" editor screens for Condition monitoring 0 and 1 for above example

Additional settings available from the advanced editor

Under normal circumstances it should not be necessary to alter any of the additional parameters listed in the advanced editor. However, for those wanting to make more advanced changes they are listed here.

Additional general settings

The advanced version allows the user to enter the number of cameras and microcontrollers fitted. For example, adding an additional camera can be achieved by increasing the number of cameras fitted by one. You will then be asked if you wish to assign this camera to a section for guidance purposes. Normally you would reply “Yes”. The settings from the previous camera will be automatically copied to the new camera. However, it is also possible to configure each camera differently if required.

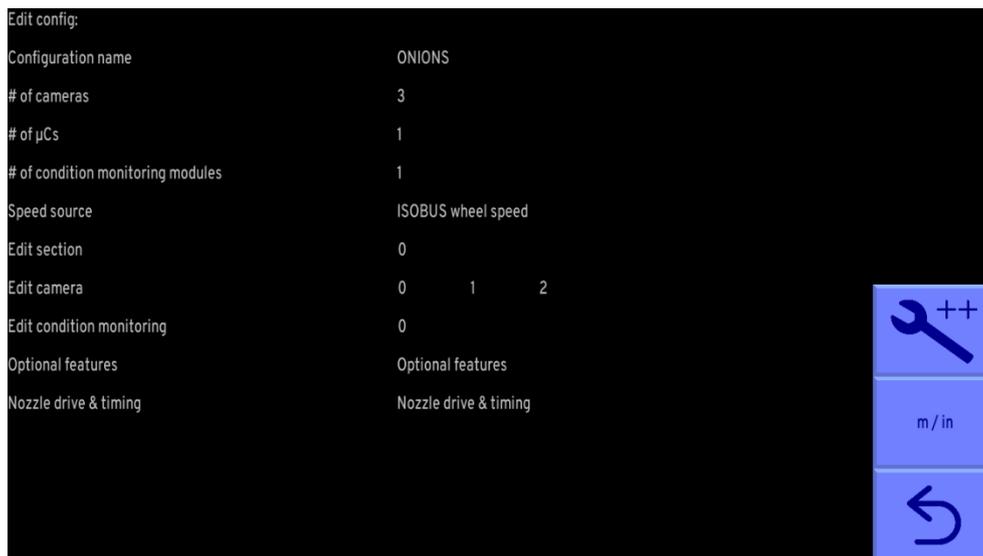

Configuration editor screen with advanced settings selected

It is possible to add additional cameras that are not used for guidance, but instead provide a CCTV function. To add a camera for this purpose, on the configuration editor screen (advanced) increase the number of cameras fitted by one. Do not allocate that camera to a section so the cameras mounted on the configuration edit section screen remains unchanged. On the configuration edit camera screen relating to the additional camera enter 0 rows and do not enter a row spacing. The camera will then produce an image on the working screen with no overlaid graphics that can be selected from the thumbnails in the usual way.

Odometer scale relates to distance travelled between counts from the odometer wheel encoder. It is calculated from the pulses per revolution (PPR) from the ground engaging wheel diameter according to the formula: $\text{PI} \times \text{Wheel diameter} / \text{PPR}$.

For encoders with phase quadrature outputs PPR is the full resolution using both A and B lines. The maximum pulse rate is 256000/s.

Note

If configuration file specifies “ISOBUS wheel speed” as odometer source odometer scale will not be displayed.

Additional section settings

Distance ahead/behind rear axle is measured between the cultivators and the tractors rear axle. Lift input setting allows selection of lift input source for the selected section. For ISOBUS enabled implements a menu allowing selection between ISOBUS/front, ISOBUS/rear and microcontroller inputs is shown when the setting is selected for configuration.

Note

In the case of multi-section implements it is possible to derive lift inputs for multiple sections from a single input.



Selection of Lift input source in configuration “Section” advanced editor screen

It is possible to define which microcontroller is used to control section steering and from which microcontroller that section should take its lift status and odometric speed. If microcontroller number for the odometer is left blank, odometric speed will be calculated from the flow of features through successive images. However, odometric speed is not sufficiently accurate for in-row operation and should only be used in inter-row mode.

The in-row implement module (BOX006) has 4 odometer input channels and it is necessary to designate which odometer input channel(s) are to be used. Odometer channels can be specified as follows:

- 1st NPN pulse odometer channel 0/0
- or
- 0 as first input channel will be presumed if not specified
- 2nd NPN pulse odometer channel 0/1
- 1st Encoder odometer channel 0/2
- 2nd Encoder odometer channel 0/3

Note


It is also possible to derive odometer input from multiple sources of the same type e.g. two NPN pulse or two encoder type through listing source channels separated by a comma.

e.g. 0/0 , 0/1 or 0/2 , 0/3

Note

If ISOBUS speed is configured for source of odometer input, under standard general settings, the setting for “Odometer on uC” will not be displayed.

Finally, the cameras mounted on that section are allocated by listing them with comma delimiting by index number. E.g. a two camera machine might have Cameras mounted 0, 1

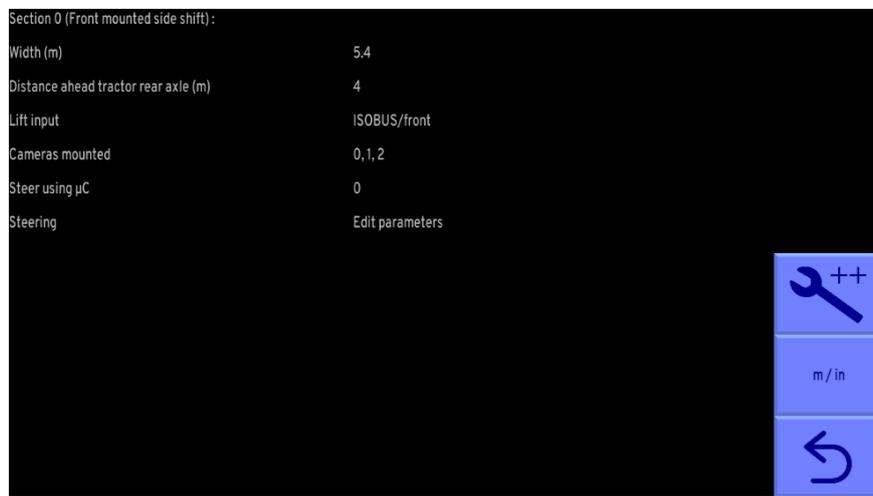

Configuration “Section” advanced editor screen for a side shift implement

The advanced version of the steering parameters allows users to alter the value of position sensor reading that is defined as central (normally 2048).

There are also a number of parameters that relate to steering control.

Deadband (the minimum steering error that results in a corrective action) can be set. Smaller values increase accuracy but can cause rapid steering oscillations if the steering rate (oil flow) is set too high. As standard this is set to 0.006m.

Linear region, maximum speed and valve characteristic curve all relate to the control of proportional hydraulic valves. And may need adjustment to suit some proportional valve setups, default values are good base to start from. Their function is explained by a diagram/graph in the help (?) facility.


Disc steered machines (not shown in example) can be fitted with an additional potentiometer to display linear free shifting slide position on the working screen light bar. The parameters for this additional lightbar potentiometer are derived in the same way as you would for a side shifted machine. If the lightbar peak travel is set to zero, the system assumes there is no separate lightbar position sensor, and the working screen light bar will display steering disc angle instead.

The damping term relates to disc steering.

Additional camera settings

Additional camera parameters are lens focal length and a figure relating to correcting for lens distortion. However, cameras from serial No 717 onwards have this lens data stored internally, which takes precedence over configuration data, making these figures irrelevant, except where older cameras are fitted.

It is also possible to change camera bus index though this should not be changed from the camera number in blue above without taking expert advice.

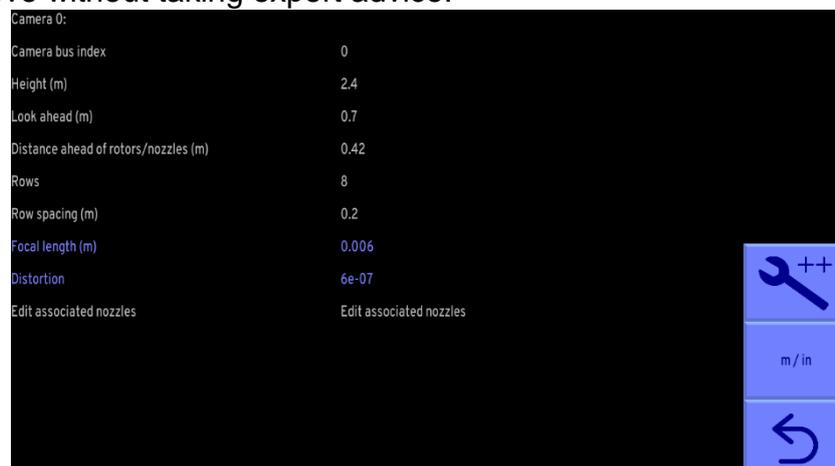

Configuration “Camera” advanced editor screen

Additional nozzles settings for associated cameras

The additional nozzle settings associated with the selected camera facilitate mapping of individual nozzle outputs from specific banks and channels associated with the spray bar.


If all nozzles associated with the selected spray bar are connected to a single nozzle bank a single nozzle bank number can be entered.

Individual nozzle channel outputs should be entered in the line below. Remembering that nozzle output channels start from 0 indicating the first output channel of a bank. If an output is not connected it should not be listed within the configuration.

In the case of a spray bar consisting of multiple nozzle banks. Each nozzle bank and corresponding output channel should be listed within the spray nozzles configuration page.

Example 1:

This machine has two camera and three evenly spaced 12 nozzle spray banks and so the first half of the central bank, Bank 1 has been allocated to Camera 0 and the second half to Camera 1

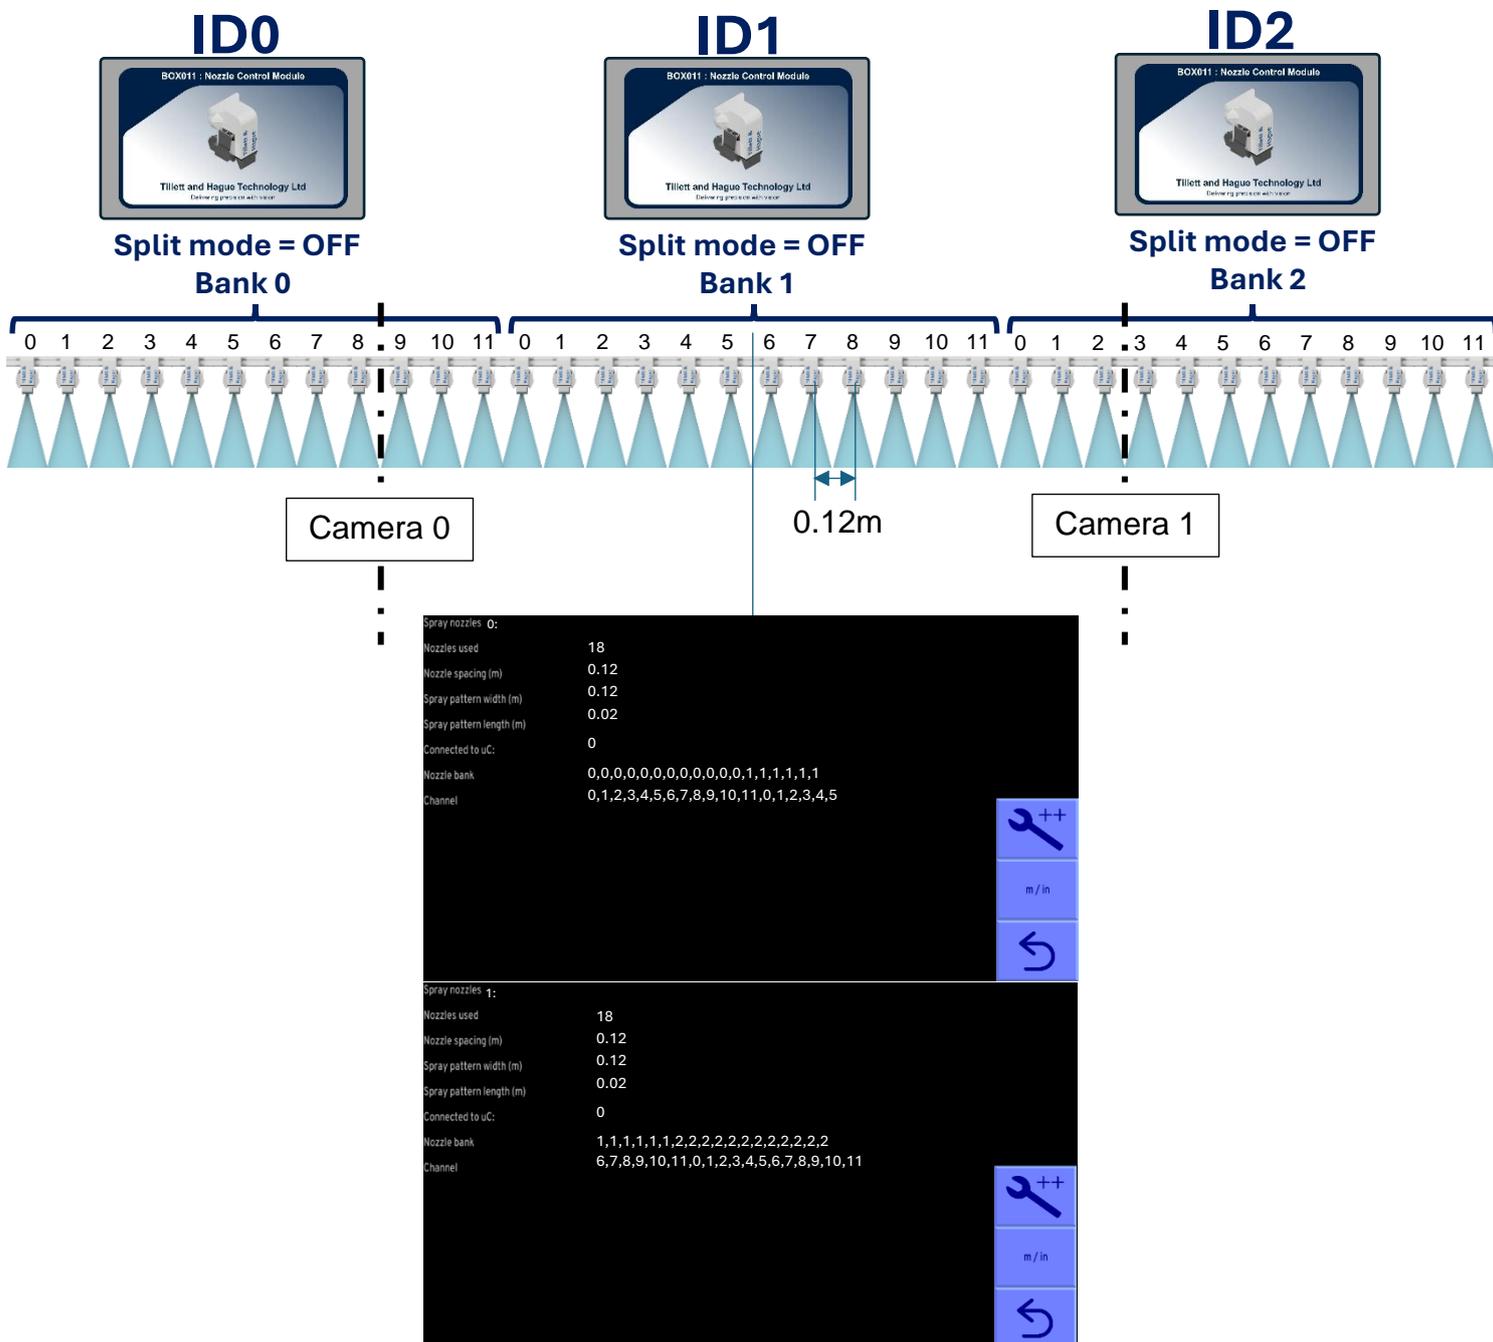

Configuration "Edit associated nozzles" advanced editor screens for the above example


Example 2:

This machine with an uneven nozzle spacing also has three cameras and three nozzle boards but the nozzle boards are operating in split mode to give a total of 6 banks.

ID0



Split mode = ON

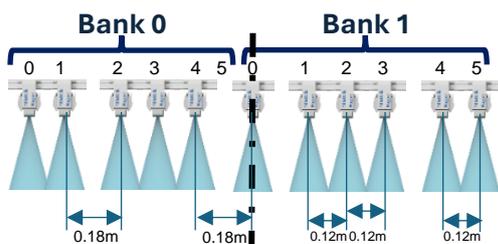


Camera 0



ID1



Split mode = ON

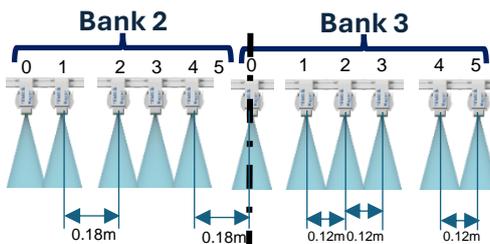


Camera 1



ID2



Split mode = ON

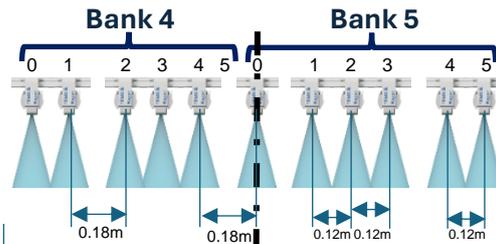

Camera 2



Spray nozzles 0:	11
Nozzles used	11
Nozzle spacing (m)	0.18,0.12,0.12,0.18,0.12
Spray pattern width (m)	0.12
Spray pattern length (m)	0.02
Connected to uC:	0
Nozzle bank	0,0,0,0,1,1,1,1,1,1
Channel	0,1,2,3,4,0,1,2,3,4,5

Spray nozzles 1:	11
Nozzles used	11
Nozzle spacing (m)	0.18,0.12,0.12,0.18,0.12
Spray pattern width (m)	0.12
Spray pattern length (m)	0.02
Connected to uC:	0
Nozzle bank	2,2,2,2,3,3,3,3,3,3
Channel	0,1,2,3,4,0,1,2,3,4,5

Spray nozzles 2:	11
Nozzles used	11
Nozzle spacing (m)	0.18,0.12,0.12,0.18,0.12
Spray pattern width (m)	0.12
Spray pattern length (m)	0.02
Connected to uC:	0
Nozzle bank	4,4,4,4,5,5,5,5,5,5
Channel	0,1,2,3,4,0,1,2,3,4,5

Configuration "Edit associated nozzles" advanced editor screens for the above example

Example 3:

This machine with an even nozzle spacing also has 3 cameras and a 3 nozzle boards set up to give 6 banks but have been configured so that alternating nozzles can run with a different spray product.

ID0
Split mode = ON
 Bank 1
 Bank 0
 Camera 0
 0.15m

ID1
Split mode = ON
 Bank 3
 Bank 2
 Camera 1
 0.15m

ID2
Split mode = ON
 Bank 5
 Bank 4
 Camera 2
 0.15m

```

Spray nozzles 0:
Nozzles used 11
Nozzle spacing (m) 0.15
Spray pattern width (m) 0.15
Spray pattern length (m) 0.02
Connected to uC: 0
Nozzle bank 0,1,0,1,0,1,0,1,0
Channel 0,0,1,1,2,2,3,3,4,4,5

Spray nozzles 1:
Nozzles used 11
Nozzle spacing (m) 0.15
Spray pattern width (m) 0.15
Spray pattern length (m) 0.02
Connected to uC: 0
Nozzle bank 2,3,2,3,2,3,2,3,2,3,2
Channel 0,0,1,1,2,2,3,3,4,4,5


Spray nozzles 2:
Nozzles used 11
Nozzle spacing (m) 0.15
Spray pattern width (m) 0.15
Spray pattern length (m) 0.02
Connected to uC: 0
Nozzle bank 4,5,4,5,4,5,4,5,4,5,4
Channel 0,0,1,1,2,2,3,3,4,4,5
    
```

Configuration "Edit associated nozzles" advanced editor screens for the above example

Optional Features

There are two options relate to customising fine offset which can be useful if extra stroke is required working across steep slopes for example. One allows the maximum number of fine offset steps to be changed (default is 6) and the other allows the size of those steps (default 10mm) to be modified.

Speed bar range displayed on the working screen can be changed from the default speed.

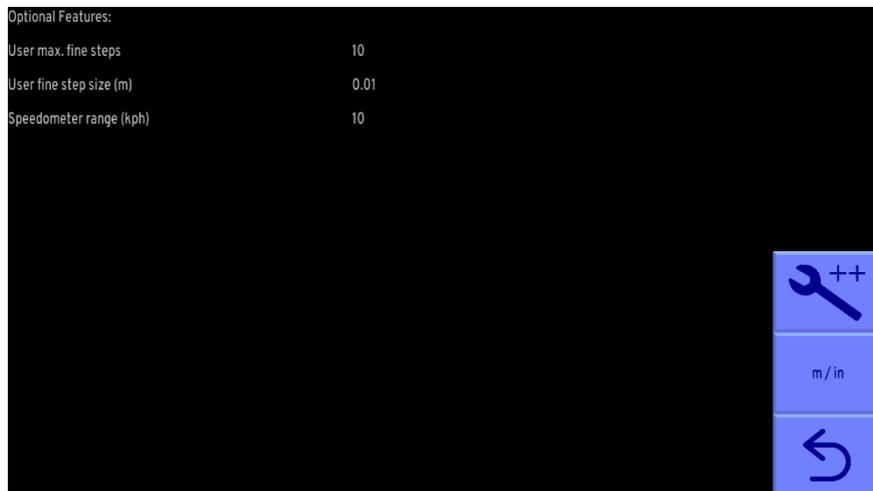

Configuration "Optional Features" advanced editor screen (Yes=selected No=not selected)

Nozzle drive and timing

Nozzle boards can be configured to drive conventional or latching solenoid valves via an on-board switch.

The levels and timing of solenoid drives can be configured in software using this option.

The first parameter allows users to select the % of full 12V drive (by PWM) applied to change solenoid valve state.

The second refers to the holding drive level required to maintain that state. That would normally be 0 for a latching valve but will be up to 100% for conventional valves. Figures around 50% might be typical if "hit and hold" techniques were being used.


The third parameter determines the time in seconds for which the latching drive level is applied before dropping down to the holding level.

The spray delay reflects the time in seconds taken between requesting a change of valve state and that change being reflected in nozzle flow rate.



Configuration "Nozzle drive and timing" advanced editor screen

11. Service menu tools (including USB Update and backup procedure)

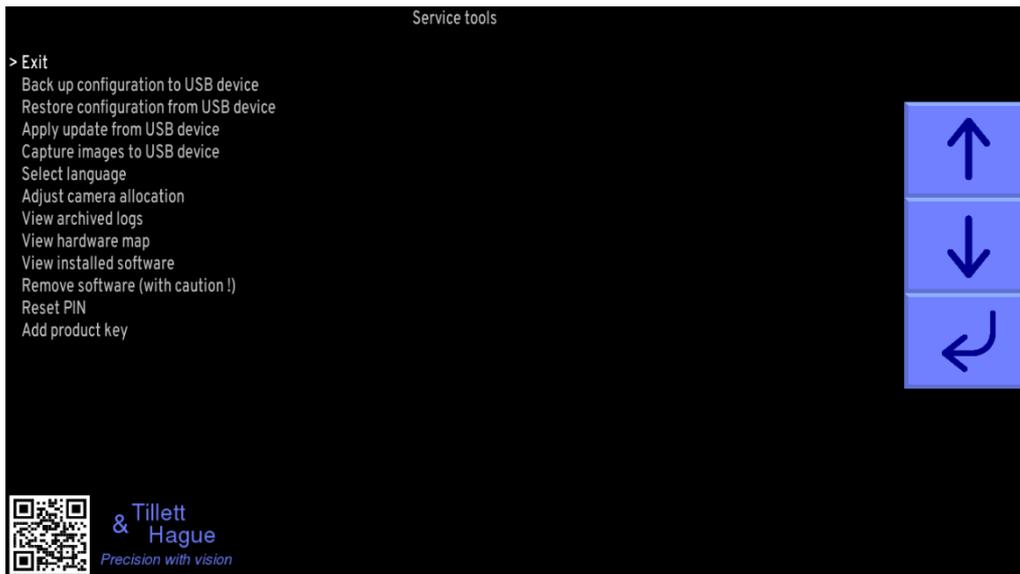

From the start-up screen users can enter a service menu by touching the tools symbol. The service menu, illustrated above, offers a number of tools that can be useful in maintaining or fault finding a system. The QR code defaults to our web site but can be configured as part of branding.

Backup configuration to USB

Backup creates a file containing all the parameters stored in all the configurations on a console as well as information such as error logs and camera skews. It can be very helpful in diagnosing faults, restoring systems after hardware failure and as a means of quickly setting up new machines in a factory environment.

To backup to a USB device the memory stick must be inserted into the USB port of the console prior to entering the service menu. If this is not the case, or if the USB device is not formatted in the correct form, you will see a black screen with the message “No USB storage device found”. Similar messages will be received for other operations requiring a USB memory stick.

If the console has a valid USB device connected it will then save a backup of the configuration data to the first directory of the device. The file name being in the format “backup_0.tgz”. If there are already backup files stored on the device the backup will be named numerically one higher than the last backup. Backup files can be copied onto another computer and renamed but names must be in the format backup*.tgz where * can be a string of alphanumeric characters excluding spaces. Ensure that your laptop or computer does not attempt to open/unpack the file as that can corrupt the file into an unreadable format.


Restore configuration from USB

To restore data from a USB device the memory stick must be inserted into the USB port of the console prior to entering the service menu.

If no backup files can be found on the USB device or backup files have been corrupted, you will see a black screen with the message “Can’t open backup file”.

If more than one backup is found on a USB device a choice of which backup to restore from is given.

When restoring from a specific backup you are able to choose whether to apply the restoration to only configuration data or to all settings such as area meter, hours run, camera skews etc. In most situations only configuration data will need to be restored from. Restoring files does not delete files already stored in a console. Where configurations are duplicated the old version is overwritten.

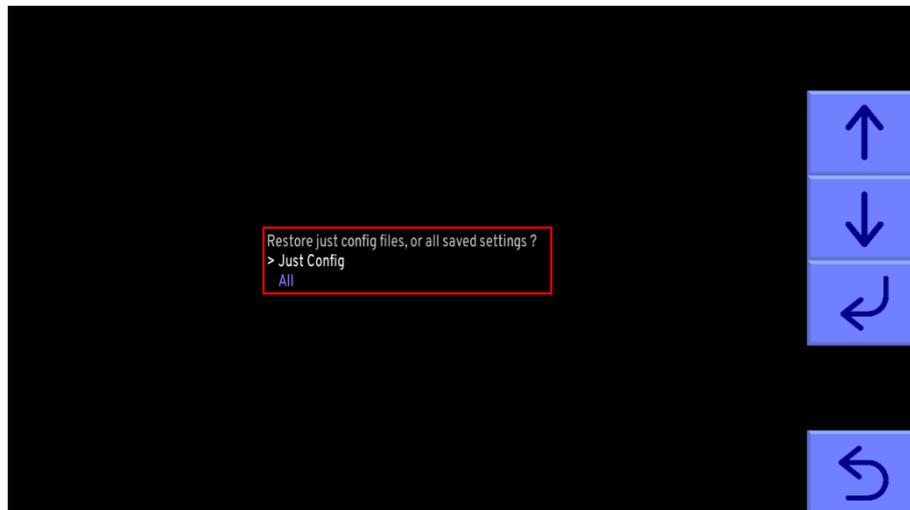


Apply update from USB Device

The update tool updates application software and can therefore be used to keep older machines up to date with the latest features.

It is important that when you are sent an update file of the format update*.tgz you ensure that your laptop/computer does not attempt to open or unpack it as this may cause corruption. When wishing to apply an update to a console it is recommended to copy and paste this file into the top directory of your USB device.

If multiple updates are stored on your USB device, you will be given a menu to decide which update you would like to select and install onto the console.

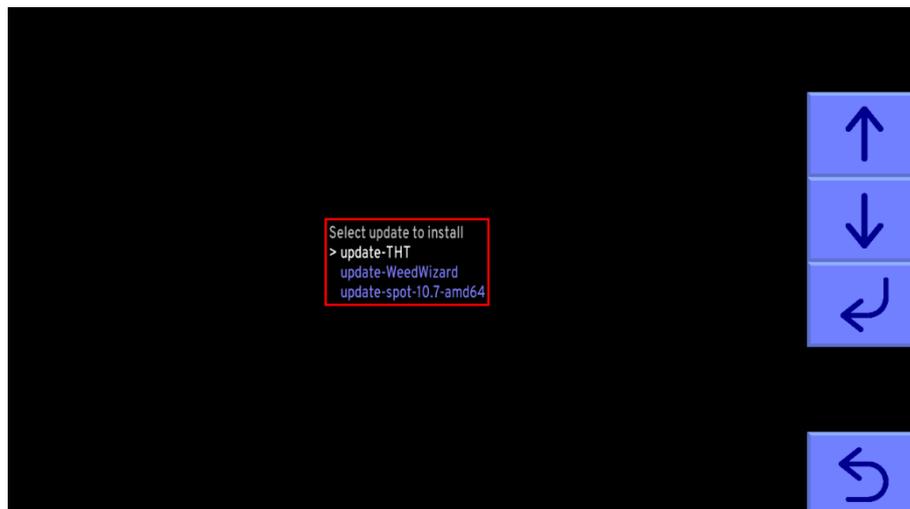


Once your update has been successfully installed you will see a black screen with the message: "Installing update, Done"

Capture images to USB device

This function saves a still image which can be e-mailed to an expert for analysis. It is a particularly useful tool when used in conjunction with backup as the combined information is helpful for remote fault diagnosis.


Ensure that a USB stick is inserted and select the capture function. You will see a screen with a small live video image and touch buttons down the right-hand side. To capture an image touch on the button with the camera logo. You will hear a buzzer sound and a directory "images_0" will be created on the USB stick and an image "cam0_0.tiff" placed in that directory. You can capture more images with the same camera, and they will be numbered sequentially in the same directory.

If multiple cameras are fitted these can be selected using the left and right arrow buttons and images captured from them in the same way and named according to the camera index.

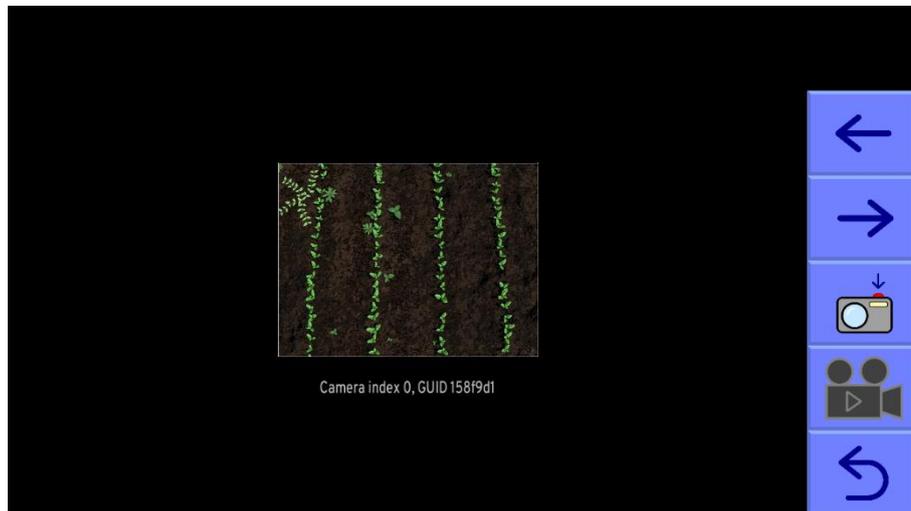


Select Language

Selecting this function brings up a screen with an array of national flags. Touching on a flag highlights it with a white border and will change the language used to that corresponding to the flag. Where translations are missing, or incomplete, language revert to English. In practice translations are mostly complete for users screens, but there are significant gaps in most languages for the configuration editor. If you would like to contribute to translations, we would be very pleased to provide you with a translations table.

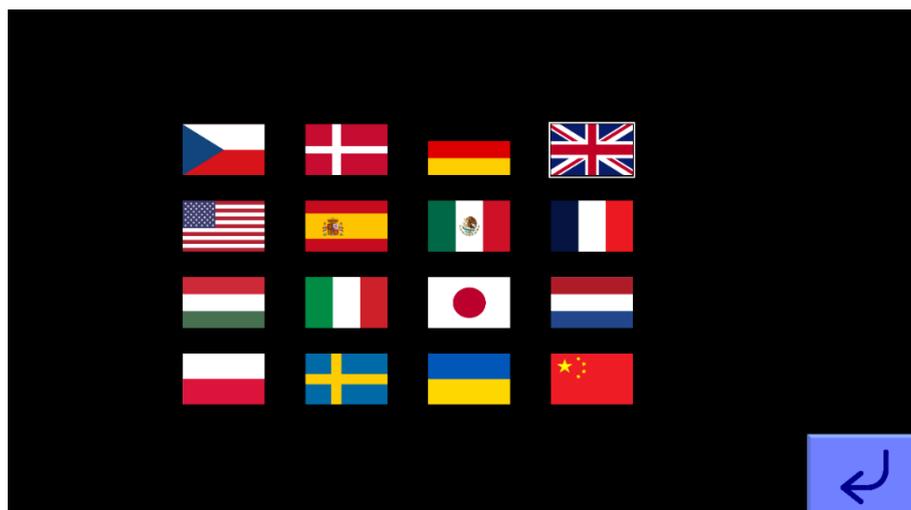

Adjust camera allocation

This tool adjusts the order in which cameras appear on the working screen so that for example the left-hand thumbnail corresponds to the camera on the left of the implement. Alternatively, cameras can be swapped mechanically.

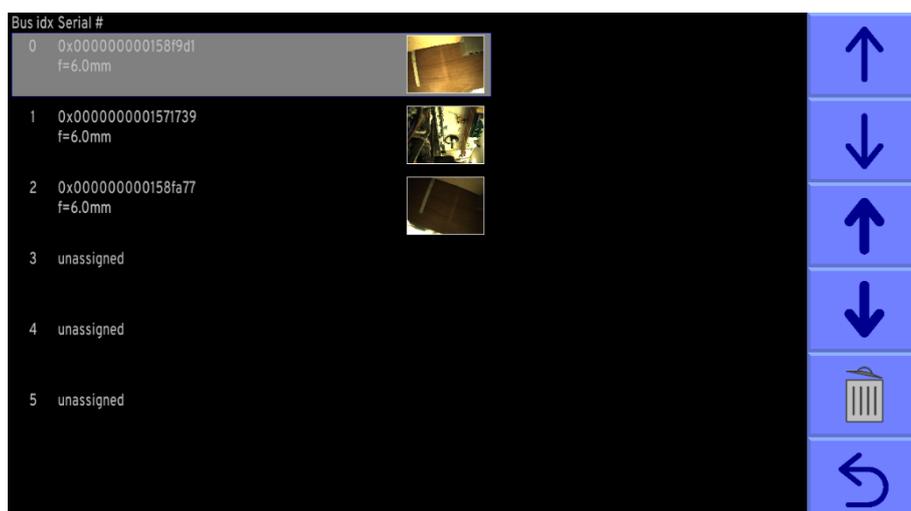

Camera order from top to bottom in the tool relates to the order in which cameras will be displayed in the working screen from left to right. The tool displays bus index, camera serial number, lens type and a live image thumbnail for camera identification.

Thin arrow buttons on the right-hand side are used to select the camera that you wish to rearrange. Thick arrows adjust the of order of the selected camera.

The bin symbol allows for the selected camera to be deleted from the list.


Once correct camera order has been established the return arrow can be pressed to return to the service menu.

View archived logs


This is a list of one line error messages that have been deleted or overflowed from the error log.

View Hardware map

This tool lists all connected microcontroller boards and accessory CAN devices. The address IDs for each connected component can also be viewed to ensure that the address you have intended for each component is correct.

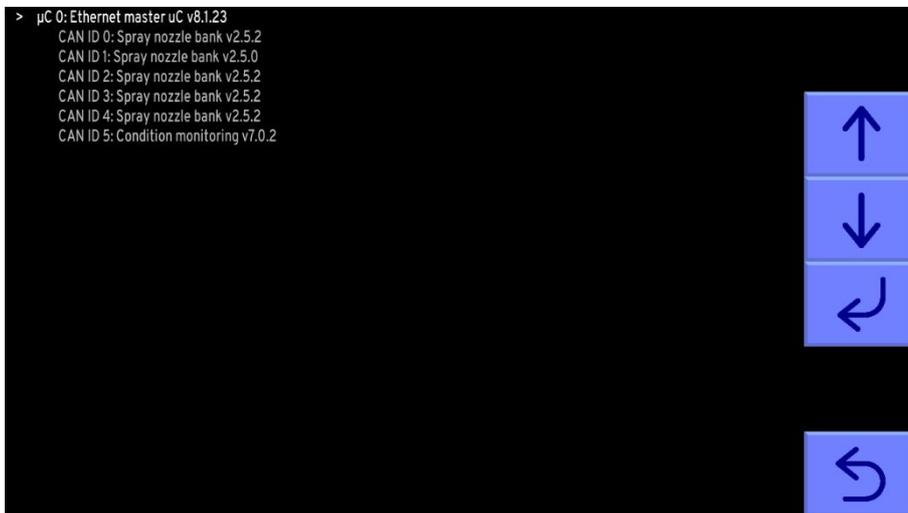

Use the arrow keys to select a board (the text will change in colour/brightness) and then touch the return button to get live board information such as setup information, communication status and input and output values.

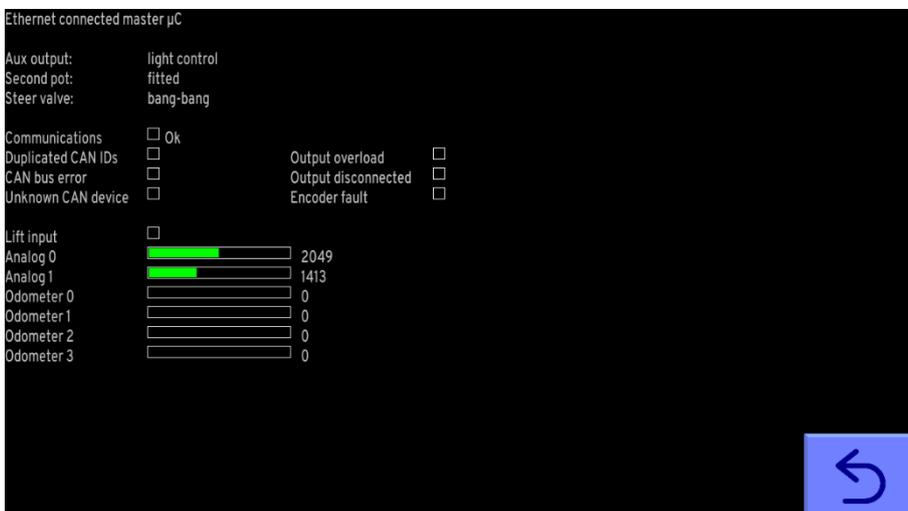

View installed software


Lists software loaded e.g. inter-row guidance along with version number.

Remove software

This is a function for removing unwanted modes of operation e.g. after selling a demonstration system you may wish to remove demo mode. However, it is very rarely required and should never be selected unless you are absolutely sure you want to delete software permanently.


Reset PIN

To reset the PIN the old access code must be entered (factory default = 1,2,3,4). If the old code has been lost contact us to for reset instructions.

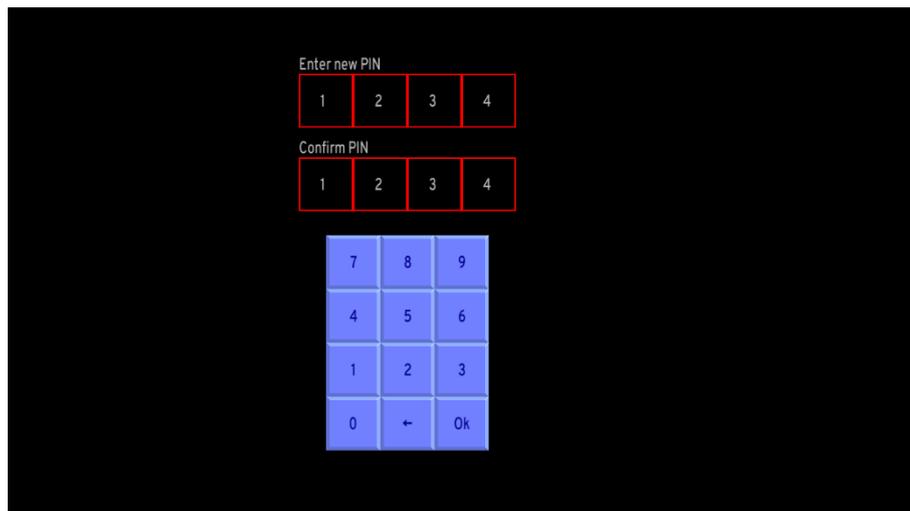

Add product key

This last feature in the list facilitates the activation of additional software or functions. Please [contact Tillett and Hague](#) when using this facility with your unique hardware id (shown top left) for your selected console. A unique product key for the console can then be generated by Tillett and Hague and entered to activate the additional capability.

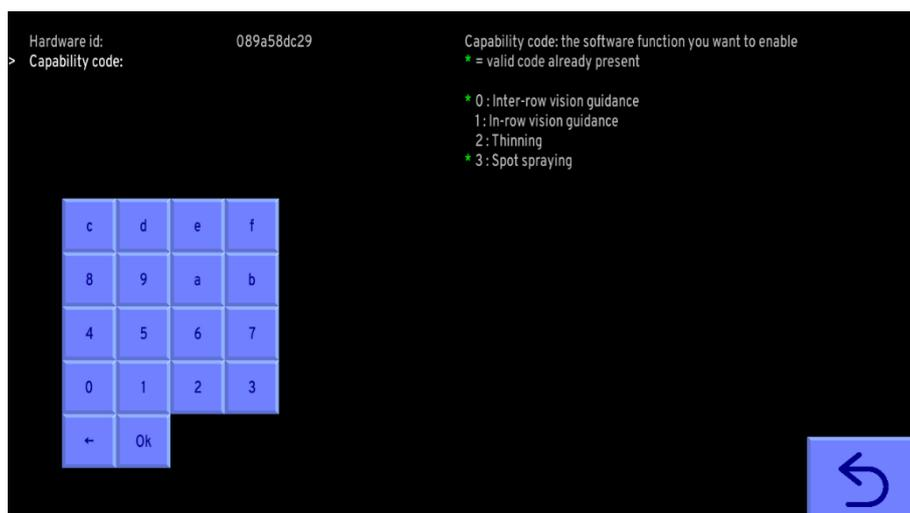

12. Maintenance and Storage

Please follow the maintenance and storage instructions below in order to ensure your precision guided implement stays in first class working order

1. Regularly check the routing of hoses and cables and protect against chaffing
2. Check both coarse and fine spray system filters for clogging
3. Although all components are designed to be shower proof we recommend that the console is housed in a dry environment and that the implement is not exposed to wet weather for extended periods when not in use
4. Always ensure the correct 20 amp fuse is fitted in the power supply
5. **Always ensure the correct supply polarity is adhered to.**
BLUE = - negative, BROWN (fused side) = + positive
6. Always ensure power is supplied from a supply that is appropriately fused (10 - 20 amp).

13. Trouble shooting

LED blink codes

As an aid to fault finding most system components are fitted with LEDs whose mode of illumination can provide information on system status and any error conditions.

Console front panel button LED

Under normal conditions with 12V power connected via the implement module, but with the console switched off the front panel LED gives a very brief single blink at 5 second intervals. When switched on and running normally the LED is illuminated continuously.

Other patterns of illumination indicate error conditions that use the following codes:

- Single 0.2 s blink followed by 1 s off indicates The ITX board has failed to start up
- Two three or four 0.2 s blinks followed by 1 s off indicate different touch screen errors.

Implement module

The implement module has a green LED fitted near the power lead entry gland. It is not illuminated at all when the system is powered down. For about 10 s on initial start-up it is continuously on indicating that it is waiting for CAN devices to register. It will then normally go into a period of slow blinks (1.6 s on 1.6 s off) on a continuous cycle indicating that the system is ready, but idle, with no demands coming from the console via Ethernet. This state will continue until the working screen is displayed and crop row tracking has commenced. Once demands are received from the console a rapid (0.2 s on 0.2 s off) continuous blink cycle starts indicating Ethernet data is being transferred. The LED will revert to a slow blink on entry to the set up screens or configuration editor.

Other patterns of illumination indicate error conditions that use the following codes:

- Single 0.2 s blink followed by 1 s off indicates 2 devices found with the same CAN address
- Two 0.2 s blinks (i.e. 0.2s on 0.2s off 0.2s on) followed by 1 s off indicates too many CAN errors to operate
- Three 0.2 s blinks followed by 1 s off indicates a component is connected that does not conform to known types.
- Four 0.2 s blinks followed by 1 s off indicates the valve over current trip is active, possibly due to steer valve output short circuit
- Five 0.2 s blinks followed by 1 s off indicates open circuit on a steer valve output

Condition monitoring board

Condition monitoring boards are fitted with one green LED. These boards are normally housed with hydraulic rotor boards.

The green LED is continuously illuminated in an idle state and flashes 50% on 50% off at 2Hz when running normally. It blinks briefly at 2Hz indicating an error condition caused by the power supply to the proximity detectors being short circuit.

Manual and Feeler modules (Inter-row only)

Both these modules contain a microcontroller board that has one green LED and four red LEDs that can be viewed by removing the lid.

The green LED is continuously illuminated in an idle state and flashes 50% on 50% off at 2Hz when running normally. It blinks briefly at 2Hz if the power supply to the proximity detectors is short circuit.

The red LEDs are illuminated with their corresponding inputs.

Fault codes (as displayed in error messages and the error log)

These numeric fault codes can provide more specific information than the written description displayed on the screen. Make a note of these codes when reporting errors.

cttnn **c=class, tt= 2 digit type, nn= channel/index**

0xxxx internal software error codes

00100 state/covariance dimension error
00200 variance sign error
00300 other numeric error

1xxxx camera error codes

101xx excess skew
10300 no port found
10400 no devices at all
10500 just the adaptor
106xx some devices, but no cameras found
107xx Unsupported camera
108xx Initialisation failure
109xx can't start capture
110xx can't start video transmission
111xx can't work out GUID assignments
112xx Timeout on a particular camera
11300 no data from ANY camera
11400 camera connection too slow

2xxxx Implement module uc error codes

201xx the device you want is not found
202xx timeout on data receive
203xx timeout on diag receive
204xx missing sync in packet
205xx checksum wrong
206xx received data packet not what we asked for
207xx other data format error
20800 no uCs at all
209xx Excessive number of CAN bus errors
210xx More than one device set to same ID
211xx Unrecognised CAN device
212xx Valve output overload

3xxxx Rotor error codes

301xx No rotors present
302xx Rotor index sensor fault
303xx Rotor overheat RHS
304xx Rotor overheat LHS
305xx Overheat - rotor CPU
306xx Rotor overload
307xx Rotor Hall effect sensor fault
308xx Tractor (12V) battery voltage low
309xx Rotor overload in braking.
310xx Rotor CPU timeout (Should not be seen)
311xx Lost sync, +12V power interruption?

4xxxx Other hardware error codes

40100 Odometer consistently seems wrong
40200 Pot error
40300 CPU fan alarm
40400 CPU Thermal alarm

5xxxx Operator errors

50100 Going too fast!

6xxxx Condition monitoring errors

60100 Sensor/wiring short circuit
60200 Hydraulic pressure low
60300 Hydraulic tank return pressure high
60400 Reverse oil flow
60500 Hydraulic overheat (>70C)
60600 Hydraulic filter blocked

7xxxx Spray system faults

70100 Spray pressure low
70200 No flow detected
70300 Leakage detected
70400 Missing pressure sensor / wiring fault
70500 Nozzle blocked

8xxxx Actuator board errors

80100 Low valve supply voltage
80200 Output overload
80300 Valve not connected

9xxxx CAN connect errors


90100 Can't load dll
90200 Missing symbols in dll
90300 Can't communicate with CAN bridge
90400 Firmware file missing
90500 Error in firmware (.ihx) file
90600 Flash write failed

Flow Charts


Problems have been divided into four categories listed below. Select the most appropriate category and work through the flow chart. Please consult your dealer for any other problems.

1. Console fails to start up correctly
2. Console shows a working screen but the side shift/steered discs do not respond correctly
3. All systems appear to be functioning and the steering test passes but lateral positioning performance is poor
4. Lateral positioning is good but spray timing along the row is inaccurate


1. Console fails to start up correctly

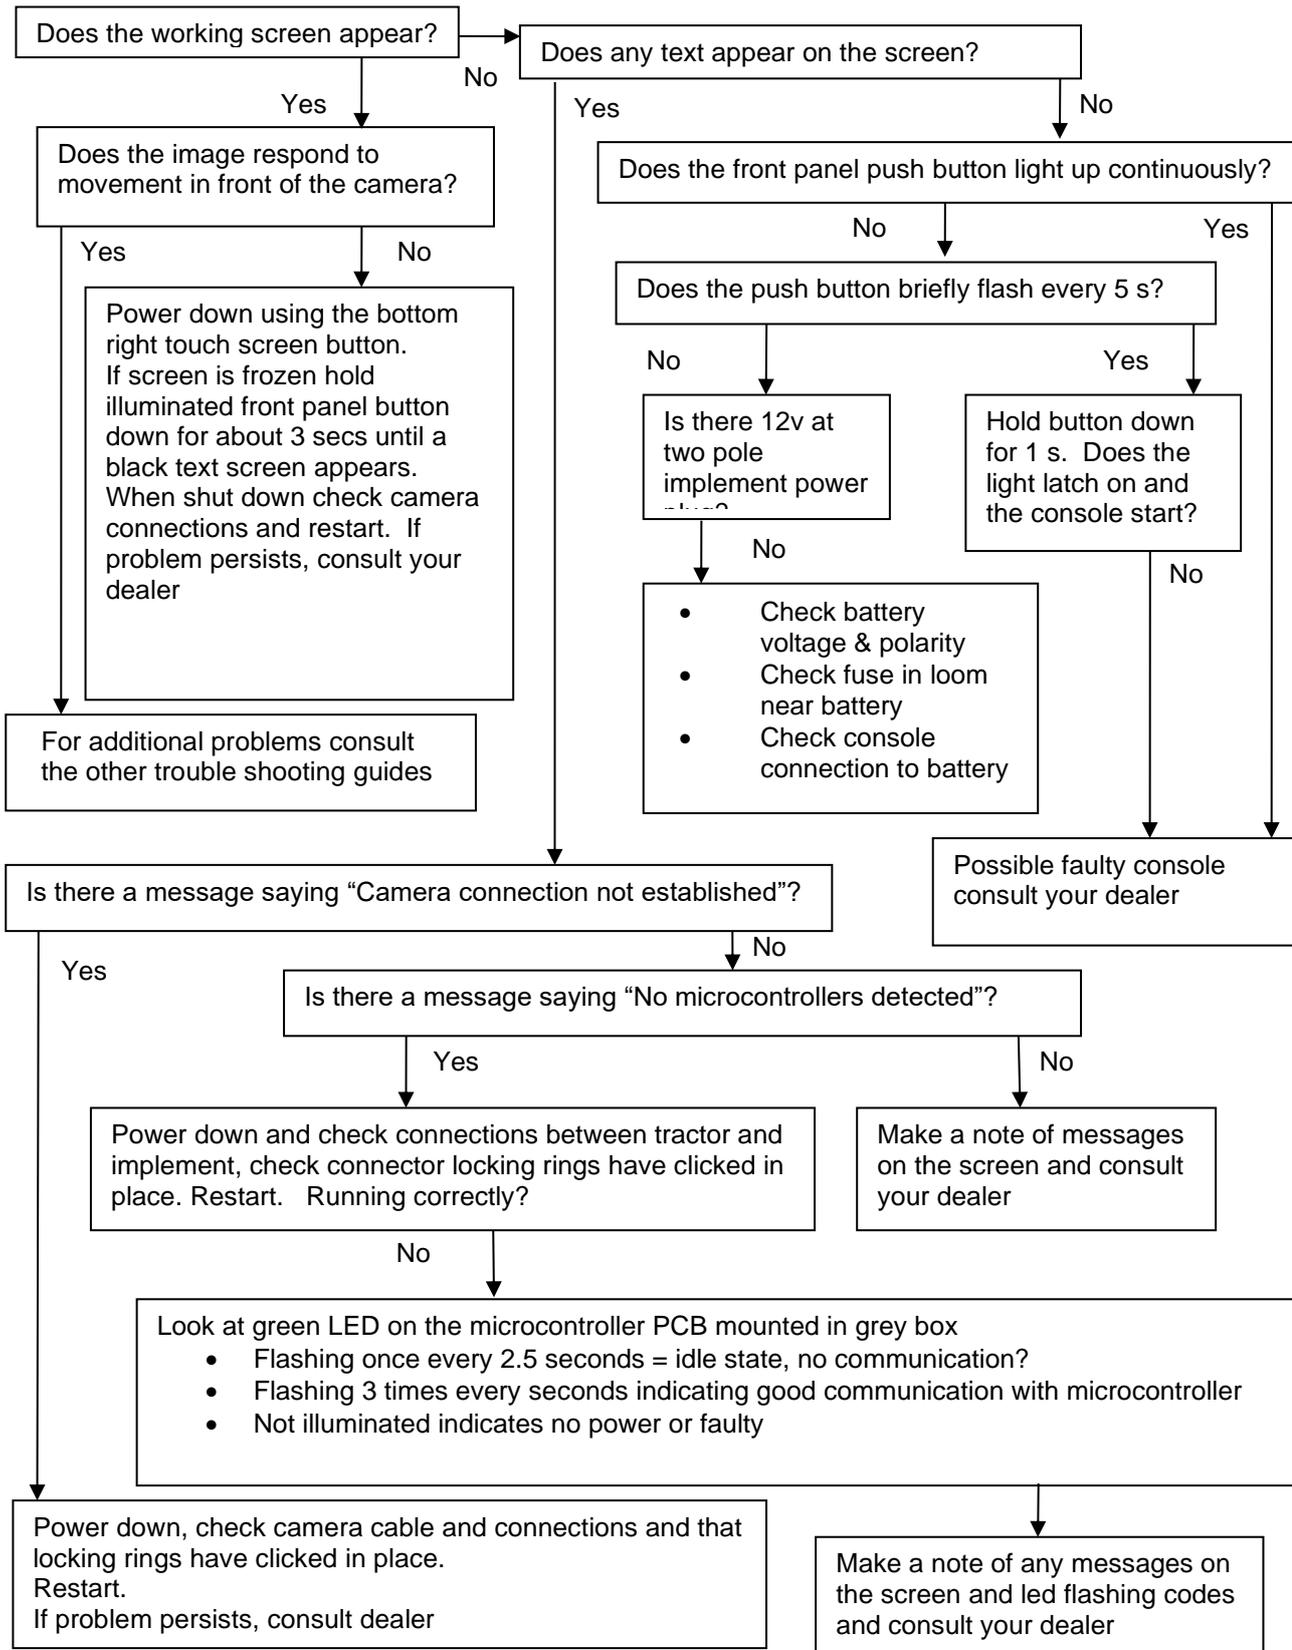


2. Console shows a working screen but the side shift/steered discs do not respond

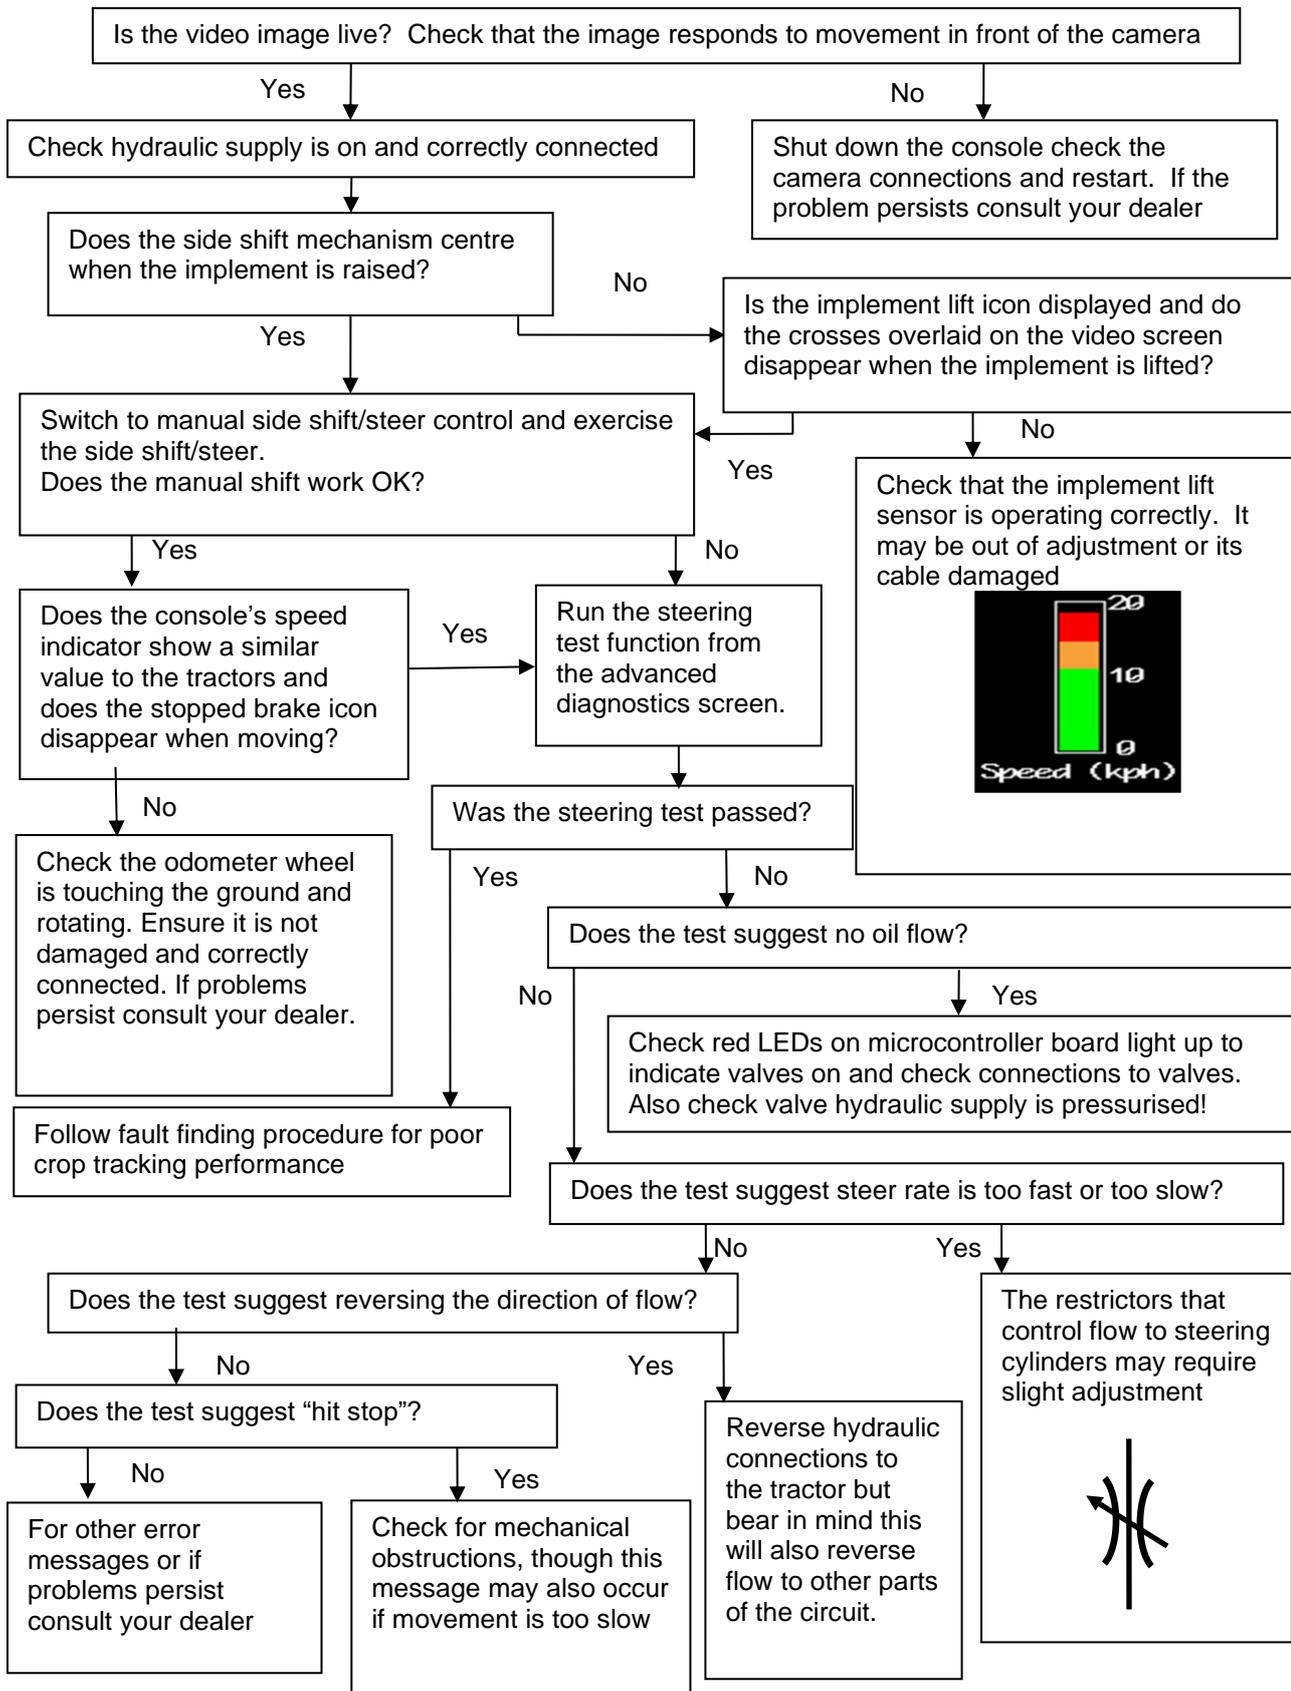

3. All systems appear to be functioning and the steering test passes but lateral positioning performance is poor

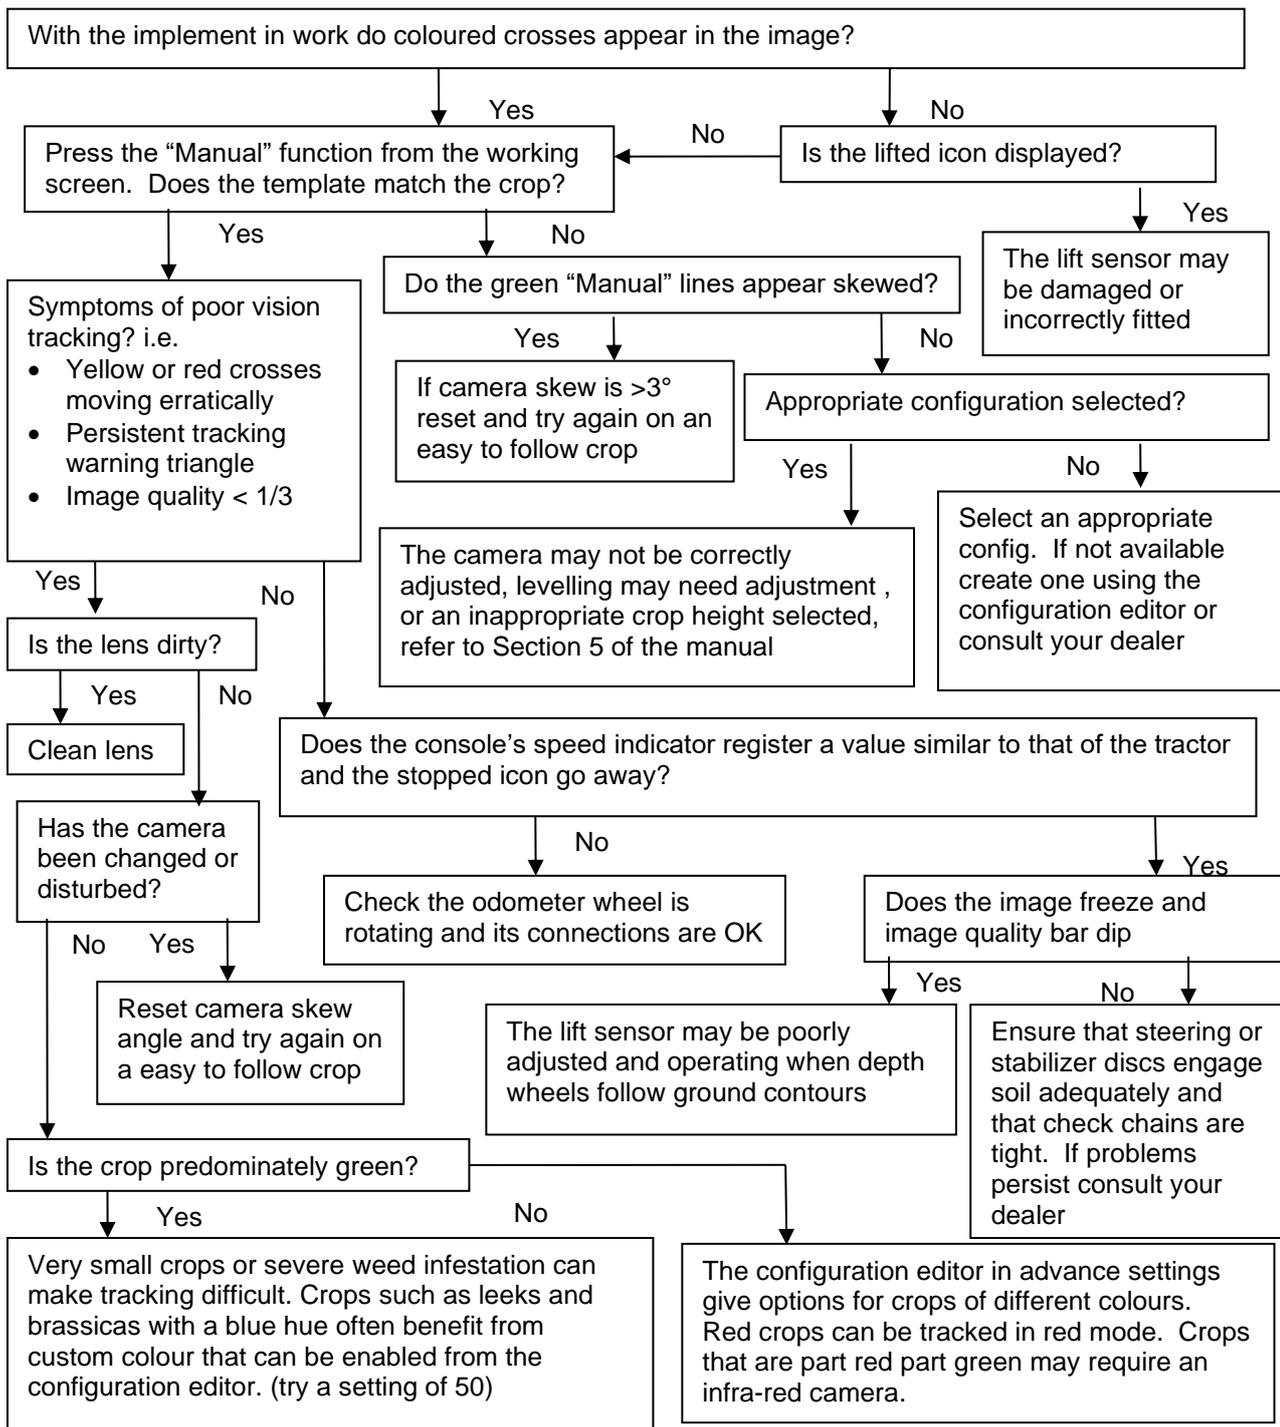

4. Lateral positioning is good but spray timing along the row is inaccurate

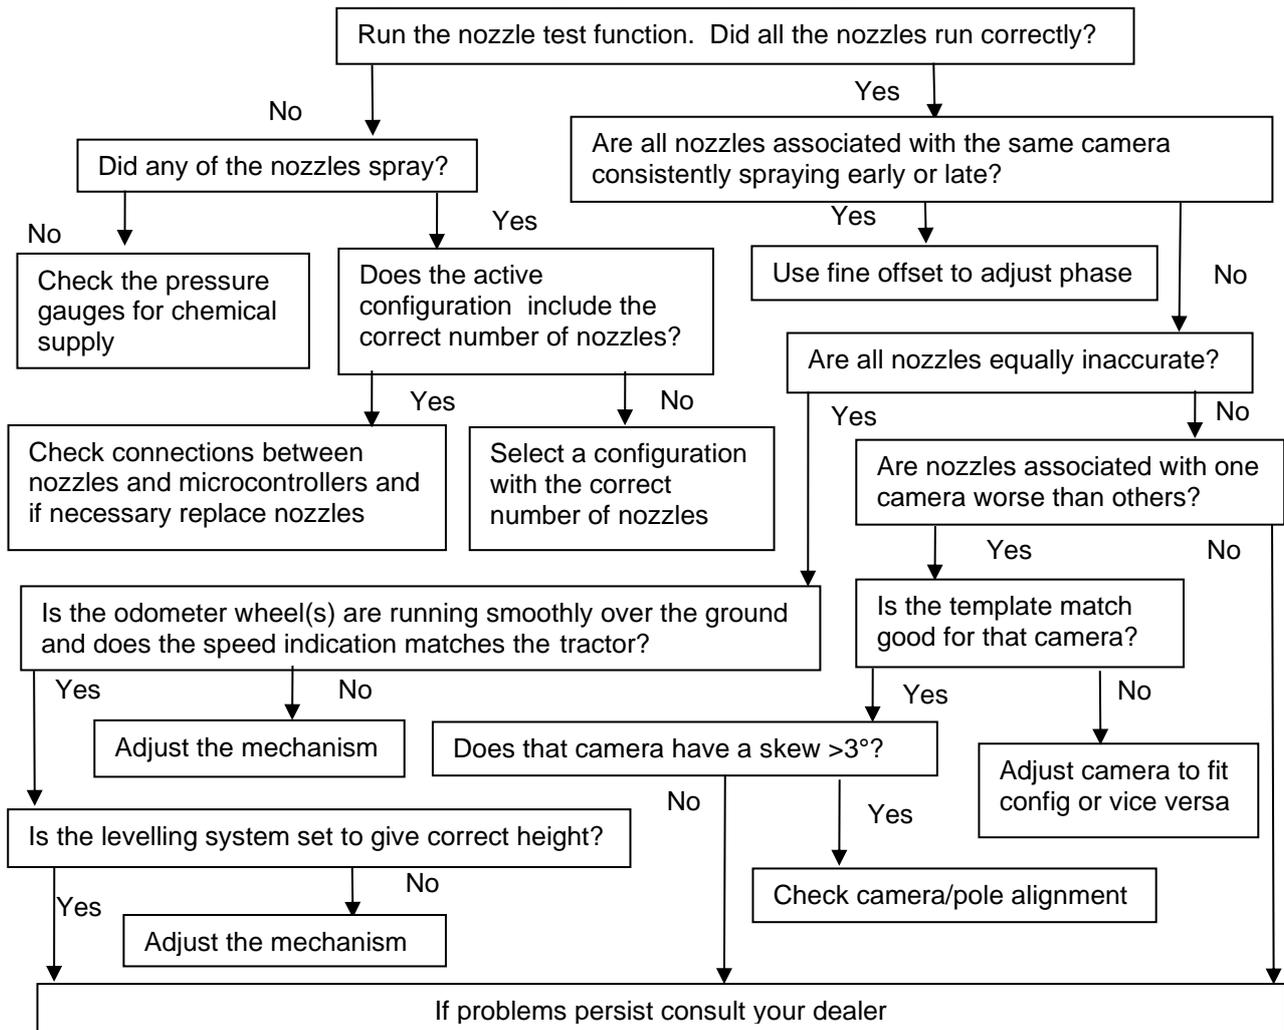

Index

A

Actuation Delay.....	78
Adjusting	
Camera Allocation.....	81
Camera Angle.....	26,38,47,49,63
Camera Fore Aft.....	47,56
Camera Height.....	26,38,47,49,63
Camera Lateral Position.....	52
Colour settings.....	32
Coverage.....	38,53
Crop width.....	37,53
Fine offset.....	34,49,52,54,56
ISOBUS Hitch Setpoint.....	25,43
Row Boundary.....	37,38,53
Steering.....	40,45,52,62,74,Annex
Target Size.....	38,53
Adjusting Camera Allocation.....	81
Advanced Configuration Editor.....	72
Additional General Settings.....	72
Additional Section Settings.....	73
Additional Camera Settings.....	74
Nozzle Settings.....	75,78
Optional Features.....	78
Advanced Settings and Diagnostics Screen.....	39
Ahead of Nozzles by.....	38,47,56,63
Audible Warnings.....	33,41
Apply Update.....	80
Associated Nozzles.....	34,54,65,75

B

Back Pressure.....	40,45,87,Annex
Backup Files.....	79
Banks.....	67,75
Battery Connection.....	6,14,24,27,33,84
Blink Codes.....	85
Blue Crops.....	32
Boundary.....	38,53

C

Cable Connections.....	7,13
Camera	
Adjustment.....	26,38,47,49,56,63
Camera Allocation.....	81
Skew.....	39,50
Connection.....	12
Cabling.....	13
Fault Codes.....	86
Mounting.....	26,38,47,49,56,63
Offset.....	40,50
CANbus Connections.....	14,18,21,29,33,40
CANbus Devices.....	21,29,33,40,46,53,65,67,75
CAN bridge.....	11,28,43,87
Capture Images to USB Device.....	80

Calibrate Steering.....	40,45
Channels	
Nozzle.....	25,40,54,65,75,78
Odometer.....	25,61,73
Pressure Sensors.....	30,33,67,87
Colour Choice.....	32
Colour Settings.....	32
Console	
Fault Codes.....	86
Front Panel Indicator.....	85
User Screens.....	31,37,39
Configuration Editor.....	59
Condition Monitoring.....	22,30,33,40,67,87,Annex
Control Deadband.....	74
Coverage.....	34,38,39,53
Crop Height.....	37,48
Crop Row Boundary.....	38,53
Crop Width.....	37,53
Custom Colour.....	32
D	
Damping.....	74
Defaults.....	59
Delay	
Spray.....	78
Diagnostics	
Advanced Settings and Diagnostics Screen.....	39
Service Menu.....	79
Blink Codes.....	85
Fault Codes.....	86
Flashcodes.....	85
Flowcharts.....	88
ISOBUS.....	43
Dimensions	
Camera.....	12,26,38,47,63
Console.....	10,26
Condition Monitoring.....	22,30
Implement Module.....	25
Nozzles.....	21,29,47,56,63,65,75
Opto-isolated Dump Output Board.....	23,30
DIP switches.....	28,29,30,45,Annex
Disc Steering.....	62,74
Distance Ahead of Nozzles	38,47,56,63
Distance Ahead of Rear Axle.....	73
Distance Behind Rear Axle.....	73
E	
Edit Configurations.....	59
Electrical System	
12V.....	6,14,24,27,33,84
Electronics	
Components.....	10
Installation.....	25,29
Error Codes.....	86
Error log.....	42,82

Extension Cable	
Camera.....	13
CAN.....	18
Console.....	13
Lights.....	19
Power.....	14
F	
Fault Codes.....	86
Field Work.....	52,53,58
Fine Offset.....	34,49,52,56,78
Fine Offset Flip.....	34,42
Flow Charts.....	88
Flush Nozzles.....	41,46
Free Lateral Movement.....	26
Front Hitch Position.....	25,42,73
G	
General Operation.....	58
General Safety.....	24
General Warnings.....	33
H	
Hardware ID.....	83
Hardware Map.....	82
Height Control.....	17,26,46
Hilly Terrain.....	41,58
Hitch Setpoint.....	25,42
Hitch Position Input.....	25,42,73
Holding Drive Level.....	78
Hydraulic Assembly.....	23,26,Annex
Hydraulic Requirements.....	6,40,45,Annex
I	
Image Quality.....	32
Implement Levelling.....	17,26,46
Implement Module	
Connections.....	7,8,10,25,Annex
Flash Codes.....	85
Functions.....	10,11,12
In-Field Camera Setup.....	48,50,56
In-Field Setup.....	48
Information Screens.....	31,37,39
Input Output Information.....	82
Installation.....	25
Interrow Working.....	35,52
Introduction.....	4
ISOBUS	
Address.....	43
Connections.....	8,11,14,28,43
Diagnostics.....	43
Ground speed.....	25,43,61,73
Hitch Position.....	25,42
Hitch Setpoint.....	25,42
Lift input source.....	25,42,73
Live Information.....	43

Odometer source.....	25,43,61,73
Wheel speed.....	25,43,61,73
K	
Keyboard.....	60
L	
Language Selection.....	81
Latch Pulse Duration.....	78
Latching Drive Level.....	78
Lateral Camera Position.....	26,52
Leakage Test.....	33,40
Levelling Implement.....	17,26,46
Lights.....	19,28,33,46
Live Board Status.....	82
Look Ahead.....	26,38,47,49,63
M	
Maintenance.....	84
Manual Mode.....	34,35,41,45,50
Mapping Output Channels.....	65,75
Mapping Pressure Inputs.....	67
Microcontroller Status.....	82,85
Minimum Target Size.....	38,53
Mounting Components.....	25,29
Mounting Nozzles.....	29
Multiple Row Widths.....	64
N	
Neutralizing Fine Offsets	
Fore/Aft.....	56
Lateral.....	52
Night Operation Lights.....	19,28,33,46
Nozzle	
Bank.....	67,75,Annex
Channels.....	29,40,54,65,75,78
Drive and Timing.....	78
Flush.....	41,46
Mounting.....	29
Spacing.....	29,66,75
Tests.....	40,46
Used.....	66,75
O	
Odometer Channels.....	25,61,73
Odometer Input Selection.....	61,73
Odometer Scale.....	72
Odometry Setup.....	25,61,73
Offset	
Camera Offset.....	40,50,52
Configurations.....	62,74
Fine Offset.....	34,52,56,78
Flip.....	34,42
Fore/Aft.....	34,56,78
Gauge.....	34
Neutralisation.....	52,56

Optional Features.....	78
Opto-Isolated Input/Output Board.....	23,30
Overview.....	7
P	
Peak Travel.....	62
Position Input.....	18,19,25,33,62
Pot Centre.....	62,74
Potentiometer Scale.....	62
Potentiometer.....	18,19,25,33,62
Power Requirements	
12V.....	6,14,24,27,33,84
Pressure Sensors.....	22,30,67,87,Annex
Product Key.....	83
Proportional Steering.....	23,40,45,74,Annex
Proximity Sensor.....	17,25
Pulse Duration.....	78
R	
Rear Hitch Position.....	25,42,73
Reducing Lateral Free Play.....	26
Return Pressure.....	40,45,Annex
Reverse Oil Flow.....	40,45,Annex
Rotary Position Sensor.....	20,62
Row Boundary.....	38,53
Row Spacings.....	38,49,64
S	
Safety.....	24
Schematics.....	Annex
Section Settings.....	61,73
Sensor Inputs.....	8,16,19,25,30,32,62,67,72
Service Menu.....	79
Setup Screen.....	37
Side Slope Compensation.....	41
Skew.....	39
Soft Row Boundary.....	38,53
Speedometer.....	25,34,78
Stabiliser Links.....	26
Steering Parameters.....	62,74
Steering Calibration.....	40,45
Steer Valve.....	15,23,26,33,40,45,74 Annex
Spray	
Bank.....	29,40,54,67,75,Annex
Bar.....	29,40,54,67,75,Annex
Coverage.....	34,38,39,53
Delay.....	78
Margin.....	34,38,53
Nozzles.....	21,29,40,54,66,75,78 Annex
Pattern Length.....	65
Pattern Width.....	65
Pressure Monitoring.....	22,30,33,67,87,Annex
Width.....	65
Split Mode.....	65,75,Annex

Symbols.....	33
System Information and Diagnostics Page.....	39
System Overview.....	7
System Schematic.....	7,Annex
T	
Test	
Implement.....	40,45,46,52,53
Nozzles.....	40,46,54
Steering.....	40,45,52,62,74
Timing.....	54,78
Tractor Connections.....	7,14,24,26,28,33,43,84
Travel Speed Sensors.....	16,20,25,33,61,73,78
U	
Units Adjustment.....	39,60
USB	
Backup.....	79
Restore.....	79
Update.....	80
User Fine Steps.....	78
V	
Valve Calibration.....	40,45,74
Valve Output.....	15,23,26,33,40,45,74, Annex
Valve Parameters.....	40,45,74
View Archived Logs.....	42,82
View Hardware Map.....	82
W	
Warning Symbols.....	33
Warning Codes.....	42,82,86
Warnings Sounder.....	33,41
Weed Area.....	34,38,39,53
Weed Colour.....	32
Work Position Sensor.....	16,25,33,44,73

Annex

Hydraulic systems

The hydraulic system required to operate a side shift or disc steer system is conceptually a simple one involving a single directional control valve to meter hydraulic oil into either side of a hydraulic cylinder. However, there is often a need for additional components to control the rate of oil flow such as variable restrictors and pressure regulators.


A diverse range of tractor hydraulic power systems introduces further considerations when designing implement hydraulics.

This note is not intended as a comprehensive design tutorial, rather it is a guide to the more common arrangements and a discussion of some of the issues.

It is usually cost effective for implement manufacturers to provide their own hydraulic systems suited to their own requirements. However, if required Tillett and Hague technology can supply basic hydraulic systems as part of a complete guidance and control package.

We will start by considering tractor hydraulic PTO systems. These can broadly be categorised as “open centre” or “closed centre/load sensing”. Open centre systems are generally found on older, or budget tractors, where the oil is supplied from a gear pump at a rate that is proportional only to engine RPM. For these systems an “open centre” directional control valve is preferred in which its centre position provides an unobstructed return path for the oil back to the tank.


Open centre valve

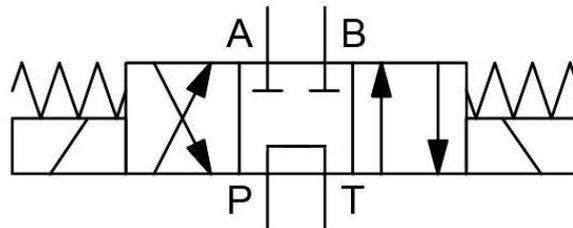

If a “closed centre valve is used in which the ports are closed in the central position, then oil will be forced to return to the tank via a pressure relieve valve (the tractors own valve is normally set just above 200 bar). This is inefficient and can create large amounts of heat which may damage both tractor and implement.

Tractors with some type of load sensing system maintain a low pressure on standby and only develop full system pressure when flow is detected. These systems can use “closed centre valves”, where the pressure line is blocked in the valves centre position.

Closed centre valve

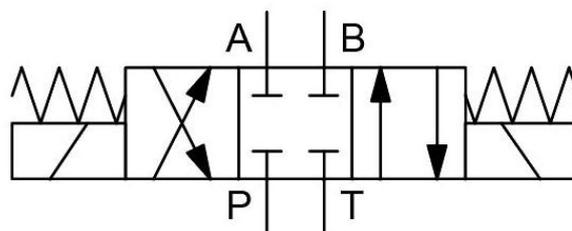


One advantage of closed centre valves is that it is possible to put additional valves in parallel on the same hydraulic circuit. This can be useful when the implement also features automatic levelling, or tine raising, but it is inconvenient to supply each of these services from its own independent tractor spool.

It is also possible to operate multiple closed centre valves with a tractor equipped only with a gear pump and no load sensing, but it requires an additional dump valve. That valve is arranged to be normally open so that tractor oil is returned to tank with little pressure drop when none of the valves are operated. The dump valve must be wired in such a way that it closes when any of the other control valve operates, leaving them with full system pressure and flow. Tillett and Hague can provide a circuit board with multiple optically isolated inputs which are logically "OR"ed to a dump valve output for this purpose.


In some tractors it is possible to regulate the maximum flow on each spool independently. Exceptionally this may be sufficient to control the rate at which the steering cylinder moves to the desired target of approximately 0.1m/s. However, because the steering cylinders are normally small in diameter, the required volumetric rate is often lower than the minimum offered by the tractor. Furthermore, the two sides of the steering cylinder often have different areas requiring different flow rates in each direction to achieve the same linear speed. To regulate steering rate it is normal to fit variable restrictors on the output to each side of the cylinder.

It is not uncommon for variable restrictors to be almost fully closed to achieve the required steering rate. This makes setting very sensitive to small adjustments and to oil temperature. It can be advantageous to reduce the pressure across the restrictors with a pressure regulator, enabling them to operate with larger orifices thus reducing their sensitivity. This also has the effect of reducing the force generated by the steering cylinder, which is not normally a problem as steering forces need not be high.

A typical circuit, as provided in the Tillett and Hague valve block assembly, is given below showing how all these components might be used in a hydraulic circuit.

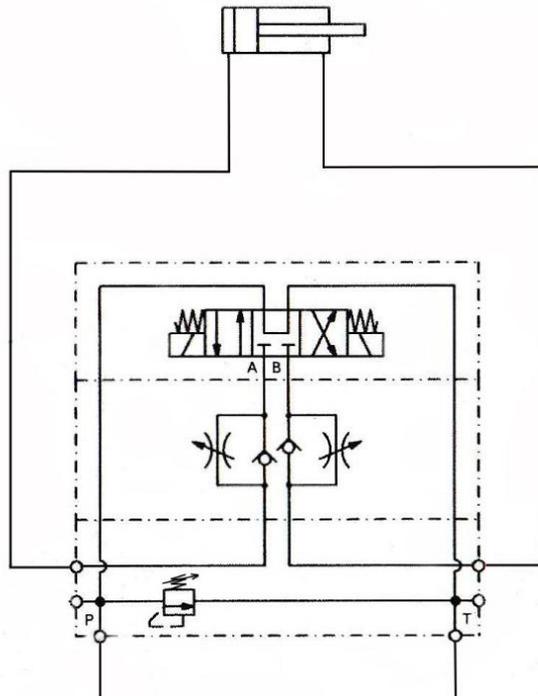

Proportional closed centre valve

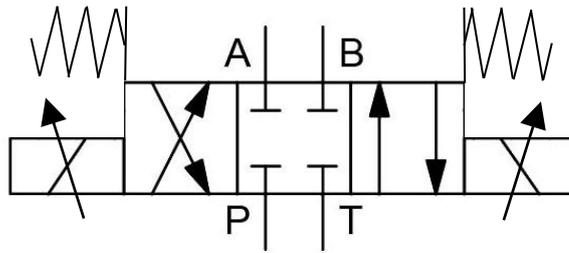


For proportional steering control requires a closed centre circuit design. Fine internal tolerances in proportional control valves require an in-line pressure filter to be fitted. To activate the proportional control option DIP switch number 1 must be switched UP to the ON position, as shown below (BOX006 DIP switch show) :



Control system parameters relating to proportional control can be found in the configuration editor in [Section 10.3](#). Valve characteristic curve parameter may need to be adjusted to suit chosen valve.

The typical circuit for the Tillett and Hague proportional directional valve block assembly shown below. Note early guidance system did not support proportional hydraulic valves so if retrofitting please consult with Tillett and Hague Technology.

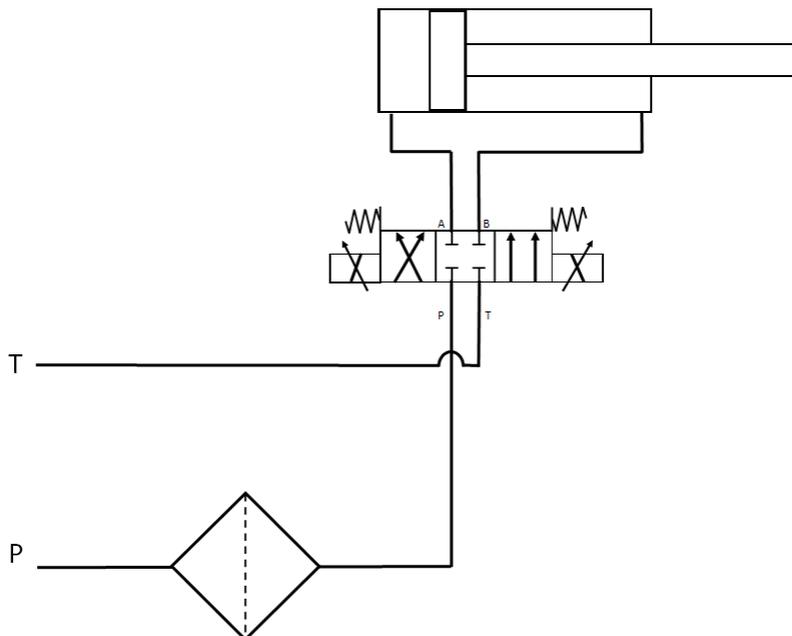


Standard directional control valve setup:

Connect the test point pressure gauge and, after checking that the hydraulic cylinder is safe to operate, turn on the tractor oil supply. The pressure gauge should read zero as the oil is passing unrestricted through the open centre directional valve. Arrange for the directional valve to operate so that the cylinder moves fully to one end of its stroke. The pressure should increase to the value set by the pressure reducer, normally 20 to 40 bar is sufficient. If required, this can be adjusted by loosening the 17mm locking nut and making the adjustment with a 4mm Allen key. If you are using the control system to operate the valve it will switch off once the desired position has been reached, so you may need an assistant to view the pressure gauge whilst the valve is operated, and the cylinder is moving.

If you reverse the direction of operation of the directional valve the cylinder will move to the other end of its stroke. Use the corresponding flow control (needle) valve knob to control the rate of movement. A speed of 0.1m/s is normally a satisfactory starting point but can be adjusted later. Keep reversing the direction of flow and adjusting the two flow control knobs until speed is satisfactory in both directions. If you find that the flow control adjustment is too sensitive, you can try further reducing operating pressure using the pressure reducing valve.

Once you are happy with the pressure you can remove the test point gauge.

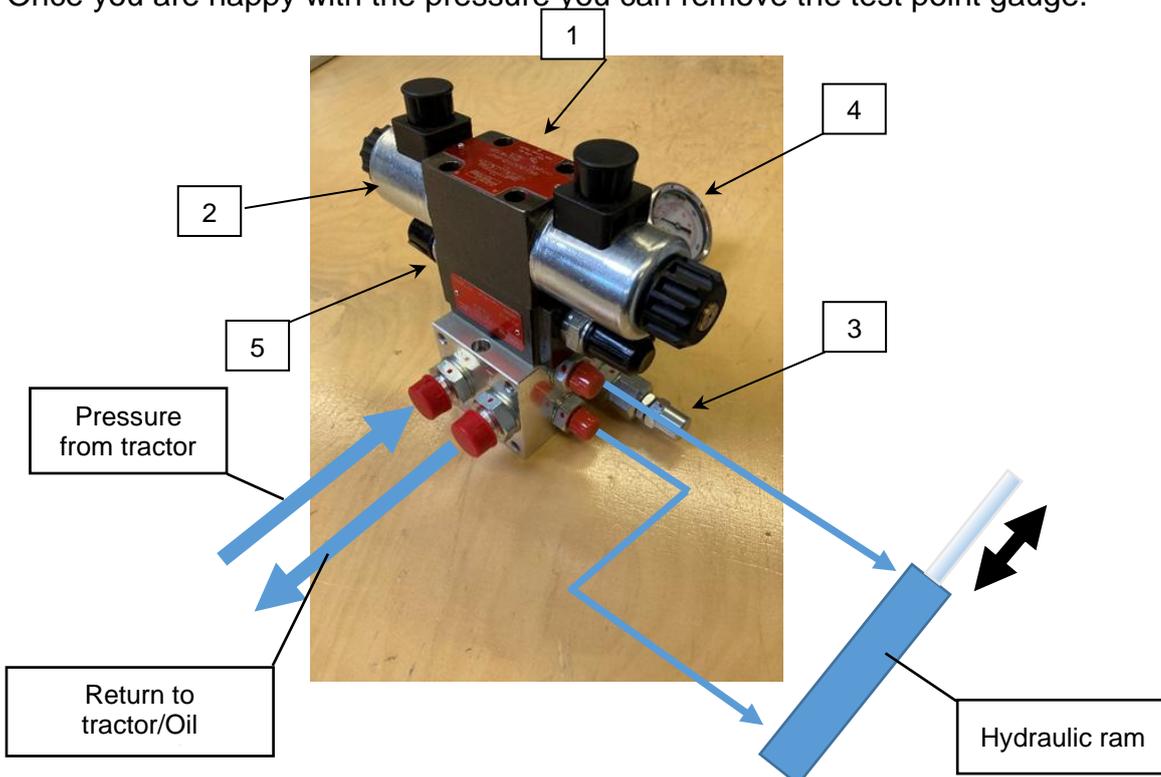

	Part Name	Part Function
1	Directional control valve	Open centre directional control valve used for diverting flow of oil
2	12V solenoid coil	Activates valve to direct oil flow
3	Pressure Reducer adjuster and locking nut	Used to set operating pressure
4	Test point gauge	Used to measure operating pressure, (only required for setup and not routine running)
5	Flow control valve	Used for setting flow rate to left and right steering functions independently

Proportional hydraulic system setup:

Check that the hydraulic cylinder is safe to operate and turn on the tractor oil supply. Run the steering test from the System information & diagnostics page and it will automatically adjust the control parameters to achieve the target side shift rate entered in the configuration. The default is 0.1 m/s.

Hydraulic fault finding:

The advanced settings and diagnostics page include a steering test which can be helpful in diagnosing hydraulic problems. If in doubt, run this simple test. It will interactively ask you which direction is left, and which is right, show if the hydraulic supply is connected the wrong way around or is believed to be inversed, if the flow rate is too high, or too low. The test also attempts to diagnose faulty position sensors by detecting irregular output signals, or a mechanical jam for which you get the message “Hit stop”. The “Hit stop” message can also be triggered by hydraulic issues such as entrapped air, or low flow rates.


Accessory hydraulic functions:

When utilising other hydraulic functions such as machine levelling, centre/retract these can be added onto the hydraulic circuit and their flow and pressure requirements will need to be considered to ensure correct operation of all functions within the circuit. If use of an open circuit design is to be employed, the use of appropriately set flow dividers or a “dump” valve may be required.

Closed circuit design can also be used for control of services but may not be energy efficient if not combined with a closed centre supply.

Hydraulic rotor function does require use of a closed centre hydraulic circuit design due to the proportional control required for hydraulic rotors, so a closed centre supply is recommended for efficiency and heat reasons. Variable demand of oil flow required by hydraulic rotors may require the integration of a hydraulic accumulator within the circuit design to reduce pressure fluctuations caused through changing demand of flow. Due to the tight tolerances associated with proportional control valves, adequate oil filtration methods must be employed.

Spot Sprayer Schematic ISOBUS

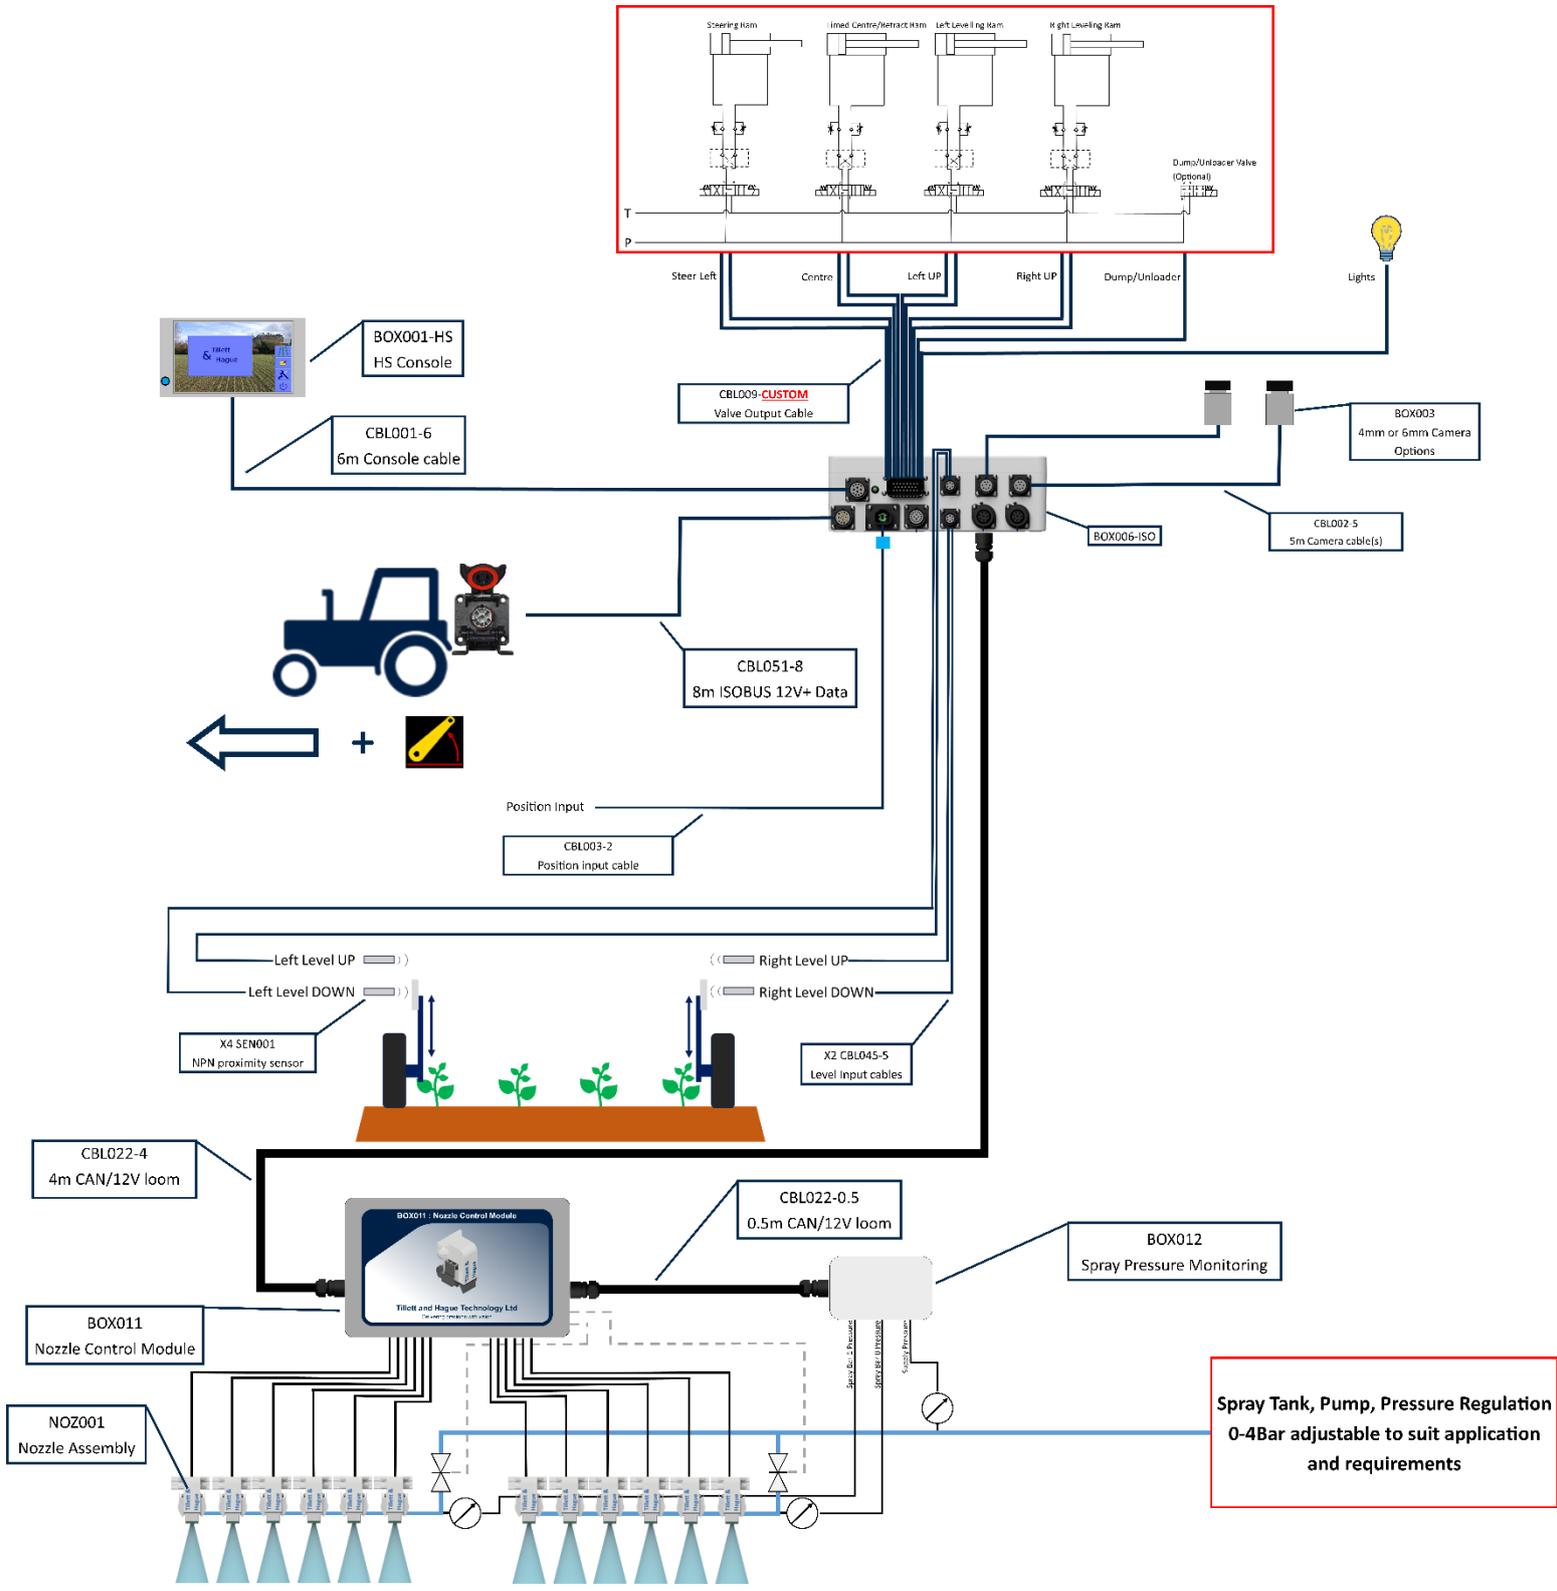


Microcontroller board connections and dip switch settings


Master board 2 Lift / Lift+Fold DIP switch settings

If you wish to connect two lift inputs to BOX006 there are different modes of operation that can be set up through arrangement of the DIP switches (Switches 5 and/or 6) on the microcontroller. The lift status operation as shown in the table below:

Mode	Lift Channel 1	Lift Channel 2	Lift Status	DIP Switch Settings
2 Lift				
Lift + Fold				
Lift + Fold				
Lift + Fold				
Lift + Fold				

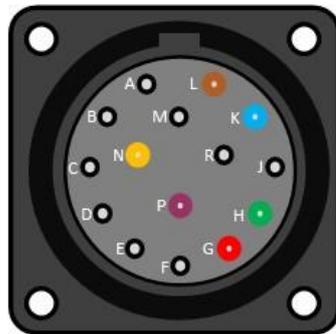


BOX006	
PIN	Function
G	12V
J	I/P Lift Channel 1
K	GND
L	12V
N	I/P Lift Channel 2
P	GND

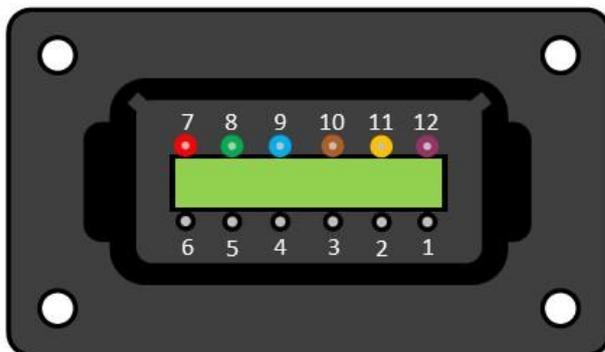

BOX006-XC2	
PIN	Function
7	12V
8	I/P Lift Channel 1
9	GND
10	12V
11	I/P Lift Channel 2
12	GND

Nozzle Output Board PCB005


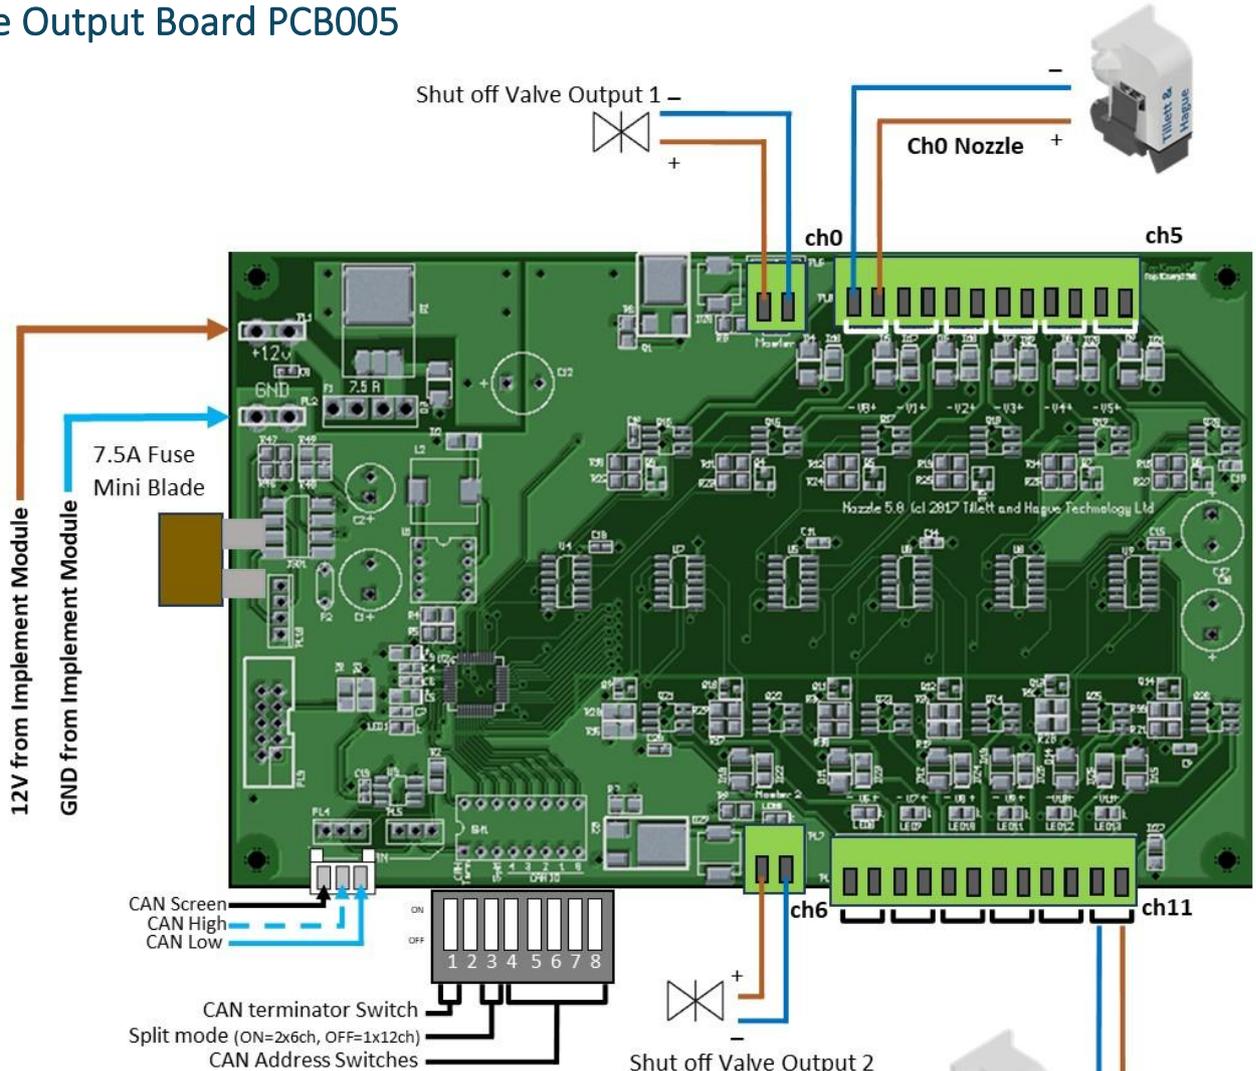


Note:

When running nozzle board in "Split" mode shutoff valve outputs will operate separately, Master 1 when channels 0->5 operate, Master 2 when channels 6-11 operate. And two successive CAN IDs are assigned to a single nozzle board.

Identification Switches					CAN ID Generated
ID 4	ID 3	ID 2	ID 1	ID 0	
OFF	OFF	OFF	OFF	OFF	0
OFF	OFF	OFF	OFF	ON	1
OFF	OFF	OFF	ON	OFF	2
OFF	OFF	OFF	ON	ON	3
OFF	OFF	ON	OFF	OFF	4
OFF	OFF	ON	OFF	ON	5
OFF	OFF	ON	ON	OFF	6
OFF	OFF	ON	ON	ON	7
OFF	ON	OFF	OFF	OFF	8
OFF	ON	OFF	OFF	ON	9
OFF	ON	OFF	ON	OFF	10
OFF	ON	OFF	ON	ON	11
OFF	ON	ON	OFF	OFF	12
OFF	ON	ON	OFF	ON	13
OFF	ON	ON	ON	OFF	14
OFF	ON	ON	ON	ON	15
ON	OFF	OFF	OFF	OFF	16
ON	OFF	OFF	OFF	ON	17
ON	OFF	OFF	ON	OFF	18
ON	OFF	OFF	ON	ON	19
ON	OFF	ON	OFF	OFF	20
ON	OFF	ON	OFF	ON	21
ON	OFF	ON	ON	OFF	22
ON	OFF	ON	ON	ON	23
ON	ON	OFF	OFF	OFF	24
ON	ON	OFF	OFF	ON	25
ON	ON	OFF	ON	OFF	26
ON	ON	OFF	ON	ON	27
ON	ON	ON	OFF	OFF	28
ON	ON	ON	OFF	ON	29
ON	ON	ON	ON	OFF	30
ON	ON	ON	ON	ON	31

Condition Monitoring Board PCB006

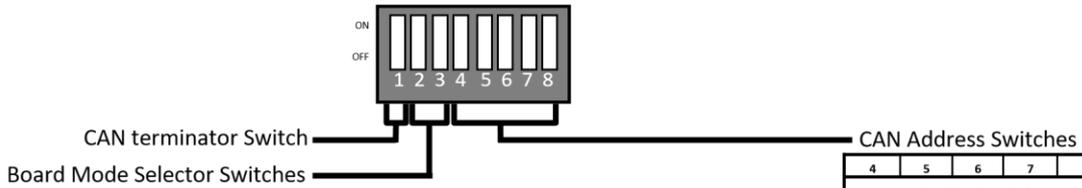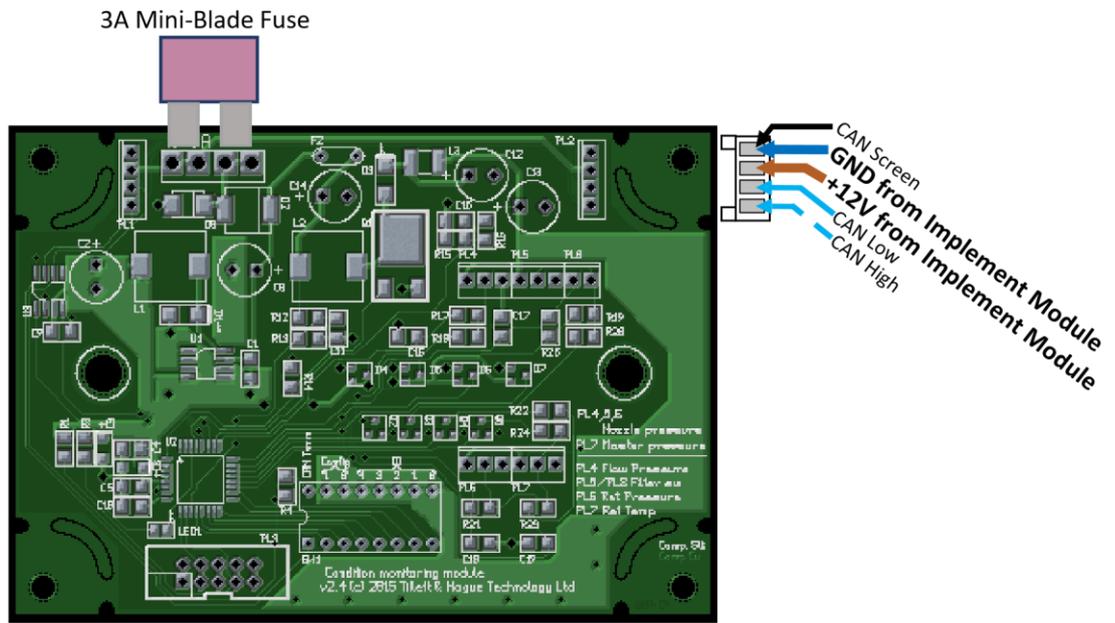

Mode Switches		Mode Generated	Mode Operation	Input Functions				
Config 1	Config 0			PL4	PL5	PL6	PL7	PL8
OFF	OFF	0	Hydraulic Monitoring	Flow Pressure	N/C	Return Pressure	Return Temperature	Filter Blockage Sensor
OFF	ON	1	Spray Monitoring	Nozzle Pressure CH0	Nozzle Pressure CH1	Nozzle Pressure CH2	Master/Supply Pressure	N/C
ON	OFF	2	No Function	-	-	-	-	-
ON	ON	3	No Function	-	-	-	-	-

Hydraulic Sensors	Flow Pressure	0-250Bar range, 0-5V sensor output, 15V Supply
	Return Pressure	0-250Bar range, 0-5V sensor output, 15V Supply
	Filter Blockage	NO switch contact
Spray Sensors	Nozzle Pressure	0-4 bar range, 4-20mA sensor output, 15V supply
	Master Pressure	0-4 bar range, 4-20mA sensor output, 15V supply

Identification Switches					CAN ID Generated
ID 4	ID 3	ID 2	ID 1	ID 0	
OFF	OFF	OFF	OFF	OFF	0
OFF	OFF	OFF	OFF	ON	1
OFF	OFF	OFF	ON	OFF	2
OFF	OFF	OFF	ON	ON	3
OFF	OFF	ON	OFF	OFF	4
OFF	OFF	ON	OFF	ON	5
OFF	OFF	ON	ON	OFF	6
OFF	OFF	ON	ON	ON	7
OFF	ON	OFF	OFF	OFF	8
OFF	ON	OFF	OFF	ON	9
OFF	ON	OFF	ON	OFF	10
OFF	ON	OFF	ON	ON	11
OFF	ON	ON	OFF	OFF	12
OFF	ON	ON	OFF	ON	13
OFF	ON	ON	ON	OFF	14
OFF	ON	ON	ON	ON	15
ON	OFF	OFF	OFF	OFF	16
ON	OFF	OFF	OFF	ON	17
ON	OFF	OFF	ON	OFF	18
ON	OFF	OFF	ON	ON	19
ON	OFF	ON	OFF	OFF	20
ON	OFF	ON	OFF	ON	21
ON	OFF	ON	ON	OFF	22
ON	ON	OFF	OFF	OFF	23
ON	ON	OFF	OFF	ON	24
ON	ON	OFF	ON	OFF	25
ON	ON	OFF	ON	ON	26
ON	ON	ON	OFF	ON	27
ON	ON	ON	OFF	OFF	28
ON	ON	ON	OFF	ON	29
ON	ON	ON	ON	OFF	30
ON	ON	ON	ON	ON	31